



1 - Main Housing	LX6.0-001	15 - Spool Spring Washer (2 req.)	LX6.0-015	31 - Dog	LX6.0-031	46- Drive Washer	LX6.0-046	59- Knob Washer (optional)	LX6.0-058	74- Lower Rod Mount	LX6.0-074
2 - Gear cover	LX6.0-002	16 - Spool Spring	LX6.0-016	32 - Dog Cover Screw (2 req.)	LX6.0-032	47- Preset Washer	LX6.0-047	60- Spring Washer	LX6.0-060	75- Rod Mount Nut	LX6.0-075
3 - Cover Screw (2 req.)	LX6.0-003	17 - Brake Bearing	LX6.0-017	33 - Dog Cover	LX6.0-033	48- Preset Spring	LX6.0-048	61- Lock Washer	LX6.0-061	76- MC ASSY :	LX6.0-076
4 - Spool Shaft	LX6.0-004	18 - Brake Disk	LX6.0-018	34 - Stop Pin (2 req.)	LX6.0-034	49- Preset Knob	LX6.0-049	62- Nut	LX6.0-062		
4A-Shaft Shoulder	LX6.0-004A	20 - Antireverse Gear	LX6.0-020	35 - Pin Screw (2 req.)	LX6.0-035	49a- Preset Knob Detent (2 req.)	LX6.0-049a	63- Knob Cap	LX6.0-063	A- MC Knob	
4B-Shaft Pin	LX6.0-004B	21 - Retainer Ring	LX6.0-021	36 - Handle Knob	LX6.0-036	50 - Crank Arm	LX6.0-050	64- Knob Cap Screw (2 req.)	LX6.0-064	B- MC Scrow	
5 - Belleville Washers (6 req.)	LX6.0-005	22 - Pinion Gear	LX6.0-022	37 - Knob Screw	LX6.0-037	51 - Crank Arm Washer	LX6.0-051	65- Clicker Pin	LX6.0-065	C- MC Spring	
6 - Pusher Bushing	LX6.0-006	23 - Pinion Bearing	LX6.0-023	38 - End Housing Screw (3 req.)	LX6.0-038	52 - Acorn Nut	LX6.0-052	66- Clicker Housing	LX6.0-066	D- MC Ball	
7 - Spool Bearing	LX6.0-007	24 - Drive Shaft	LX6.0-024	39 - Drive Shaft Tube	LX6.0-039	53 - Locking Plate	LX6.0-053	67- Clicker Washer	LX6.0-067	E- MC Washer	
8 - Spool Tube	LX6.0-008	25 - Connection Arm	LX6.0-025	40 - Drive Shaft Washer	LX6.0-040	54 - Locking Plate Screw (2 req.)	LX6.0-054	68- Clicker Spring (2req.)	LX6.0-068	F- MC Housing	
9 - Clicker Gear Retainer Ring	LX6.0-009	26 - Friction Ring	LX6.0-026	41 - Male Cam	LX6.0-041	55A-Handle Shaft Washer	LX6.0-055A	69- Clicker Arm	LX6.0-069	G- MC Stator	
10- Clicker Gear	LX6.0-010	27 - Friction Washer	LX6.0-027	42 - Male Cam Pin (3 req.)	LX6.0-042	55 - Handle Knob Shaft	LX6.0-055	70- Pin E Clip	LX6.0-070	H- MC Shaft	
11- Spool	LX6.0-011	28 - Drive Shaft Gear	LX6.0-028	43 - Female Cam	LX6.0-043	56 - Handle Shaft Bearing (2 req.)	LX6.0-056	71- Reel Foot	LX6.0-071		
12- Brake Pad	LX6.0-012	29 - Drive Shaft Bearing (2 req.)	LX6.0-029	44 - Lever Arm	LX6.0-044	57 - Handle Knob	LX6.0-057	72- Reel Foot Screw	LX6.0-072		
14- Spool Bearing	LX6.0-014	30 - End Housing	LX6.0-030	45 - Teflon Washer (2 req.)	LX6.0-045	58 - Knob Bearing	LX6.0-058	73- Reel Foot Studs (2 req.)	LX6.0-073		