


# CONVENTIONAL REEL

## SAGLD50-2SPD

\*Please order by parts number, not key number.

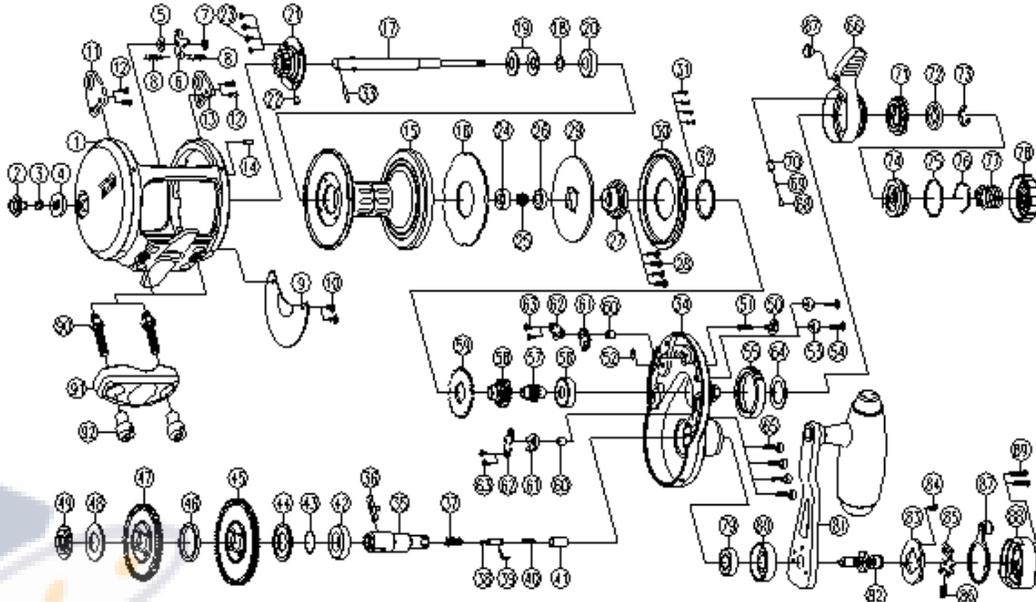

Key No	Part No	Description
1	E73-0201	FRAME
2	E76-0501	CLICK BUTTON
3	E72-5301	CLICK COLLAR
4	E72-5201	CLICK PLATE
5	E61-7402	CLICK BUTTON WASHER
6	E67-9301	CLICK PAWL
7	320-1402	CLICK PAWL RETAINER
8	E73-2201	CLICK SPRING
9	E73-0804	FRAME PLATE
10	F50-5703	FRAME PLATE SCREW
11	E76-1201	HARNES LUG(L)
12	E76-0901	HARNES LUG SCREW
13	E76-1301	HARNES LUG(R)
14	E73-2501	PIN
15	E76-1401	SPOOL
16	E76-1501	DRAG WASHER
17	E73-2901	MAIN SHAFT
18	E73-1001	BEARING WASHER
19	E73-1201	DRAG SPRING WASHER
20	H42-8701	BALL BEARING(A)
21	E73-3301	DRAG CLICK CAP
22	B35-2701	BRAKE COLLAR
23	G29-7001	DRAG CLICK CAP SCREW
24	G53-6001	BALL BEARING(B)
25	E73-6701	SPRING(A)
26	F81-2104	BALL BEARING ( C )
27	E73-6901	DRAG METAL
28	351-1008	DRAG METAL SCREW
29	E73-7102	DRAG PLATE
30	E75-8901	DRAG WASHER COVER
31	E73-7201	DRAG WASHER COVER SCREW
32	E73-1601	PACKING
33	E73-7301	MAIN SHAFT PIN
34	E76-0602	RIGHT SIDE PLATE
35	E73-7401	DRIVE SHAFT
36	E73-7501	DRIVE SHAFT PIN(A)
37	E73-7601	DRIVE SHAFT SPRING(A)
38	E73-7701	DRIVE SHAFT SCREW
39	E73-7801	DRIVE SHAFT PIN(B)
40	E73-8001	DRIVE SHAFT SPRING(B)
41	E73-7901	DRIVE SHAFT COLLAR
42	F64-1602	BALL BEARING(D)
43	E73-8101	DRIVE GEAR COLLAR(A)
44	E73-8601	DRIVE GEAR COLLAR(B)
45	E77-8901	DRIVE GEAR(A)
46	E73-8401	DRIVE GEAR COLLAR(C)

Key No	Part No	Description
47	E73-8501	DRIVE GEAR(B)
48	E73-8601	DRIVE GEAR COLLAR ( D )
49	E73-8701	DRIVE SHAFT NUT
50	E75-9601	PUSH BUTTON
51	E68-6201	PUSH BUTTON SPRING
52	B33-9801	PUSH BUTTON RETAINER
53	E64-4301	DRAG LEVER STOPPER COLLAR
54	E59-1601	DRAG LEVER STOPPER SCREW
55	E75-8201	CLICK GEAR
56	E68-5601	BALL BEARING(E)
57	E77-9001	PINION GEAR(A)
58	E73-8901	PINION GEAR(B)
59	E73-1901	ANTI REVERSE RATCHET
60	E75-9001	ANTI REVERSE PAWL PIN
61	E75-9301	ANTI REVERSE PAWL
62	E76-1101	ANTI REVERSE PAWL RETAINER
63	E64-3802	ANTI REVERSE PAWL SCREW
64	E73-2101	DRAG LEVER WASHER
65	E73-9101	SIDE PLATE SCREW
66	E73-2401	DRAG LEVER
67	E75-9501	DRAG LEVER COLLAR
68	E75-9401	CLICK PAWL
69	M16-3301	CLICK PAWL SPRING
70	E72-8201	CLICK PAWL COLLAR
71	E76-2001	PRESET CAM(A)
72	E73-1101	BUSHING
73	E73-9801	BUSHING RETAINER
74	E73-9001	PRESET CAM(B)
75	E72-9001	O RING
76	E68-4801	CLICK LEAF SPRING
77	H48-4801	DRAG KNOB SPRING
78	E74-0201	PRESET DRAG KNOB
79	G52-2801	BALL BEARING(F)
80	E75-9701	HANDLE CAP(A)
81	E76-5801	HANDLE ASSEMBLY
82	E76-1601	HANDLE SCREW
83	H42-6101	HANDLE PLATE
84	350-8912	HANDLE PLATE SCREW
85	H42-6301	HANDLE LEVER PLATE
86	H42-6201	HANDLE LEVER PLATE SPRING
87	H42-6401	HANDLE LEVER
88	H56-2103	HANDLE CAP(B)
89	G04-0815	HANDLE CAP SCREW
90	E74-2003	CLAMP BOLT
91	J01-4404	ROD CLAMP
92	H60-0801	CLAMP NUT