




SEAGATE HYPER 3500

Feel Alive.

Please quote by part number, not key number when ordering.
spares@daiwaaustralia.com.au PH: (02) 8644 8644

SEAGATE HYPER
3500

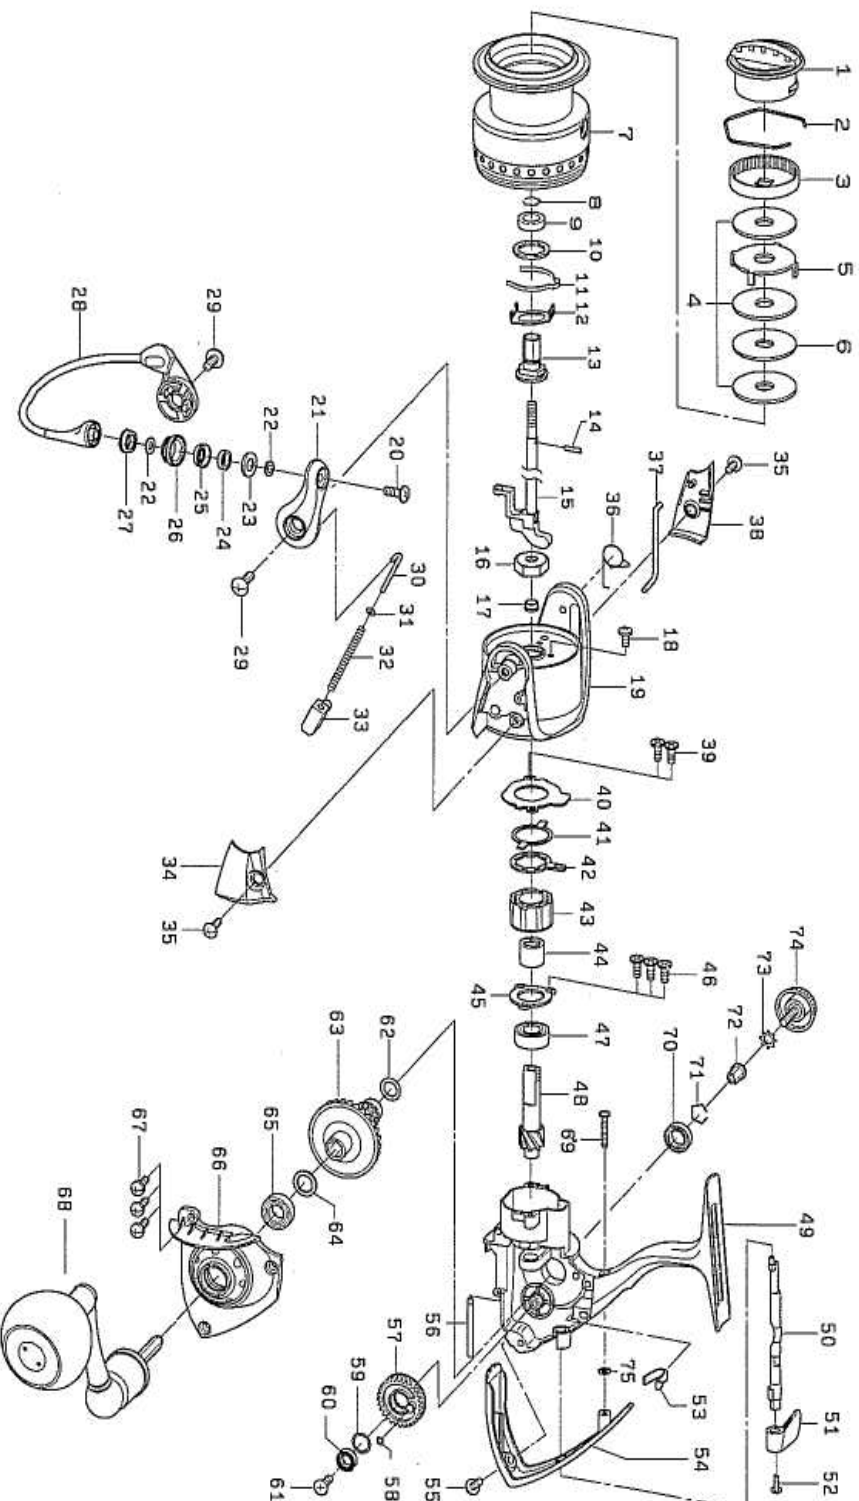

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
SEAGATE HYPER 3500		1	6H970501	DRAG KNOB
SEAGATE HYPER 3500		2	6F710001	DRAG WASHER RETAINER
SEAGATE HYPER 3500		3	6F895302	DRAG KNOB CLICK PLATE
SEAGATE HYPER 3500		4	6F627101	DRAG WASHER
SEAGATE HYPER 3500		5	6F627301	EARED WASHER
SEAGATE HYPER 3500		6	6F644701	KEY WASHER
SEAGATE HYPER 3500		2-7	6H970301	SPOOL ASSEMBLY
SEAGATE HYPER 3500		8	6G525101	BEARING RETAINER(A)
SEAGATE HYPER 3500		9	6G747401	COLLAR (A)
SEAGATE HYPER 3500		10	6F643500	WASHER (A)
SEAGATE HYPER 3500		11	6F709002	SPOOL CLICK LEAF SPRING
SEAGATE HYPER 3500		12	6G694001	CLICK LEAF SPRING HOLDER
SEAGATE HYPER 3500		13	6G642301	SPOOL METAL
SEAGATE HYPER 3500		14	6F643601	PIN
SEAGATE HYPER 3500		15	6G849201	MAIN SHAFT
SEAGATE HYPER 3500		16	6G743801	ROTOR NUT
SEAGATE HYPER 3500		17	6G751201	COLLAR (B)
SEAGATE HYPER 3500		18	6G627701	SCREW(A)
SEAGATE HYPER 3500		19	6G646125	ROTOR
SEAGATE HYPER 3500		20	6G195602	SCREW(B)
SEAGATE HYPER 3500		21	6G612344	BAIL ARM
SEAGATE HYPER 3500		22	6F897101	WASHER (B)
SEAGATE HYPER 3500		23	6H038301	PACKING
SEAGATE HYPER 3500		24	6G281601	BALL BEARING(A)
SEAGATE HYPER 3500		25	6G985401	COLLAR (C)
SEAGATE HYPER 3500		26	6G985301	LINE ROLLER
SEAGATE HYPER 3500		27	6G985201	COLLAR (D)
SEAGATE HYPER 3500		28	6G646404	BAIL ASSEMBLY
SEAGATE HYPER 3500		29	6G205001	SCREW (C)
SEAGATE HYPER 3500		30	6G298201	BAIL SPRING SHAFT
SEAGATE HYPER 3500		31	6E313901	WASHER (C)
SEAGATE HYPER 3500		32	6G646201	BAIL SPRING
SEAGATE HYPER 3500		33	6G612103	BAIL SPRING HOLDER
SEAGATE HYPER 3500		34	6G646301	COVER(A)
SEAGATE HYPER 3500		35	6G270801	SCREW (D)
SEAGATE HYPER 3500		36	6G613101	BAIL TRIP LEVER SPRING
SEAGATE HYPER 3500		37	6G646501	BAIL TRIP LEVER
SEAGATE HYPER 3500		38	6G646601	COVER(B)
SEAGATE HYPER 3500		39	6G557101	SCREW(E)
SEAGATE HYPER 3500		40	6G577401	ROLLER CLUTCH RETAINER
SEAGATE HYPER 3500		41	6F641501	CLUTCH CAM RETAINER
SEAGATE HYPER 3500		42	6F641401	CLUTCH CAM
SEAGATE HYPER 3500		43	6G314501	ROLLER CLUTCH
SEAGATE HYPER 3500		44	6G743001	SPACING SLEEVE
SEAGATE HYPER 3500		45	6G522901	BEARING RETAINER (B)
SEAGATE HYPER 3500		46	6E134509	SCREW(F)
SEAGATE HYPER 3500		47	6G522801	BALL BEARING(B)
SEAGATE HYPER 3500		48	6H219701	PINION GEAR
SEAGATE HYPER 3500		49	6H969801	BODY
SEAGATE HYPER 3500		50	6G742601	ANTI-REVERSE CAM
SEAGATE HYPER 3500		51	6G699422	ANTI-REVERSE LEVER
SEAGATE HYPER 3500		52	6G699501	SCREW(G)
SEAGATE HYPER 3500		53	6G726201	ANTI-REVERSE CAM SPRING
SEAGATE HYPER 3500		54	6G743502	REAR COVER
SEAGATE HYPER 3500		55	6G332704	SCREW(H)
SEAGATE HYPER 3500		56	6G644702	STABILIZER BAR
SEAGATE HYPER 3500		57	6H219601	OSCILLATING GEAR
SEAGATE HYPER 3500		58	6B853101	"O" RING (A)
SEAGATE HYPER 3500		59	6G522100	WASHER (D)
SEAGATE HYPER 3500		60	6G467101	BALL BEARING (C)

