




# SEAGATE HYPER 6000

**Feel Alive.**

Please quote by part number, not key number when ordering.  
[spares@daiwaaustralia.com.au](mailto:spares@daiwaaustralia.com.au) PH: (02) 8644 8644

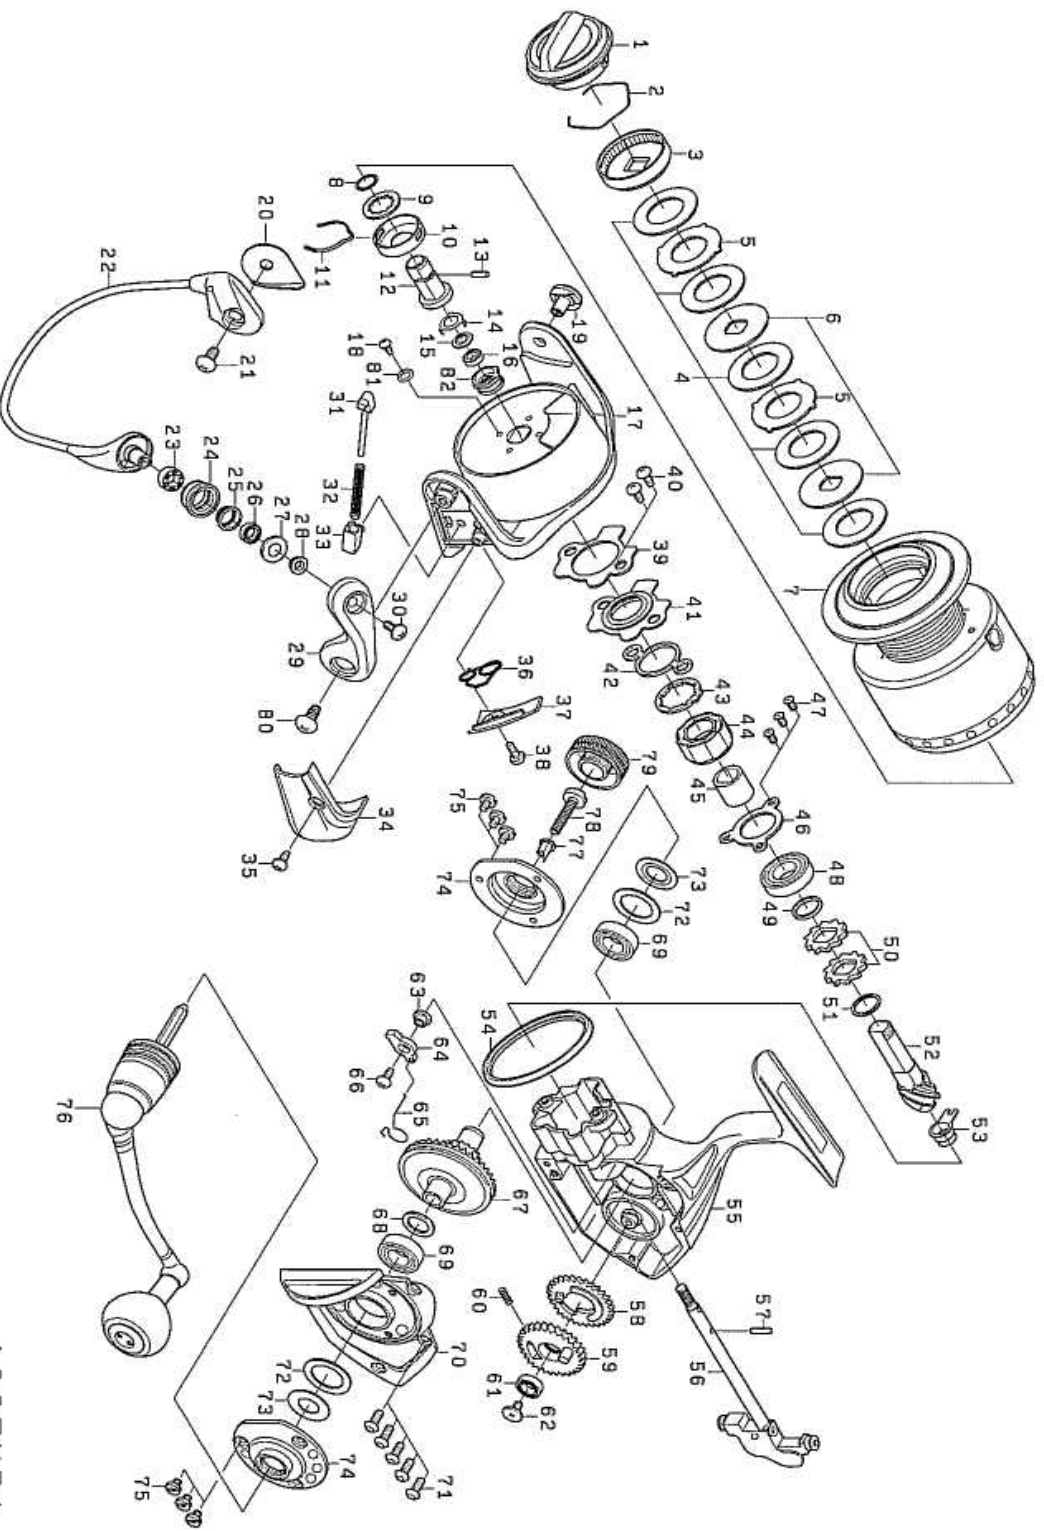

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
SEAGATE HYPER 6000		1	6H972001	DRAG KNOB
SEAGATE HYPER 6000		2	6F710001	DRAG WASHER RETAINER
SEAGATE HYPER 6000		3	6G165602	DRAG KNOB CLICK PLATE
SEAGATE HYPER 6000		4	6H247201	DRAG WASHER
SEAGATE HYPER 6000		5	6G165902	EARED WASHER
SEAGATE HYPER 6000		6	6G162702	DRAG DISC WASHER
SEAGATE HYPER 6000		2-7	6H971801	SPOOL ASSEMBLY
SEAGATE HYPER 6000		8	6G339401	"O" RING
SEAGATE HYPER 6000		9	6G341501	WASHER (A)
SEAGATE HYPER 6000		10	6G341301	CLICK LEAF SPRING HOLDER
SEAGATE HYPER 6000		11	6G341401	SPOOL CLICK LEAF SPRING
SEAGATE HYPER 6000		12	6H378701	SPOOL METAL
SEAGATE HYPER 6000		13	6G339301	PIN(A)
SEAGATE HYPER 6000		14	6H107301	BEARING RETAINER(A)
SEAGATE HYPER 6000		15	6H107201	P A C K I N G(A)
SEAGATE HYPER 6000		16	6G467101	BALL BEARING(A)
SEAGATE HYPER 6000		17	6H324406	ROTOR
SEAGATE HYPER 6000		18	6E492001	SCREW(A)
SEAGATE HYPER 6000		19	6H325002	BAIL HOLDER NUT
SEAGATE HYPER 6000		20	6H324801	PLATE
SEAGATE HYPER 6000		21	63516105	SCREW(B)
SEAGATE HYPER 6000		22	6H365302	BAIL ASSEMBLY
SEAGATE HYPER 6000		23	6H035502	COLLAR (A)
SEAGATE HYPER 6000		24	6H246103	LINE ROLLER
SEAGATE HYPER 6000		25	6G740601	COLLAR (B)
SEAGATE HYPER 6000		26	6G370905	BALL BEARING(B)
SEAGATE HYPER 6000		27	6G740501	PACKING
SEAGATE HYPER 6000		28	6H271201	COLLAR (C)
SEAGATE HYPER 6000		29	6H339604	BAIL ARM
SEAGATE HYPER 6000		30	6F608901	SCREW(C)
SEAGATE HYPER 6000		31	6H324701	BAIL SPRING SHAFT
SEAGATE HYPER 6000		32	6G418101	BAIL SPRING
SEAGATE HYPER 6000		33	6G337501	BAIL SPRING HOLDER
SEAGATE HYPER 6000		34	6H325402	BAIL SPRING COVER
SEAGATE HYPER 6000		35	6G205101	SCREW(D)
SEAGATE HYPER 6000		36	6G337601	ROTOR BRAKE SPRING
SEAGATE HYPER 6000		37	6H324902	ROTOR BRAKE SPRING COVER
SEAGATE HYPER 6000		38	63522510	SCREW(E)
SEAGATE HYPER 6000		39	6H244201	ROLLER CLUTCH RETAINER
SEAGATE HYPER 6000		40	63516101	SCREW(F)
SEAGATE HYPER 6000		41	6H244101	PACKING
SEAGATE HYPER 6000		42	6H244001	CLUTCH CAM RETAINER
SEAGATE HYPER 6000		43	6H247601	CLUTCH CAM
SEAGATE HYPER 6000		44	6G314501	ROLLER CLUTCH
SEAGATE HYPER 6000		45	6H172703	SPACING SLEEVE
SEAGATE HYPER 6000		46	6H244501	BEARING RETAINER(B)
SEAGATE HYPER 6000		47	6G557101	SCREW(G)
SEAGATE HYPER 6000		48	6G472501	BALL BEARING(C)
SEAGATE HYPER 6000		49	6H243901	COLLAR (D)
SEAGATE HYPER 6000		50	6E262701	RATCHET
SEAGATE HYPER 6000		51	6E339701	WASHER (B)
SEAGATE HYPER 6000		52	6H323601	PINION GEAR
SEAGATE HYPER 6000		53	6H323501	COLLAR (E)
SEAGATE HYPER 6000		54	6G337101	BRAKE RING
SEAGATE HYPER 6000		55	6H971201	BODY
SEAGATE HYPER 6000		56	6H437501	MAIN SHAFT
SEAGATE HYPER 6000		57	6G338901	PIN(B)
SEAGATE HYPER 6000		58	6H323101	OSCILLATING GEAR(A)
SEAGATE HYPER 6000		59	6H323001	OSCILLATING GEAR(B)
SEAGATE HYPER 6000		60	6G157401	OSCILLATING GEAR SPRING

