



IT-10a PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	21004082	Mian body	612-3	26120032	Key washer
105	21050012	Pinion bearing fixed bushing	700	27000420	Drive gear
105-1	21056616	Pinion bearing fixed plate	702	27020448	Pin gear
108	21081477	Cap	705	27050153	Transmission gear
118	21180019	Main body ramp	705-1	27050155	Transmission gear
200	22004328	Side plate	708	27080130	Oscillating slider
201	22010519	Main body decoration	716	27160026	Oscillation slider plate
201-1	22010520	Side plate decoration	718	27180726	Main shaft
201-2	22010517	Mian body decoration	719	27190025	Click gear
201-3	22010518	Side plate decoration	722	27220009	Click gear washer
300	23004870	Rotor	725	27250028	Transmission gear bushing
301	23011949	Bail arm	800	28000333	Anti-reverse/anti-re lever
304	23042631	Bail arm cover	800-1	28000402	Anti-reverse/anti-re lever
305	23050162	Kick lever	801	28010024	Anti-re lever spring
306	23061012	Bail holder cover	0910618	0910618	Ball bearing
307	23071555	Bail holder	0910049	0910049	Ball bearing
309	23090033	Bail arm slider	0910039	0910039	Ball bearing
310	23100060	Compression spring	0910335	0910335	Ball bearing
313	23131610	Bail wire assy.	0920386	0920386	Washer
315	23150052	Line roller	0920176	0920176	Washer
316	23160010	Bushing	0920388	0920388	Washer
317	23170024	Line rollerwasher	0920600	0920600	Washer
317-1	23170014	Line rollerwasher	0930433	0930433	Screw
318	23180019	Rotor nut	0930541	0930541	Screw
400	240014469	Spool assy.	0930307	0930307	Screw
405	24050042	Drag washer retainer	0930928	0930928	Screw
407	24070009	Extension spring	0930060	0930060	Screw
500	25005709	Handle assy.	09301326	09301326	Screw
513	25130836	Handle cap	09301327	09301327	Screw
515	25150002	Handle screw cap washer	0930544	0930544	Screw
600	26003234	Drag knob assy.	09301262	09301262	Screw
610	26100011	Drag washer	09301450	09301450	Screw
612	26120006	Key washer	0930431	0930431	Screw
612-1	26120054	Key washer	0930830	0930830	Screw

209OKA09009101