



## Integrity 5/6b PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	31000058	Body assy. (with main shaft)	408	34080014	Spool retainer
102	31020008	Reel foot	409	34090001	Spool retainer spring
111	31110006	Click pawl	410	34100018	Spool cover assy.
117	31170002	Holder plate	413	34130004	Counter balance
209	32090001	Waveform washer	416	34160009	Bearing bushing
300	33000118	Drag knob	420	34200001	Handle knob bushing
304	33040028	Click pawl	910	0910170	One way bearing
310	33100006	Cord drag washer	920	0920033	Washer
310-1	33100012	Cord drag washer	920	0920063	Washer
315	33150006	Disk break	920	0920149	Washer
321	33210006	Main shaft bushing	930	0930009	Screw
340	33400001	Drag washer retainer	930	0930011	Screw
400	34000326	Spool assy.	930	0930077	Screw
400-1	34000308	Spool	930	0930084	Screw
404	34040030	Handle knob	930	0930117	Screw
405	34050008	Handle knob screw	930	09301143	Screw

309OKM01702061