



## SPa-10 PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	21003867	Main body	612	26120054	Key washer
105	21050012	Pinion bearing fixed bushing	612	26120032	Key washer
105	21056616	Pinion bearing fixed plate	700	27000420	Drive gear
108	21081459	Cap	702	27020448	Pin gear
118	21180030	Main body ramp	705	27050153	Transmission gear
200	22003311	Side plate	705	27050155	Transmission gear
201	22010335	Main body decoration	708	27080130	Oscillating slider
201	22010337	Side plate decoration	716	27160026	Oscillation slider plate
201	22010391	Main body decoration	718	27180727	Main shaft
201	22010392	Side plate decoration	719	27190025	Click gear
300	23004815	Rotor	722	27220009	Click gear washer
301	23011900	Bail arm	725	27250028	Transmission gear bushing
304	23042613	Bail arm cover	800	28000333	Anti-reverse/anti-re lever
305	23050162	Kick lever	800	28000402	Anti-reverse/anti-re lever
306	23060998	Bail holder cover	801	28010024	Anti-re lever spring
307	23071475	Bail holder	0910039	0910039	Ball bearing
309	23090033	Bail arm slider	0910618	0910618	Ball bearing
310	23100060	Compression spring	0910049	0910049	Ball bearing
313	23131524	Bail wire assy.	0920388	0920388	Washer
315	23150052	Line roller	0920386	0920386	Washer
316	23160010	Bushing	0920600	0920600	Washer
317	23170024	Line rollerwasher	0930060	0930060	Screw
317	23170014	Line rollerwasher	09301326	09301326	Screw
318	23180019	Rotor nut	09301262	09301262	Screw
400	240014325	Spool assy.	09301327	09301327	Screw
405	24050042	Darg washer retainer	0930307	0930307	Screw
407	24070009	Extension spring	0930431	0930431	Screw
412	24120021	Spool bushing	0930433	0930433	Screw
500	25005180	Handle assy.	0930541	0930541	Screw
515	25150002	Handle screw cap washer	0930544	0930544	Screw
513	25130831	Handle cap	09301450	09301450	Screw
600	26003170	Drag knob assy.	0930830	0930830	Screw
610	26100011	Drag washer	0930928	0930928	Screw
612	26120006	Key washer			

209OKA09001102