



No.	PART NAME	No.	PART NAME	No.	PART NAME	No.	PART NAME
001	Spool Assembly	21	Bail Assembly	44	Body Cover Screw(A)	149	Bail Spring Holder
2	Main Shaft	22	Bail Holder Screw	44	Body Cover Screw(B)	159	Rear Cover
3	Rotor Nut	23	Bearing Plate	44	Body Cover Screw(C)25/30	160	Rear Cover Screw
4	Rotor Washer	25	Ratchet	48	Click Gear	173	Sleeve
5	Rotor Assembly	26	Pinion	56	Drag Assembly	174	One Way Assembly
6	Bail Holder Cover	29	Body	58	Handle Assembly	175	Washer
9	Kick Lever	30	Anti Reverse Cam Spring	60	Oscillating Slider	180	Ball Bearing
13	Bail Spring	31	Anti Reverse Lever	63	Spool Adjust Washer	209	Pinion Collar
14	Arm Lever Cover	35	Anti Reverse Claw Adjust	64	Oscillating Slider Screw	210	Ball
15	Arm Lever Cover Screw	36	Drive Gear	65	Anti Revers Cam	211	Ball Spring
16	Line Slider Screw	37	Oscillating Gear	69	Anti Revers Lever Screw	212	Handle Screw Cap-1
17	Arm Lever	38	Drive Gear Adjust Washer	75	Bearing Plate Screw	213	Handle Screw Cap-2
18	Line Roller Collar	39	Anti Reverse Claw	93	Ball Bearing	226	Collar
19	Line Roller	41	Anti Reverse Claw Screw	94	Ball Bearing		
20	Arm Lever Screw	43	Body Cover	148	Bail Spring Link		