



PARTS LIST

Key No.	Description	SE2 Part No.	SE3 Part No.	SE4 Part No.	SE5 Part No.
1	Drag Knob Assy	AO332	AO332	CO332	CO332
2	Drag Retainer	AO038	AO038	CO038	CO038
3	Spool Retainer	AO050	CO050	CO050	CO050
4	Spool W/S A	AO033	AO033	CO033	CO033
5	Spool W/S B	AO029	AO029	CO029	CO029
6	Spool W/S D	AO046	AO046	CO046	CO046
7	Spool Assy	EO321-1	EO321-1	GO321-1	GO321-1
8	Spool A/J W/S	AO030	AO030	CO030	CO030
9	Spool Click Gear	AO037	AO037	CO037	CO037
10	Main Shaft	AO015-1	AO015-1	CO015-1	CO015-1
11	Main Shaft S/C	AO1100	AO1100	UL1006	UL1006
12	Rotor Nut	AO006	AO006	UL0065	UL0065
13	Rotor Retainer W/S	EO009-1	EO009-1	GO009-1	GO009-1
14	Rotor	EO096	EO096	GO096	GO096
15	Rotor Retainer	EO096	EO096	GO096	GO096
16	Rotor Retainer W/S	EO096	EO096	GO096	GO096
17	Trip Link Spring	PL097	PL097	PL115	PL115
18	Trip Link	PL115	PL115	PL115	PL115
19	E-Clip	PL115	PL115	PL115	PL115
20	Spring Shaft	EO017-1	EO017-1	GO017-1	GO017-1
21	Bail Spring	EO004-1	EO004-1	GO004-1	GO004-1
22	Spring Holder	EO047-1	EO047-1	GO047-1	GO047-1
23	Bail Spring Holder	EO047-1	EO047-1	GO047-1	GO047-1
24	Bail Spring Cover	AO087-1	AO087-1	CO087-1	CO087-1
25	Rotor Cover S/C	AO085	AO085	CO085	CO085
26	Arm Lever	EO007-1	EO007-1	GO007-1	GO007-1
27	Arm Lever S/C	AO051	AO051	CO051	CO051
28	Bail Collar	EO017-1	EO017-1	GO017-1	GO017-1
29	Line Roller	EO004-1	EO004-1	GO004-1	GO004-1
30	Bail Assy	EO347-1	EO347-1	GO347-1	GO347-1
31	Bail Holder S/C	AO044	AO044	CO044	CO044
32	Bail S/C	SL108	SL108	SL108	SL108
33	Kick Lever	AO019-1	AO019-1	CO019-1	CO019-1
34	Kick Lever Cover	AO024-1	AO024-1	CO024-1	CO024-1
35	Bearing Plate S/C	AO080	AO080	CO080	CO080
36	Bearing Plate	AO040-1	AO040-1	CO040-1	CO040-1
37	Rotator - Rotor	AO028	AO028	CO028	CO028
38	Ratchet Gear	PL060	BO060	CO060	CO060
39	Prinion Gear	AO011-1	BO011-1	CO011-1	CO011-1
40	Handle Cap W/S	AO105	BO105	CO105	CO105
41	Handle S/C Cap	EO073	AO073	CO073	CO073
42	Body	EO001-1	BO001-1	CO001-1	CO001-1
43	Stopper Bushing	NL091	BO091	CO091	CO091
44	Stopper-A	NL064	BO064	CO064	CO064
45	Stopper-B	NL063	BO063	CO063	CO063
46	Stopper Lever	AO059	BO059	CO059	CO059
47	Stopper L/R Spring	AO061	BO061	CO061	CO061
48	Stopper S/C	AO083	BO083	CO083	CO083
49	Body Bushing	AO013-1	AO013-1	CO013-1	CO013-1
50	Sliding Spring	AO086	AO086	CO086	CO086
51	Drive Gear	EO012	BO012-1	GO012	GO012
52	Drive Gear A/J W/S	AO026	AO026	CO026	CO026
53	Body Cover B/B	EO157	EO157	GO157	GO157
54	O/S Gear	AO053	AO053	CO053	CO053
55	O/S Gear S/C	AO078	AO078	CO078	CO078
56	O/S Pivot Arm	AO025	BO025	CO025	CO025
57	O/S Pivot Arm W/S	AO056	AO056	CO056	CO056
58	Body Cover	EO023-1	EO023-1	GO023-1	GO023-1
59	Body Cover S/C	KO057	AO057	CO057	CO057
60	Handle Assy	NL318	AL318	OL318	OL318
61	Kick Lever Spring	AO049-1	AO049-1	CO049-1	CO049-1
62	Rotor Nut Lock S/C	AO082-1	AO082-1	CO082-1	CO082-1
63	Kick Lever Guide	AO077	AO077	CO077	CO077
64	Kick Lever S/C	AO080-1	AO080-1	CO080-1	CO080-1
65	Bearing Plate S/C	AO057	AO057	CO057	CO057
66	Bearing Plate S/C	AO080-1	AO080-1	CO080-1	CO080-1
67	Body Cover S/C	KO057	AO057	CO057	CO057