


### EXPLODED PARTS VIEW

Bantam *Magnumlite*  
*SpeedMaster* 2200 WFS

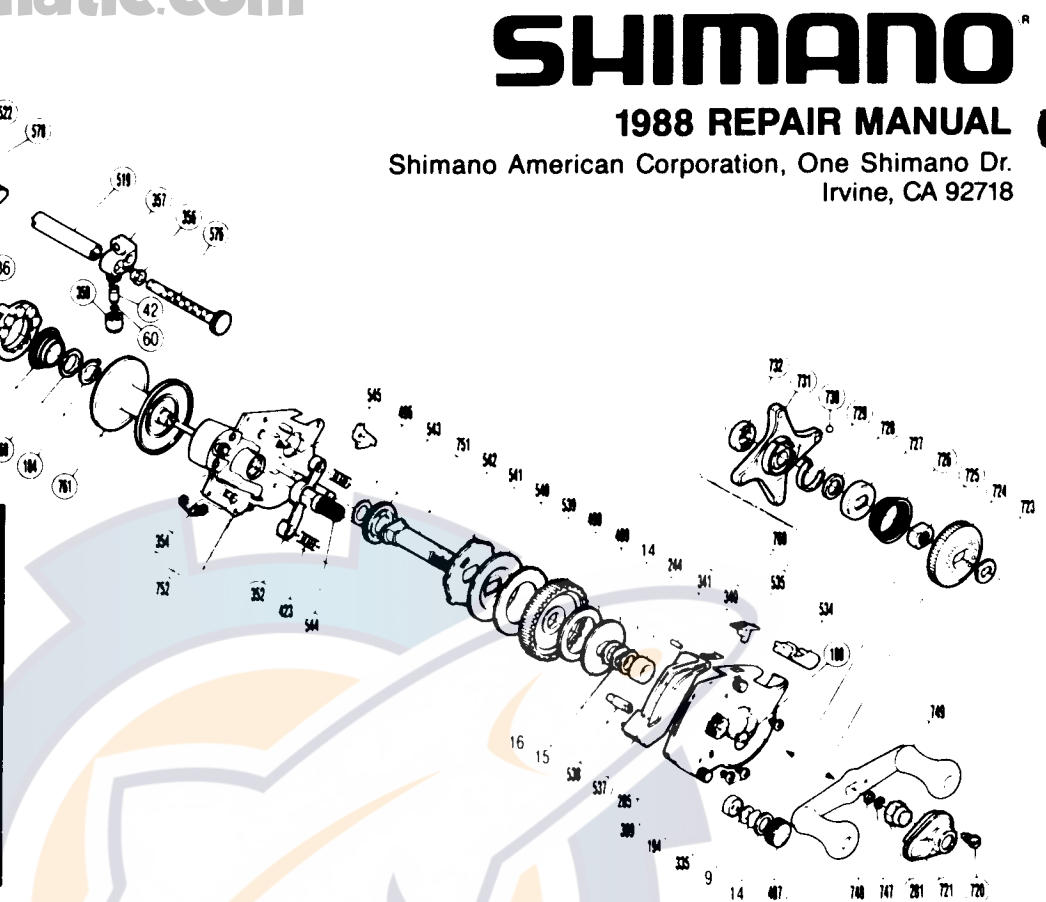

### PARTS LIST

**PART # DESCRIPTION**

- BNT 0009 Spacer (A)
- BNT 0014 Friction Washer (B)
- BNT 0015 Drag Spring Washer
- BNT 0016 Friction Washer (C)
- BNT 0032 Bearing Retainer
- BNT 0036 Stabilizer Bar Screw (A) (S)
- BNT 0042 Line Guide Pawl
- BNT 0045 Worm Bearing (B)
- BNT 0060 Spacer (Optional)
- BNT 0133 Worm Shaft Retainer
- BNT 0184 Magnet Retainer Lock
- BNT 0188 O Ring
- BNT 0194 Ball Bearing
- BNT 0244 Bushing (B)
- BNT 0277 Spacer (B)
- BNT 0281 Handle Nut
- BNT 0285 Set Plate Screw
- BNT 0291 Side Plate Screw
- BNT 0292 Stabilizer Bar Screw (B)
- BNT 0335 Bearing Washer (A)
- BNT 0340 Switch Spring
- BNT 0341 Switch Spring Lock
- BNT 0352 (Pinion) Yoke
- BNT 0354 Retractor Spring
- BNT 0356 Worm Bearing "A"
- BNT 0357 Line Guide (Assembly)

**PART # DESCRIPTION**

- BNT 0358 Pawl Cap
- BNT 0399 Retractor Guide Screw (Large Head)
- BNT 0423 Yoke Spring
- BNT 0487 Cast Control Cap
- BNT 0489 Key Washer "A"
- BNT 0490 Drag Washer
- BNT 0496 Drive Shaft Washer "C"
- BNT 0519 Level Wind Guard
- BNT 0522 Stabilizer Bar
- BNT 0534 Right Side Platecover
- BNT 0535 Anti-Reverse Switch
- BNT 0537 Clutch Button Attachment
- BNT 0538 Retractor Guide
- BNT 0539 Drive Gear
- BNT 0540 Drive Shaft Washer "B"
- BNT 0541 Key Washer "B"
- BNT 0542 Anti-Reverse Ratchet
- BNT 0543 Idle Gear
- BNT 0544 Pinion Gear
- BNT 0545 Anti-Reverse Pawl
- BNT 0550 Left Side Plate
- BNT 0576 Worm Shaft
- BNT 0578 Level Wind Protector
- BNT 0660 Spring Spacer
- BNT 0661 Magnet Retainer Spring

**PART # DESCRIPTION**

- BNT 0701 Thrust Washer Spacer (Optional)
- BNT 0702 Dial O Ring
- BNT 0706 Magnet Retainer
- BNT 0716 Magnet Control Dial
- BNT 0720 Handle Nut Plate Screw
- BNT 0721 Handle Nut Plate
- BNT 0723 Friction Washer "A"
- BNT 0724 Star-Set Dial
- BNT 0725 Pre-Set Nut
- BNT 0726 Pre-Set Spring
- BNT 0727 Strike
- BNT 0728 Pre-Set Washer
- BNT 0729 Strike Spring
- BNT 0730 Strike Ball
- BNT 0731 Star Drag
- BNT 0732 Drive Shaft Cam
- BNT 0747 Drive Shaft Retainer
- BNT 0748 Drive Shaft Washer "A"
- BNT 0749 Handle Assembly
- BNT 0751 Drive Shaft
- BNT 0752 Set Plate Assembly
- BNT 0760 Right Side Plate
- BNT 0761 Spool
- BNT 0762 Frame