



500FA 01

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0041	Drive Gear Washer	4652	Lever Spring Guide (B)	5421	Bail Assembly
0050	Anti-Reverse Lever Screw	4653	Lever Spring	5423	Anti-Reverse Lock Out
0071	Rotor Nut	4654	Lever Spring Guide (A)	5424	Anti-Reverse Lock Out Spring
0642	Side Cover Screw	4656	Trip Lever Spacer	5425	Lock Out Spring Holder
0787	Nut Lock Screw	5405	Drag Knob	5426	Pinion Gear
0792	Bearing Retainer Screw	5406	Spool Assembly	5427	Anti-Reverse Pawl Screw
0930	Ball Bearing	5407	Main Shaft	5428	Anti-Reverse Pawl
1008	Handle Lock Washer	5408	Line Roller	5429	Anti-Reverse Pawl Spring
1427	Spool Support	5409	Line Roller Bushing	5430	Anti-Reverse Cam
2254	Ball Bearing	5410	Line Roller Washer	5432	Drive Gear
2404	"E" Lock	5411	Bail Spring Guide (A)	5434	Anti-Reverse Cam Spring
2852	Handle Screw Lock	5412	Bail Spring	5435	Oscillating Slider
3309	Line Roller Screw	5413	Bail Arm	5436	Oscillating Gear
3402	Multi-Purpose Screw	5415	Bail Arm Bushing	5437	Anti-Reverse Lever
3455	Spool Washer	5416	Bail Spring Guide (B)	5439	Handle Assembly
3665	Slider Retainer Screw	5417	Bail Trip Lever	5666	Body Assembly
4421	Handle Screw Cap	5419	Bail Hold Support Spacer	7162	Rotor Set
4642	Bail Arm Screw	5420	Bail Hold Support Shaft		