


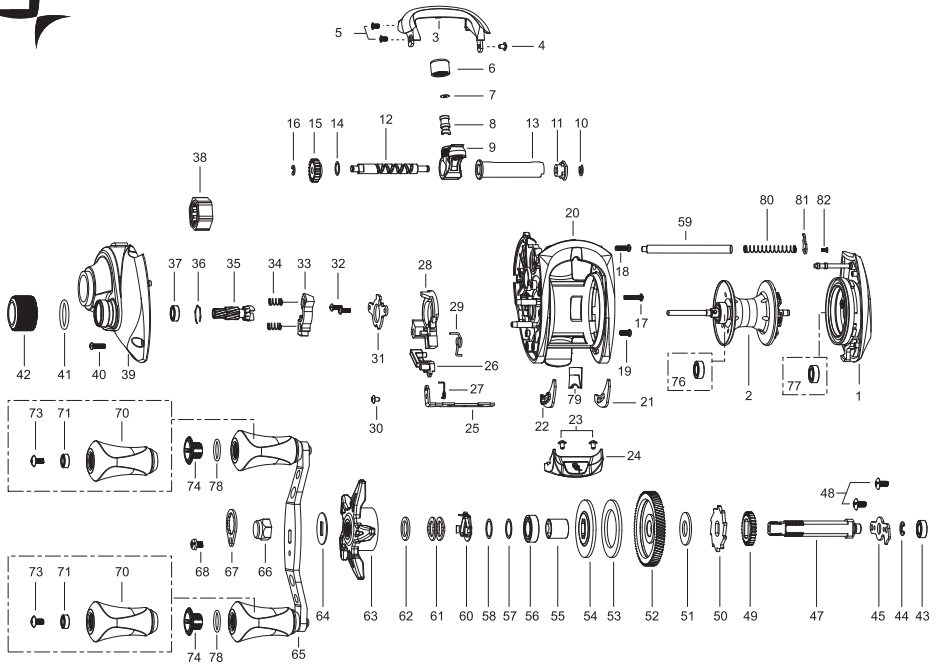

INCEPTION 6.6 LH



Key

No.	Part No.	Part Name
1	6KZ63104	PALM SIDE COVER UNIT
2	TS11-4	COMPLETE SPOOL ASSEMBLY(INCLUDES JHS BEARING)
3	5K331301	FRONT SUPPORT
4	6K797204	SCREW
5	6K314101	SCREW
6	TS5-17	LINE GUIDE CAP
7	6K148801	WASHER
8	6K256501	LEVEL WIND PIN
9	5K315504	LEVEL WIND ASSY
10	6B339801	RETAINER
11	6K456801	BUSH
12	5K095601	WORM SHAFT
13	6K456403	PIPE
14	6E096503	WASHER
15	6K469301	WORM PINION
16	6B339801	RETAINER
17	6K961807	SCREW
18	6K961802	SCREW
19	6K961808	SCREW
20	5K331101	FRAME
21	5K250301	PAD-B
22	5K250201	PAD-A
23	5K047003	TAP SCREW
24	5K320201	THUMB BAR ASSEMBLY
25	5K331201	CLUTCH LINK
26	5K312301	KICK LEVER
27	5K133301	SPRING
28	5K312401	CLUTCH CAM
29	5K138401	SPRING
30	5K047001	TAP SCREW
31	5K251502	CAM PLATE
32	6K961801	SCREW
33	5K133401	CLUTCH
34	5K382101	COIL SPRING
35	5K131002	PINION
36	6K170701	RING
37	6K304001	SS BALL BEARING
38	5K242801	DEAD STOP A/R CLUTCH
39	5K331401	GEAR SIDE COVER
40	6K961808	SCREW
41	6K904901	O-RING
42	TS3-17IN	CAST CONTROL CAP ASSEMBLY(INCLUDES WASHERS)

Key

No.	Part No.	Part Name
43	6K170601	SS BALL BEARING
44	63201402	RETAINER
45	5K134901	BEARING PLATE
47	5K320804	GEAR METAL
48	6K398603	SCREW
49	6K258101	GEAR
50	6K893602	RATCHET
51	6K174507	WASHER
52	5K131304	DRIVE GEAR
53	5K039901	WASHER
54	5K040001	WASHER
55	6K859203	BUSH
56	6K582201	SS BALL BEARING
57	6K177301	WASHER
58	6K177302	WASHER
59	5K314401	PILLAR POST
60	6K259201	LEAF SPRING ASSEMBLY
61	5K027201	SPRING WASHER
62	5K174201	DJ WASHER
63	TS12-17LH	STAR DRAG(6.6:1)
64	5K232001	WASHER
65	TS4-17 IN LH	COMPLETE HANDLE ASSEMBLY
66	TS6-17	NUT
67	TS7-17	RETAINER
68	63520407	RETAINER
70	TS9-EVA(SET OF 2)	HANDLE KNOB ASSEMBLY
71	6K626401	SS BALL BEARING
73	63511816	SCREW
74	5K337201	HANDLE KNOB CAP
76	5K126107	JHS SPOOL BEARING
77	6K474508	JHS PALM SIDE COVER BEARING
78	5K398901	O-RING
79	5K348201	HOOK KEEPER
80	5K314501	COIL SPRING
81	5K314601	PLATE
82	6K797205	SCREW

INCEPTION 8.1 LH

35	5K243802	PINION
52	5K243902	DRIVE GEAR
63	TS12-17LH	STAR DRAG(8.1:1)