


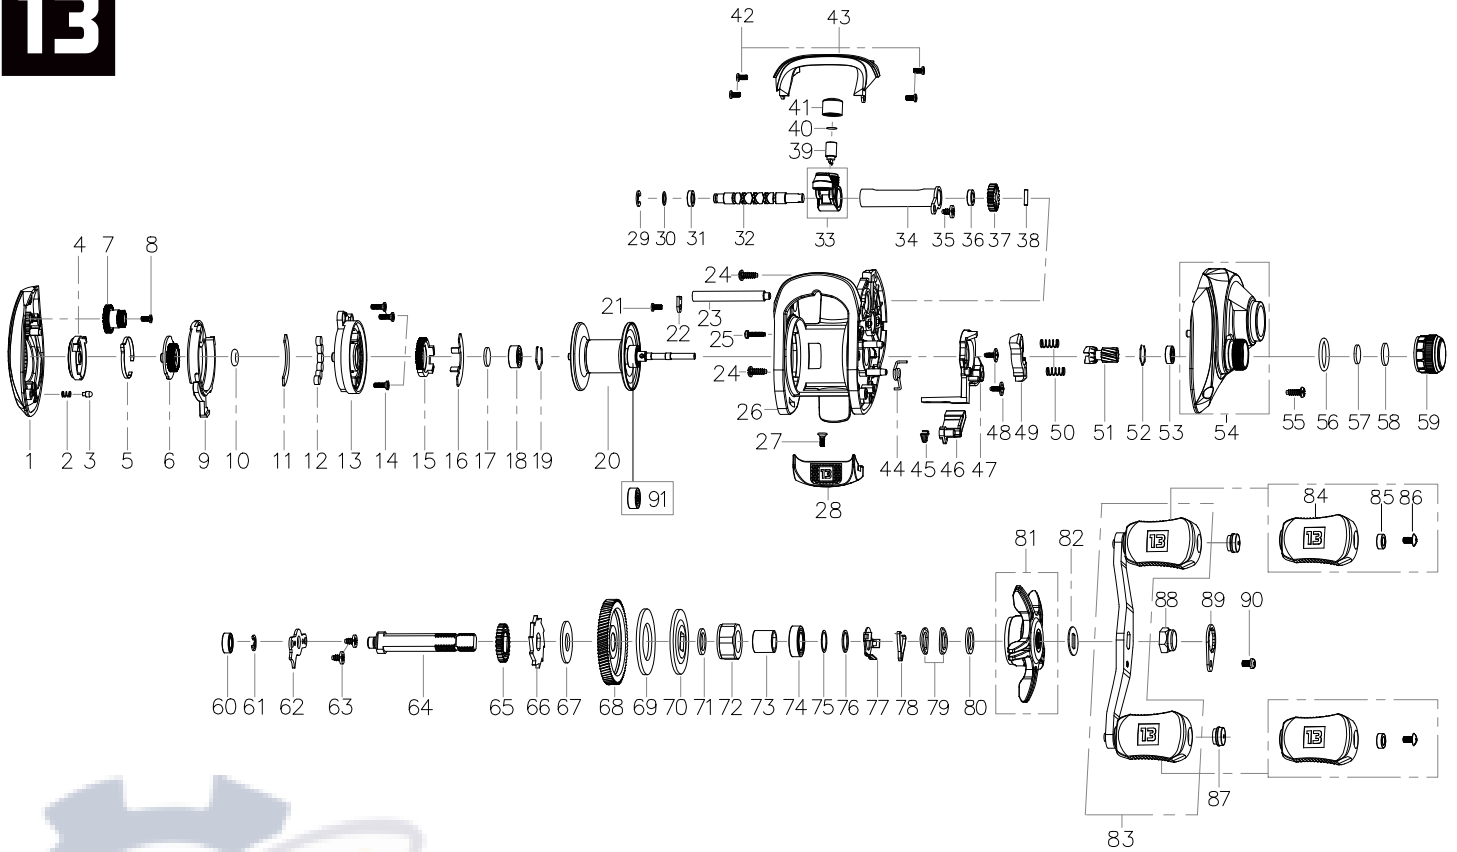

Key No.	Part No.	Part Name	Key No.	Part No.	Part Name
1		PALM SIDE COVER	51		PINION RH 8.1:1
2		CLICK PIN SPRING	52		RING_METAL
3		CLICK PIN	53		BUSH_TENSION KNOB
4		CONTROL DIAL	54		GEAR SIDE COVER RH 8.1:1
5		CLICK SPRING	55		SCREW_1_GEAR COVER
6		IDLE GEAR	56		O-RING_TENSION KNOB
7		JOINT GEAR	57		WASHER_EGL
8		TAP SCREW-HOOD	58		WASHER_RUBBER
9		LOCK LEVER	59		TENSION KNOB
10		O-RING	60		BALL BEARING_GEAR METAL
11		MAGENT PLATE	61		RETAINER
12		MAGNET*6	62		BEARING PLATE
13		SPOOL COVER	63		SCREW_G_METAL*2
14		SCREW_SPOOL COVER*3	64		GEAR METAL
15		MAGNET GEAR	65		OS GEAR
16		MAGNET GEAR PLATE	66		RATCHET
17		WASHER_EGL	67		WASHER_RATCHET
18		BALL BEARING_SPOOL COVER	68		DRIVE GEAR_SINGLE RH 8.1:1
19		RING	69		WASHER-L
20		SPOOL ASSEMBLY	70		WASHER-D
21		TAP SCREW_HOOD	71		WASHER-G_METAL
22		HINGE PLATE	72		ONE WAY CLUTCH
23		PILLAR	73		SLEEVE
24		SCREW_1_GEAR COVER	74		BALL BEARING_14_8_4
25		SCREW_2_GEAR COVER	75		WASHER_10_8_02
26		FRAME	76		WASHER_10_8_05
27		SCREW_THUMB BAR	77		SPRING PLATE
28		THUMB BAR	78		CLICK SPRING_STAR DRAG
29		RETAINER_W_SHAFT	79		SPRING WASHER*2
30		WASHER_W_SHAFT	80		WASHER_G_METAL
31		BUSH	81		STAR DRAG
32		WORM SHAFT	82		LEAF SPRING
33		LEVEL WIND	83		HANDLE ASSEMBLY
34		PIPE	84		HANDLE KNOB*2
35		SCREW_G_METAL	85		BUSH_HANDLE KNOB*2
36		BUSH	86		SCREW_HANDLE KNOB*2
37		WORM PINION	87		HANDLE KNOB CAP*2
38		PIN	88		HANDLE NUT
39		LEVEL WIND PIN	89		HANDLE NUT RETAINER
40		WASHER_LEVEL WIND	90		HANDLE SCREW
41		LEVEL WIND NUT	91		BALL BEARING_SPOOL
42		TAP SCREW_HOOD*4			
43		HOOD			
44		CLUTCH CAM SPRING			
45		KICK LEVER SPRING			
46		KICK LEVER			
47		CLUTCH CAM			
48		SCREW_CLUTCH CAM*2			
49		CLUTCH			
50		COIL SPRING_CLUTCH*2			

ORIGIN R1 6.6:1 RH

51	PINION RH 6.6:1	CR01075
54	GEAR SIDE COVER RH 6.6:1	CR01087
68	DRIVE GEAR_SINGLE RH 6.6:1	CR01107