


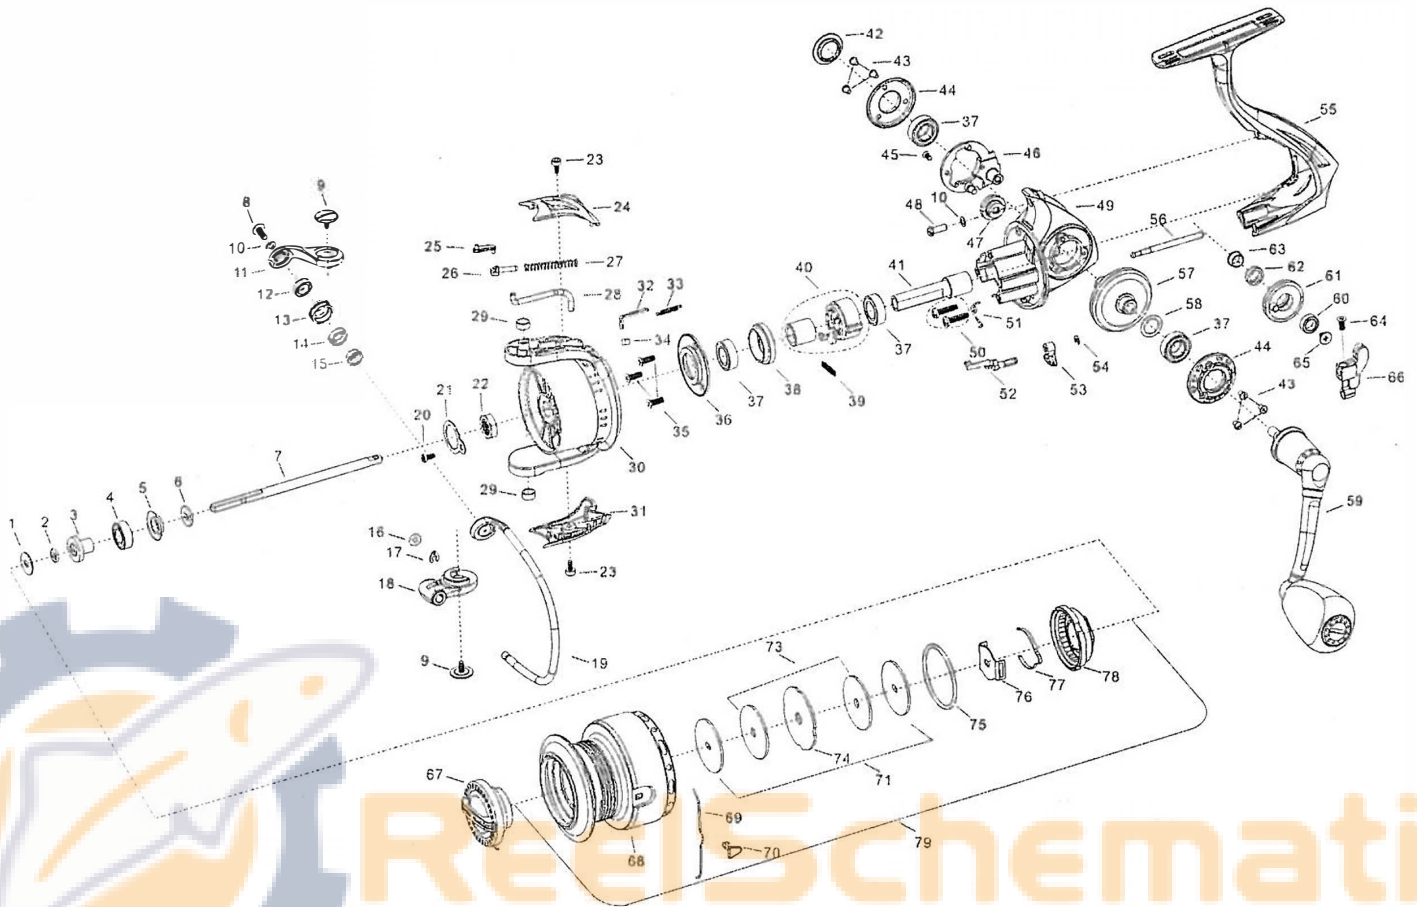

KEY NO. DESCRIPTION

1	SPACE WASHER
2	O-RING
3	BEARING SLEEVE
4	BUSHING
5	SEAL
6	SPOOL SHAFT WASHER
7	SPOOL SHAFT
8	SCREW
9	SCREW (2 REQ)
10	WASHER (2 REQ)
11	BAIL ARM
12	BALL BEARING
13	LINE ROLLER
14	POM BUSHING
15	BRASS BUSHING
16	O-RING
17	CLIP
18	BAIL HOLDER
19	BAIL WIRE
20	SCREW
21	NUT LOCKING PLATE
22	ROTOR NUT
23	SCREW (2 REQ)
24	BAIL ARM COVER
25	PIVOT LEVER
26	BAIL SPRING BUSHING
27	BAIL SPRING
28	BAIL TRIP BAR
29	BUSHING (2 REQ)
30	ROTOR
31	BAIL HOLDER COVER
32	ROTOR BRAKE LINKAGE
33	ROTOR BRAKE SPRING
34	ROTOR BRAKE PAD
35	SCREW (3 REQ)
36	BEARING HOLDER COVER
37	BALL BEARING (4 REQ)
38	BALL BEARING
39	CLUTCH SPRING
40	CLUTCH ASSEMBLY

**PART NO.
INSHORE 30**

1195751
1195755
1195758
1279159
1195761
1195763
1221451
1195642
1221453
1252583
1279322
1195641
1195620
1279234
1279238
1195591
1195592
1279326
1221459
1221460
1195770
1195643
1221462
1279278
1195617
1195619
1195613
1221466
1221467
1279283
1279286
1221474
1221475
1221476
1221477
1221479
1181780
1195573
1221480
1195773

KEY NO. DESCRIPTION

41	PINION
42	HANDLE SCREW COVER
43	SCREW (6 REQ)
44	BEARING RETAINER (2 REQ)
45	SCREW
46	OSCILLATION MOUNT
47	IDLER GEAR
48	SCREW
49	GEAR BOX
50	SCREW (2 REQ)
51	SWITCH SPRING
52	SWITCH LEVER
53	IAR SWITCH
54	CLIP
55	STEM
56	GUIDE BAR
57	MAIN GEAR
58	SHIM
59	HANDLE ASSEMBLY
60	BALL BEARING
61	OSCILLATION GEAR
62	POM BUSHING
63	BRASS BUSHING
64	SCREW
65	SCREW
66	OSCILLATION SLIDER
67	DRAG KNOB
68	SPOOL
69	LINE CLIP SPRING
70	LINE CLIP
71	KEYED WASHER (2 REQ)
73	DRAG WASHER 2 (2 REQ)
74	SPOOL WASHER
75	O-RING
76	SPOOL CLICK RETAINER
77	SPOOL CLICK
78	SPOOL BOTTOM
79	SPOOL ASSEMBLY
80	SPARE SPOOL (Not Shown)

**PART NO.
INSHORE 30**

1195567
1279337
1221489
1279288
1195720
1279291
1195767
1221496
1279294
1221499
1221500
1221501
1279346
1221504
1279299
1221428
1221510
1195560
1279304
1195641
1195801
1279234
1279236
1195659
1195812
1195651
1279355
1279309
1195693
1279359
1221545
1221548
1221550
1221553
1221554
1221555
1221557
1279314
1279319