


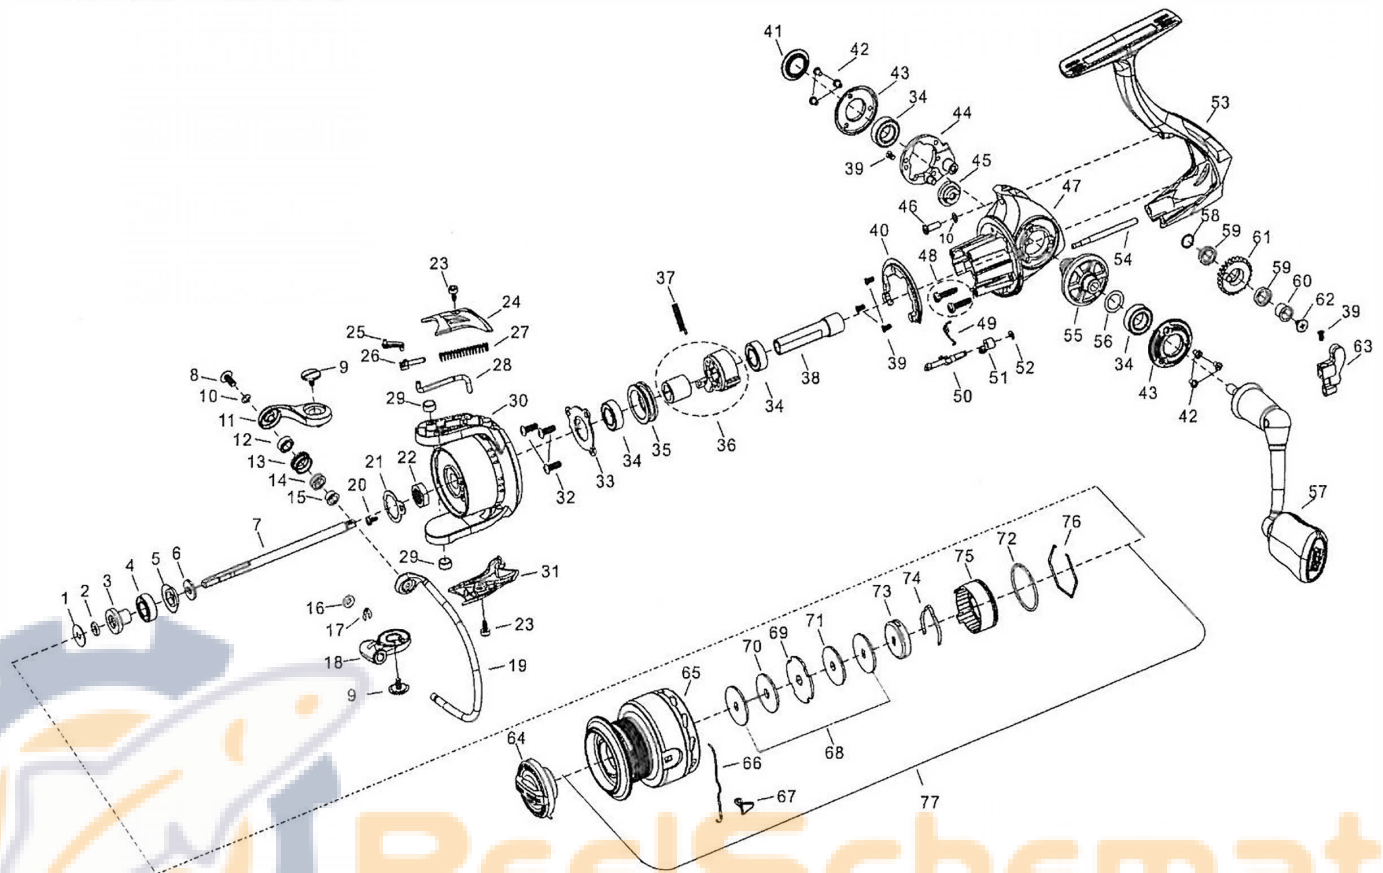

KEY NO.	DESCRIPTION	PART NO.	KEY NO.	DESCRIPTION	PART NO.
		S 10			S 10
1	SPACE WASHER	1195751	41	HANDLE SCREW COVER	1279193
2	O-RING	1195755	42	SCREW (6 REQ)	1279198
3	BEARING SLEEVE	1195758	43	BEARING RETAINER (2 REQ)	1279200
4	BUSHING	1279159	44	OSCILLATION MOUNT	1279208
5	SEAL	1195761	45	IDLER GEAR	1195767
6	SPOOL SHAFT WASHER	1195763	46	SCREW	1221496
7	SPOOL SHAFT	1252579	47	GEAR BOX	1279216
8	SCREW	1195642	48	SCREW (2 REQ)	1279218
9	SCREW (2 REQ)	1252582	49	SWITCH SPRING	1221500
10	WASHER (2 REQ)	1252583	50	SWITCH LEVER	1221501
11	BAIL ARM	1279161	51	IAR SWITCH	1279223
12	BALL BEARING	1252587	52	CLIP	1221504
13	LINE ROLLER	1279162	53	STEM	1279227
14	POM BUSHING	1279163	54	GUIDE BAR	1221428
15	BRASS BUSHING	1279165	55	MAIN GEAR	1252627
16	O-RING	1195591	56	SHIM	1195560
17	CLIP	1195592	57	HANDLE ASSEMBLY	1279232
18	BAIL HOLDER	1279168	58	SPACER	1195778
19	BAIL WIRE	1279169	59	POM BUSHING (2 REQ)	1279234
20	SCREW	1252594	60	BRASS BUSHING	1279239
21	ROTOR LOCKING PLATE	1195770	61	OSCILLATION GEAR	1252634
22	ROTOR NUT	1195643	62	SCREW	1195812
23	SCREW (2 REQ)	1221462	63	OSCILLATION SLIDER	1252635
24	BAIL ARM COVER	1279180	64	DRAG KNOB	1279245
25	PIVOT LEVER	1195617	65	SPOOL	1279249
26	BAIL SPRING BUSHING	1195619	66	LINE CLIP SPRING	1252661
27	BAIL SPRING	1252598	67	LINE CLIP	1279256
28	BAIL TRIP BAR	1252599	68	KEY WASHER (2 REQ)	1252646
29	BUSHING (2 REQ)	1221467	69	SPOOL WASHER	1252647
30	ROTOR	1279182	70	DRAG WASHER 1	1279261
31	BAIL HOLDER COVER	1279187	71	DRAG WASHER 2	1252648
32	SCREW (3 REQ)	1195572	72	O-RING	1252649
33	BEARING HOLDER COVER	1252604	73	SPOOL CLICK RETAINER	1252650
34	BALL BEARING (4 REQ)	1181780	74	SPOOL CLICK	1252651
35	BEARING HOLDER	1252605	75	SPOOL BOTTOM	1252652
36	CLUTCH ASSEMBLY	1195773	76	CLIP	1252653
37	CLUTCH SPRING	1252606	77	SPOOL ASSEMBLY	1279268
38	PINION	1252607	78	SPARE SPOOL ASSEMBLY (If Provided)	1279273
39	SCREW (5 REQ)	1195720			
40	ROTOR BRAKE	1252610			

