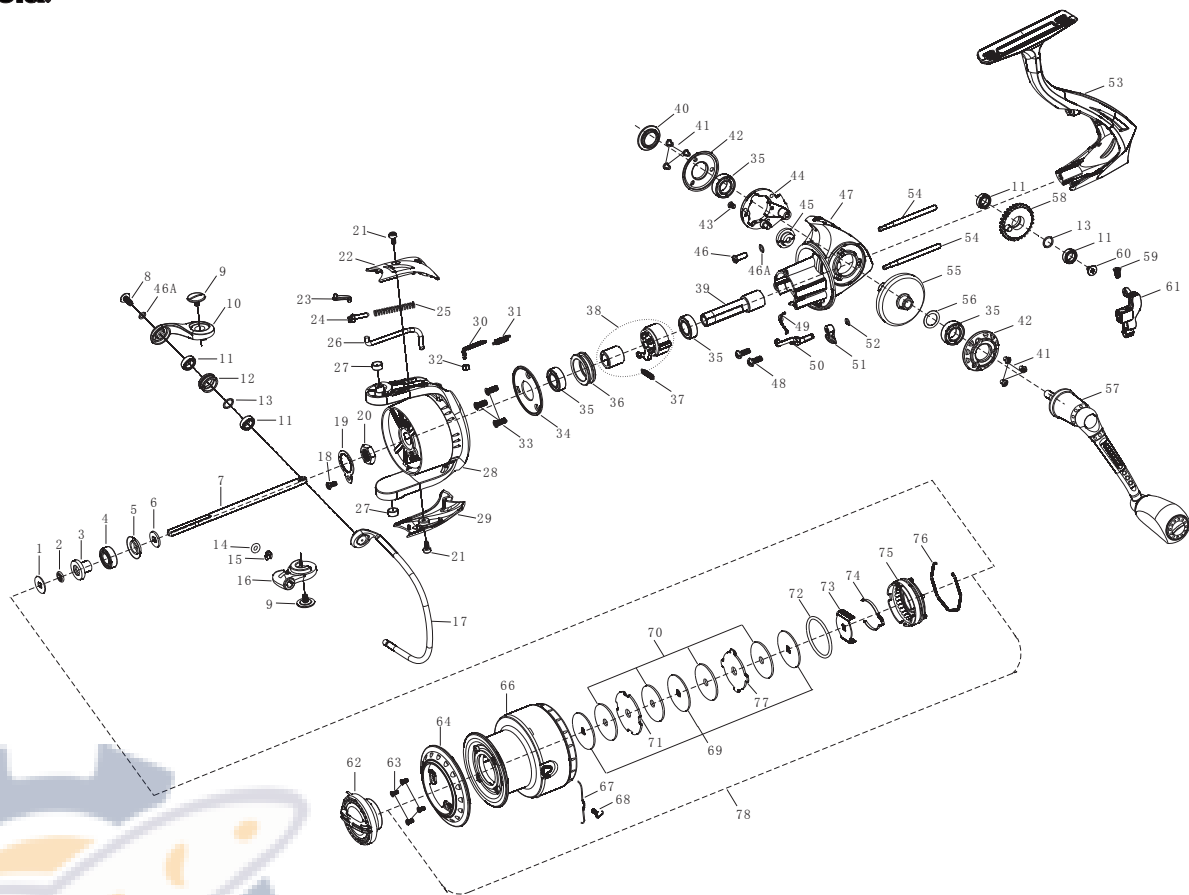



KEY NO. DESCRIPTION

1	Space Washer
2	O-Ring
3	Bearing Sleeve
4	Ball Bearing
5	Seal
6	Spool Shaft Washer
7	Spool Shaft
8	Screw
9	Screw (2 Req)
10	Bail Arm
11	Ball Bearing (4 Req)
12	Line Roller
13	Spacer (2 Req)
14	O-Ring
15	Clip
16	Bail Holder
17	Bail Wire
18	Screw
19	Rotor Locking Plate
20	Rotor Nut
21	Screw (2 Req)
22	Bail Arm Cover
23	Pivot Lever
24	Bail Spring Bushing
25	Bail Spring
26	Bail Trip Bar
27	Bushing (2 Req)
28	Rotor
29	Bail Holder Cover
30	Rotor Brake Linkage
31	Rotor Brake Spring
32	Rotor Brake Pad
33	Screw (3 Req)
34	Bearing Holder Cover
35	Ball Bearing (4 Req)
36	Bearing Holder
37	Clutch Spring
38	Clutch Assembly
39	Pinion
40	Handle Screw Cover

PART NO.
PREMIER 40

1195751
1195755
1195758
1195757
1195761
1195763
1260209
1195642
1221453
1221454
1195641
1195620
1195778
1195591
1195592
1221456
1260211
1221460
1195770
1195643
1221462
1260212
1195617
1195613
1260214
1221467
1260215
1260217
1260221
1221475
1221476
1221477
1260222
1181780
1252605
1221480
1195773
1260219
1221484

KEY NO. DESCRIPTION

41	Screw (6 Req)
42	Bearing Retainer (2 Req)
43	Screw
44	Oscillation Mount
45	Idle Gear
46	Screw
46A	Washer (2 Req)
47	Gear Box
48	Screw (2 Req)
49	Switch Spring
50	Switch Lever
51	IAR Switch
52	Clip
53	Stem
54	Guide Bar (2 Req)
55	Main Gear
56	Shim
57	Handle Assembly
58	Oscillation Gear
59	Screw
60	Screw
61	Oscillation Slider
62	Drag Knob
63	Screw (4 Req)
64	Spool Top
66	Spool
67	Line Clip Spring
68	Line Clip
69	Keyed Washer (3 Req)
70	Drag Washer (4 Req)
71	Spool Washer
72	O-Ring
73	Spool Click Retainer
74	Spool Click
75	Spool Bottom
76	Clip
77	Spool Washer
78	Spool Assembly
79	Alum.spare spoolassy. (Not Shown)

PART NO.
PREMIER 40

1221488
1260224
1195720
1260226
1195767
1221496
1252583
1260228
1221499
1221500
1221501
1221502
1221504
1260230
1260233
1221510
1195560
1260234
1195805
1195659
1195812
1260236
1221522
1221524
1221526
1260237
1195693
1221543
1195739
1195729
1260241
1260243
1221554
1221555
1260244
1251981
1260245
1260247
1260251