



PARTS LIST OF MAXICE

ITEM#	DESCRIPTION	PART#(ICE)	ITEM#	DESCRIPTION	PART#(ICE)
1	Drag Knob Assembly	1529593	30	Bearing Retainer	1280406
2	Retainer Ring	1092606	31	Washer	1114764
3	Key Washer	1280355	32	Bearing 7*14*4	1085280
4	Eared Washer	1280353	33	Bearing Holder	1115558
5	Washer	1280354	34	Clutch Assembly	1102144
6	Spool	1530152	35	Pinion	1280407
7	Spool Assembly	1530153	36	Clutch Spring	1252716
8	Washer (T=0.5)	1178949	37	Handle Screw	1529964
9	Click Gear	1085271	38	Washer	1092781
10	Main Shaft	1280357	39	Body	1530158
11	Nut Set Screw	1529596	40	Slider Retainer	1121651
12	Rotor Nut	1085606	41	Screw	1385624
13	Bail Arm Screw	1448222	42	Slider	1188579
14	Bail Holder	1530154	43	Slider Screw	1126275
15	Bushing	1538277	44	Rear Cover	1530041
16	Screw	1536760	45	Bushing	1108938
17	Bail Arm	1530155	46	Oscillation Gear	1280412
18	Brass Bushing	1536761	47	Reduction Gear	1256967
19	Line Roller	1529959	48	Bearing 7*11*3	1092725
20	Washer	1529960	49	Drive Gear	1280411
21	Bail Assembly	1530156	50	Washer	1085287
22	Screw	1411137	51	Body Cover	1530159
23	Bail Arm Cover	1536778	52	Screw	1529968
24	Trip Spring	1126273	53	Handle Rivet Assembly	1530160
25	Trip Linkage	1252713	54	Bushing	1529970
26	Bail Slider	1128143	55	Handle Knob	1530161
27	Trip Bar	1536779	56	Screw	1119121
28	Rotor	1530157	57	Handle Knob Cover	1530162
29	Screw	1197283	58	Handle Assembly	1530163