



PARTS LIST OF MAXSTXSP20

ITEM#	DESCRIPTION	PART#(20)	ITEM#	DESCRIPTION	PART#(20)
1	Drag Knob Assembly	1529974	31	Washer	1085287
2	Retainer Ring	1085295	32	Bearing 7*14*4	1085280
3	Key Washer	1085296	33	Bearing Holder	1115558
4	Eared Washer	1085297	34	Clutch Assembly	1102144
5	Washer	1085298	35	Pinion	1536772
6	Spool	1530055	36	Clutch Spring	1252716
7	Spool Assembly	1530056	37	Handle Screw	1530039
8	Washer (T=0.5)	1178949	38	Body	1530059
9	Click Gear	1126316	39	Slider Retainer	1126332
10	Main Shaft	1529977	40	Screw	1188428
11	Nut Set Screw	1126258	41	Slider	1280427
12	Rotor Nut	1085606	42	Screw	1126275
13	Bail Arm Screw	1448222	43	Rear Cover	1530053
14	Bail Holder	1530048	44	Oscillation Gear	1256966
15	Bushing	1188261	45	Bearing 5*8*2.5	1112125
16	Screw	1536760	46	Screw	1497921
17	Bail Arm	1530049	47	Reduction Gear	1256967
18	Bearing 4*7*2.5	1275826	48	Bearing 7*11*3	1092725
19	Line Roller	1530036	49	Drive Gear	1256962
20	Washer	1529960	50	Washer	1085287
21	Bail Assembly	1530057	51	Bearing 7*13*4	1252717
22	Screw	1411137	52	Body Cover	1530054
23	Bail Arm Cover	1529981	53	Screw	1447884
24	Trip Spring	1119106	54	Screw	1126084
25	Trip Linkage	1252713	55	Handle Rivet Assembly	1530043
26	Bail Slider	1126272	56	Bushing	1529970
27	Trip Bar	1529990	57	Handle Knob	1530044
28	Rotor	1530058	58	Screw	1119121
29	Screw	1117984	59	Handle Knob Cover	1529972
30	Bearing Retainer	1280406	60	Handle Assembly	1530045