


# Abu Garcia® SILVER MAX 05/10

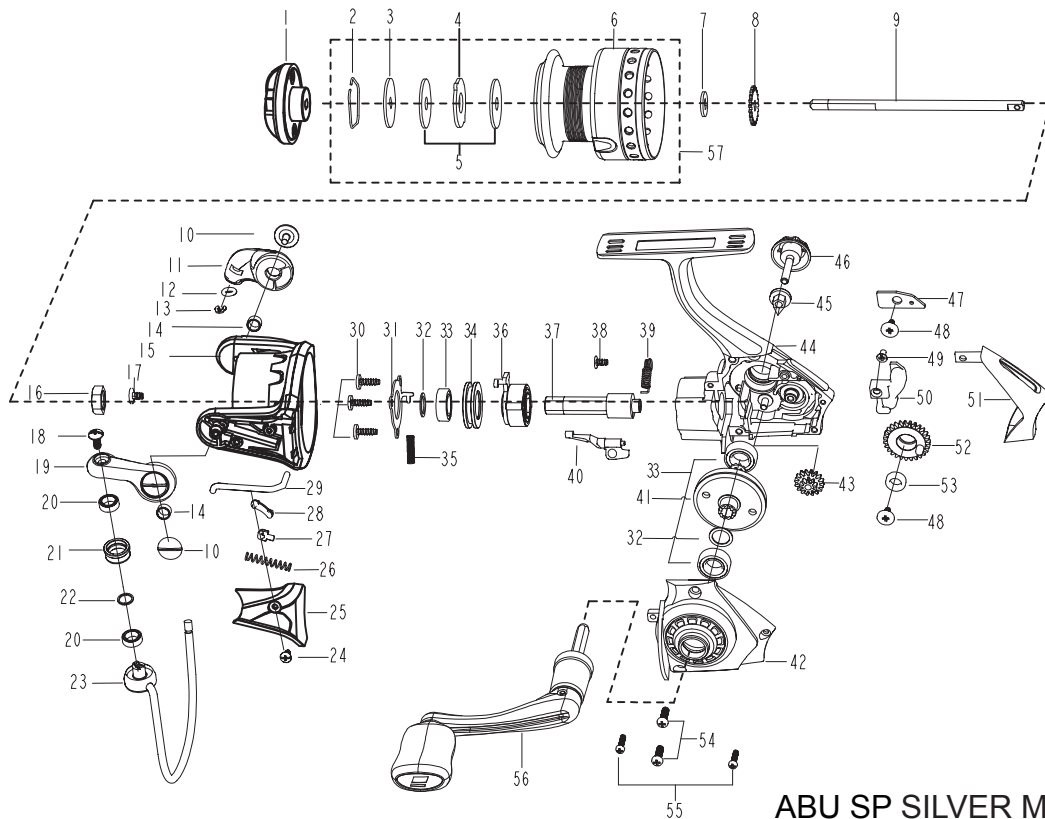

ABU SP SILVER MAX05/10 00

## Abu Garcia® PARTS LIST OF SILVER MAX05/10

ITEM#	DESCRIPTION	SILVER MAX05	SILVER MAX10	ITEM#	DESCRIPTION	SILVER MAX05	SILVER MAX10
1	Drag Knob Assembly	1411752	1411752	30	Screw	1197283	1197283
2	Retainer Ring	1092606	1092606	31	Bearing Retainer	1280406	1280406
3	Key Washer	1280355	1280355	32	Washer	1085287	1085287
4	Eared Washer	1280353	1280353	33	Bearing 7*13*4	1085280	1085280
5	Washer	1280354	1280354	34	Bearing Holder	1115558	1115558
6	Spool	1411753	1411762	35	Clutch Spring	1252716	1252716
7	Washer (T=0.5)	1178949	1178949	36	Clutch Assembly	1102144	1102144
8	Click Gear	1085271	1085271	37	Pinion	1280407	1280424
9	Main Shaft	1280357	1280417	38	Screw	1280401	1280401
10	Bail Arm Screw	1131692	1131692	39	Clutch Switch Spring	1252761	1252761
11	Bail Holder	1280358	1280358	40	IAR Switch	1280408	1280408
12	O-Ring	1252708	1252708	41	Drive Gear	1280411	1280426
13	E-Clip	1252707	1252707	42	Body Cover	1411756	1411765
14	Bushing	1188261	1188261	43	Reduction Gear	1256967	1256967
15	Rotor	1411754	1411763	44	Body	1411757	1411766
16	Rotor Nut	1085606	1085606	45	Washer	1092781	1092781
17	Nut Set Screw	1085900	1085900	46	Handle Cap	1411758	1411758
18	Bail Arm Screw	1411134	1411134	47	Slider Retainer	1121651	1118105
19	Bail Arm	1280400	1280419	48	Screw	1085900	1085900
20	Ball Bearing	1112125	1112125	49	Slider Screw	1126454	1126454
21	Line Roller	1252705	1252705	50	Slider	1188579	1280427
22	Washer	1110165	1110165	51	Rear Cover	1280414	1280429
23	Bail Assembly	1411736	1411747	52	Oscillation Gear	1280412	1256966
24	Screw	1411137	1411137	53	Bushing	1108938	1108938
25	Rotor Cover	1411755	1411764	54	Screw	1411759	1411759
26	Trip Spring	1126273	1126273	55	Screw	1197283	1197283
27	Trip Bushing	1128143	1128143	56	Handle Assembly	1411760	1411760
28	Trip Linkage	1252713	1252713	57	Spool Assembly	1411761	1411767
29	Bail Trip Lever	1280403	1280421				