


820BCV 04 PARTS LIST

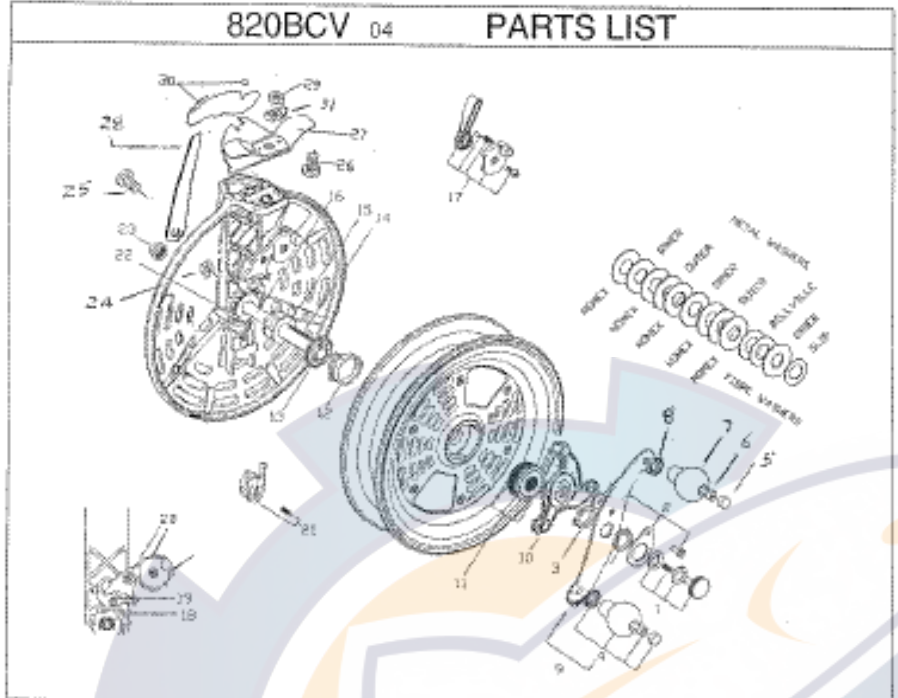

Key	Part	Description	Key	Part	Description
1	R6E4	Spindle Screw Assy	16	R6A18	Spindle
2	R7F3	Lock Nut Retainer	17	R5C7	On/Off Lever Assy
3	R7F2	H/plate lock nut	18	R7J4	Drag Pawl
4	R4F7	Handle Assy	19	R5G3	Drag Pawl Spring
5	R4H2	Handle Plug	20	R5K2	Drag On/Off Cam
6	R4E9	Handle Screw	21	R5E10	Fish Alert Assy
7	R4D5	Handle Knob	22	R6J10	Spindle Washer
8	R4G2	Handle Lock Nut	23	R6F3	Dome Nut
9	R7E13	Handle Plate Assy	24/25	R2M1	Screw & Nut
10	R7D12	Star Nut	26	R2D6	Base Bolt
11	R7BC15	Clutch Washer Set	27	R2A2	Index Plate
12	R7L1	Silent Drag Cam	28	R2G10	Baselock Spring
13	R5B5	Fish Alert Wheel	29	R2F1	Basebolt Nut
14	R7A4	Drag Friction Tube	30	R2H2	Rel. Lever & Rivet
15	R7H1	F/Tube Washer	31	R2L1	Base Washer S.S