


AMUNDSON

Please release drag system when not in used. Failure to deactivate drag could result free spooling.



TREND FLY REEL

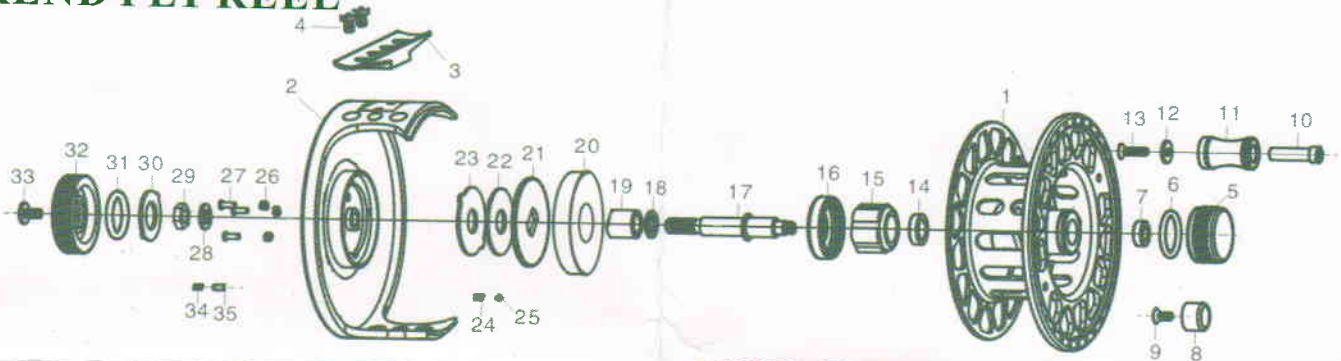

MODEL: TREND3/4 TREND5/6 TREND7/8 TREND9/10

- 1. Spool
- 2. Frame
- 3. Reel Foot
- 4. Reel Foot Screw
- 5. Spool Cap
- 6. O-Ring
- 7. Ball Bearing
- 8. Handle Balance
- 9. Balance Screw
- 10. Handle Rivet
- 11. Handle Knob
- 12. Handle Collar
- 13. Handle Screw
- 14. Ball Bearing
- 15. One Way Bearing
- 16. One Way Bearing Cover
- 17. Main Shaft
- 18. Drag Addition Main Shaft

- 19. Bearing Cone
- 20. Cover
- 21. Brake Disc
- 22. Drag Friction Disc
- 23. Rotationing Plate
- 24. Spring
- 25. Stainless Steel Ball
- 26. Drag Plate Spring
- 27. Drag Plate Pin
- 28. Lock Main Shaft
- 29. Main Shaft Nut
- 30. Washer
- 31. O-Ring
- 32. Drag Knob
- 33. Screw
- 34. Pawl Spring
- 35. Pawl

Left/Right Hand Retrieve Instructions

1. Unscrew the spool cap #5
2. Remove the spool #1 from the frame #2
3. Unscrew the one way ball bearing cover #16 from the spool #1
4. Remove one-way bearing #15 by gently tapping spool face down on any flat surface. Re-install bearing: plastic face out for LH retrieve, metal shroud out for RH retrieve
5. Replace the one way bearing cover back #16
6. Replace the spool #1 back onto the frame #2 and tighten the spool cap #5

For warranty issue,
Please check www.amundson.ca
or e-mail info@amundson.ca

Amundson Outdoor Products Ltd

7141 Randolph Ave. Burnaby B.C Canada V5J4W5

Tel: 604 431 1805

Fax: 604 431 1816

E-mail: info@amundson.ca

www.amundson.ca