


AMUNDSON

Please release drag system when not in used. Failure to deactivate drag could result free spooling.

TREND G2 Fly Reel

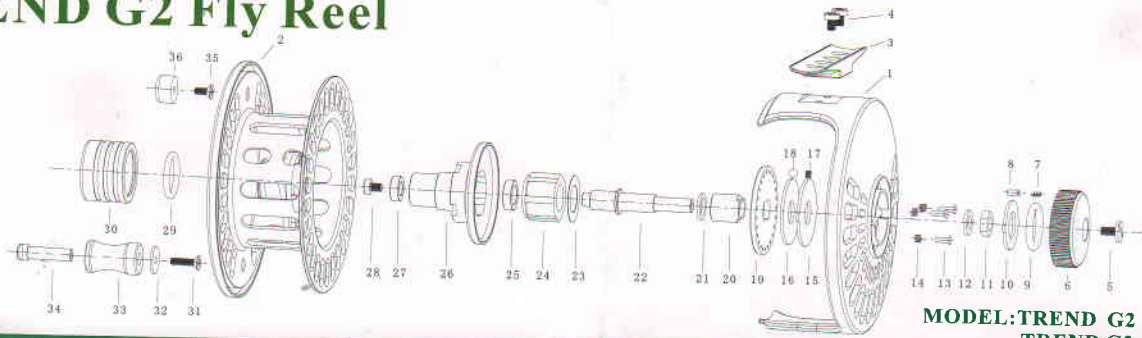

MODEL: TREND G2 2/4 TREND G2 5/6
TREND G2 7/8 TREND G2 9/10

- 1. Frame
- 2. Spool
- 3. Reel Foot
- 4. Reel Foot Screw
- 5. Drag Knob Screw
- 6. Drag Knob
- 7. Spring
- 8. Pawl
- 9. O-ring
- 10. Brake Washer
- 11. Hexagon Nut
- 12. Pattern Pads
- 13. Drag Plate Pin
- 14. Spring
- 15. Washer
- 16. Drag Friction Disc
- 17. Spring
- 18. Stainless Steel Ball

- 19. Brake Disc
- 20. Bearing Cone
- 21. Washer
- 22. Main Shaft
- 23. Washer
- 24. One-way Bearing
- 25. Ball Bearing
- 26. One-way Bearing Cone
- 27. Bearing
- 28. Screw
- 29. O-ring
- 30. Spool
- 31. Screw
- 32. Washer
- 33. Handle Knob
- 34. Handle Rivet
- 35. Screw
- 36. Handle Balance

Left/Right Handle Retrieve Instructions:

1. Remove the spool cap #30
2. Release the spool #2 from the frame #1
3. Remove the one-way bearing cone #26 from the frame, turn back the one-way bearing #24, re-install bearing: plastic face out for LH retrieve, metal shroud out for RH retrieve.
4. Re-fit the one-way bearing cone #26 back onto the frame #1 and put spool #2 on the frame #1, tighten the spool cap #30.

For warranty issue, Please check www.amundson.ca or e-mail info@amundson.ca

Amundson Outdoor Products Ltd

www.amundson.ca