


**TRIDO
FLY
REEL**

AMUNDSON 
OUTDOOR PRODUCTS

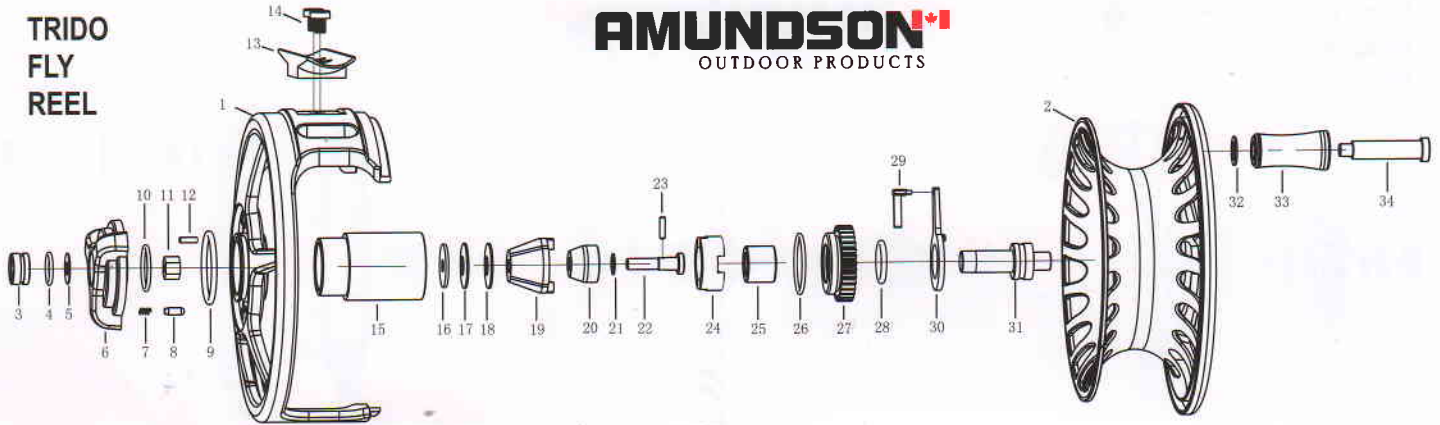

- | | | |
|--------------------|---------------------|---------------------|
| 1. Frame | 13. Reel foot | 25. One-way bearing |
| 2. Spool | 14. Reel foot screw | 26. O-ring |
| 3. Drag knob screw | 15. Main shaft cone | 27. Clicker gear |
| 4. O-ring | 16. Washer | 28. O-ring |
| 5. Washer | 17. Disc spring | 29. Clicker wrench |
| 6. Drag knob | 18. Disc spring | 30. Clicker support |
| 7. Spring | 19. Brake disc cone | 31. Main shaft |
| 8. Pawl | 20. Brass insert | 32. Washer |
| 9. O-ring | 21. Washer | 33. Handle knob |
| 10. O-ring | 22. Screw | 34. Handle rivet |
| 11. Main shaft nut | 23. Pin | |
| 12. Pin | 24. Bearing support | |

Left/right hand retrieve instructions:

1. Separate spool (#2) from frame (#1).
2. Remove one way bearing cover.
3. Remove and flip one-way bearing.
4. Reassemble the reel.

For warranty issue, please check www.amundson.ca or send us an email at info@amundson.ca