



Part No.	Description	Part No.	Description	Part No.	Description
1	Screw(handle nut)	29	Clutch Cam	73	Handle Knobe Shaft
2	Handle Nut Cap	30	Screw(clutch cam)	74	Shaft Tube
3	Handle Nut	31	Yoke	76	Handle Knobe
4	Crank Ass'y	32	Pinion Gear	77	Handle Knobe Cap
5	Friction Washer	34	Clutch Spring	78	Screw
6	StarHandle Ass'y	36	Push Button	80	Yoke Spring
8	Drag Spring Washer	37	E-Ring	82	Washer
9	Click Spring	38	Holder Guide	83	Washer(guide bushing)
10	Washer	39	Guide Bushing	84	Scew (Right Cover)
11	Click Holder	40	Line Guide Holder	85	Screw(right cover)-m
12	Ball Bearing	42	Return Pawl	86	Screw(right cover)-st
13	Oneway Clutch	43	Pawl Cap	89	Screw
14	Key Washer	44	Level Wind Guard	90	Space Washer(spool cover)
15	Drag Washer	45	Worm Shaft	91	Ball Bearing
16	Drive Gear	46	Connecting Gear	92	Bearing Retainer-big
17	Washer(ratchet)	47	Screw(front cover)	94	O-Ring
18	Ratchet	48	Front Cover	95	Ball Bearing
19	Gear Shaft	49	Right Cover	96	Washer(guide bushing)
20	Carriage screw gear	52	Spool Ass'y	105	Left Cover
21	Screw(gear shaft retainer)	53	Cushion Rubber	106	Swich
22	Gear Shaft Retainer	54	Brake Washer(control cap)	111	Spring
23	Ball Bearing	55	Control Cap	112	Lock Retainer
24	E-Ring	56	Bearing Retainer-Small	113	Lock Plate
25	Clutch Arm Spring	63	Screw	120	Screw
26	Clutch Pawl	66	Spool Cover	121	Ball Bearing
27	Frame	72	Ball Bearing	122	Ball Bearing
28	Spring Holder	72B	Ball Bearing		