



1 - Main Housing □	JX4.6-001	15 - Spool Spring Washer (2 req.) □	JX4.6-015	30 - End Housing	JX4.6-030	45 - Teflon Washers (2 req.) □	JX4.6-045	58 - Knob Bearing	JX4.6-058	73 - Reel Foot Studs (2 req.) □	JX4.6-073
2 - Gear cover □	JX4.6-002	16 - Spool Spring □	JX4.6-016	31 - Dog □ □	JX4.6-031	46 - Drive Washer □	JX4.6-046	59 - Knob Washer (optional) □	JX4.6-058	74 - Reel Foot Clamp □	JX4.6-074
3 - Cover Screw (2 req.) □	JX4.6-003	17 - Brake Bearing □	JX4.6-017	32 - Dog Cover Screw (2 req.) □	JX4.6-032	47 - Preset Washer □	JX4.6-047	60 - Spring Washer □	JX4.6-060	75 - Reel Foot Nut	JX4.6-075
4 - Spool Shaft □ □	JX4.6-004	18 - Brake Disk □ □	JX4.6-018	33 - Dog Cover □ □	JX4.6-033	48 - Preset Spring □	JX4.6-048	61 - Lock Washer □	JX4.6-061	76 - MC ASSY :	JX4.6-076
4A-Shaft Shoulder □	JX4.6-004A	20 - Antireverse Gear □	JX4.6-020	34 - Stop Pin (2 req.) □	JX4.6-034	49 - Preset Knob □	JX4.6-049	62 - Nut □ □	JX4.6-062	A- MC knob	
4B-Shaft Pin □ □	JX4.6-004B	21 - Retainer Ring □	JX4.6-021	35 - Pin Screw (2 req.) □	JX4.6-035	49A- Preset Knob Detents (2 req.) □	JX4.6-049A	63 - Knob Cap □ □	JX4.6-063	B- MC Scrow	
5 - Belleville Washers (6 req.) □	JX4.6-005	22 - Pinion Gear □	JX4.6-022	36 - Handle Knob □	JX4.6-036	50 - Crank Arm □ □	JX4.6-050	64 - Knob Cap Screw (2 req.) □	JX4.6-064	C- MC Spring	
6 - Pusher Bushing □	JX4.6-006	23 - Pinion Bearing □	JX4.6-023	37 - Knob Screw □	JX4.6-037	51 - Crank Arm Washer □	JX4.6-051	65 - Clicker Pin □ □	JX4.6-065	D- MC Ball	
7 - Spool Bearing □	JX4.6-007	24 - Drive Shaft □ □	JX4.6-024	38 - End Housing Screw (3 req.) □	JX4.6-038	52 - Acorn Nut □ □	JX4.6-052	66 - Clicker Housing □	JX4.6-066	E- MC Washer	
8 - Spool Tube □ □	JX4.6-008	25 - Connection Arm □	JX4.6-025	39 - Drive Shaft Tube □	JX4.6-039	53 - Locking Plate □	JX4.6-053	67 - Clicker Washer □	JX4.6-067	F- MC housing	
9 - Clicker Gear Retainer Ring □	JX4.6-009	26 - Friction Ring	JX4.6-026	40 - Drive Shaft Washer □	JX4.6-040	54 - Locking Plate Screw (2 req.) □	JX4.6-054	68 - Clicker Spring (2req.) □	JX4.6-068	G- MC stator	
10 - Clicker Gear □	JX4.6-010	27 - Friction Washer □	JX4.6-027	41 - Male Cam □ □	JX4.6-041	55A-Handle Shaft Washer □	JX4.6-055A	69 - Clicker Arm □ □	JX4.6-069	H- MC shaft	
11 - Spool □ □	JX4.6-011	28 - Drive Shaft Gear □	JX4.6-028	42 - Male Cam Pin (3 req.) □	JX4.6-042	55 - Handle Knob Shaft □	JX4.6-055	70 - Pin E Clip □ □	JX4.6-070		
12 - Brake Pad □ □	JX4.6-012	28A- Drive Shaft Washer	JX4.6-028A	43 - Female Cam □	JX4.6-043	56 - Handle Shaft Bearing (2 req.) □	JX4.6-056	71 - Reel Foot □ □	JX4.6-071		
14 - Spool Bearing □	JX4.6-014	29 - Drive Shaft Bearing (2 req.) □	JX4.6-029	44 - Lever Arm □ □	JX4.6-044	57 - Handle Knob □	JX4.6-057	72 - Reel Foot Screw □	JX4.6-072		