



1 - Main Housing	JX6.0-001	15 - Spool Spring Washer (2 req.)	JX6.0-015	30 - End Housing	JX6.0-030	45 - Teflon Washer (2req.)	JX6.0-045	58 - Knob Bearing	JX6.0-058	73 - Reel Foot Studs (2 req.)	JX6.0-073
2 - Gear cover	JX6.0-002	16 - Spool Spring	JX6.0-016	31 - Dog	JX6.0-031	46 - Drive Washer	JX6.0-046	59 - Knob Washer (optional)	JX6.0-058	74 - Reel Foot Clamp	JX6.0-074
3 - Cover Screw (2 req.)	JX6.0-003	17 - Brake Bearing	JX6.0-017	32 - Dog Cover Screw (2 req.)	JX6.0-032	47 - Preset Washer	JX6.0-047	60 - Spring Washer	JX6.0-060	75 - Reel Foot Nut	JX6.0-075
4 - Spool Shaft	JX6.0-004	18 - Brake Disk	JX6.0-018	33 - Dog Gear	JX6.0-033	48 - Preset Spring	JX6.0-048	61 - Lock Washer	JX6.0-061	76 - MC ASSY :	JX6.0-076
4A - Shaft Shoulder	JX6.0-004A	20 - Antireverse Gear	JX6.0-020	34 - Stop Pin (2 req.)	JX6.0-034	49 - Preset Knob	JX6.0-049	62 - Nut	JX6.0-062	A- MC knob	
4B - Shaft Pin	JX6.0-004B	21 - Retainer Ring	JX6.0-021	35 - Pin Screw (2 req.)	JX6.0-035	49a- Preset Knob Detent (2 req.)	JX6.0-049	63 - Knob Cap	JX6.0-063	B- MC Scrow	
5 - Belleville Washers (6 req.)	JX6.0-005	22 - Pinion Gear	JX6.0-022	36 - Handle Knob	JX6.0-036	50 - Crank Arm	JX6.0-050	64 - Knob Cap Screw	JX6.0-064	C- MC Spring	
6 - Pusher Bushing	JX6.0-006	23 - Pinion Bearing	JX6.0-023	37 - Knob Screw	JX6.0-037	51 - Crank Arm Washer	JX6.0-051	65 - Clicker Pin	JX6.0-065	D- MC Ball	
7 - Spool Bearing	JX6.0-007	24 - Drive Shaft	JX6.0-024	38 - End Housing Screw (3 req.)	JX6.0-038	52 - Acorn Nut	JX6.0-052	66 - Clicker Housing	JX6.0-066	E- MC Washer	
8 - Spool Tube	JX6.0-008	25 - Connection Arm	JX6.0-025	39 - Drive Shaft Tube	JX6.0-039	53 - Locking Plate	JX6.0-053	67 - Clicker Washer	JX6.0-067	F- MC housing	
9 - Clicker Gear Retainer Ring	JX6.0-009	26 - Friction Ring	JX6.0-026	40 - Drive Shaft Washer	JX6.0-040	54 - Locking Plate Screw (2 req.)	JX6.0-054	68 - Clicker Spring (2req.)	JX6.0-068	G- MC stator	
10 - Clicker Gear	JX6.0-010	27 - Friction Washer	JX6.0-027	41 - Male Cam	JX6.0-041	55A-Handle Shaft Washer	JX6.0-055A	69 - Clicker Arm	JX6.0-069	H- MC shaft	
11 - Spool	JX6.0-011	28 - Drive Shaft Gear	JX6.0-028	42 - Male Cam Pin (3 req.)	JX6.0-042	55 - Handle Knob Shaft	JX6.0-055	70 - Pin E Clip	JX6.0-070		
12 - Brake Pad	JX6.0-012	28A- Drive Shaft Washer	JX6.0-028A	43 - Female Cam	JX6.0-043	56 - Handle Shaft Bearing (2 req.)	JX6.0-056	71 - Reel Foot	JX6.0-071		
14 - Spool Bearing	JX6.0-014	29 - Drive Shaft Bearing (2 req.)	JX6.0-029	44 - Lever Arm	JX6.0-044	57 - Handle Knob	JX6.0-057	72 - Reel Foot Screw	JX6.0-072		