



| | | | | | | | | | | | |
|-----------------------------------|------------|-------------------------------------|------------|-----------------------------------|-----------|--------------------------------------|------------|-------------------------------|-----------|---------------------------|-----------|
| 1 - Main Housing □ | LX4.6-001 | 15 - Spool Spring Washer (2 req.) □ | LX4.6-015 | 30 - End Housing □ | LX4.6-030 | 45 - Teflon Washer (2 req.) □ | LX4.6-045 | 58 - Knob Bearing □ | LX4.6-058 | 73 - Reel Foot (2 req.) □ | LX4.6-073 |
| 2 - Gear cover □ □ | LX4.6-002 | 16 - Spool Spring □ | LX4.6-016 | 31 - Dog □ □ | LX4.6-031 | 46 - Drive Washer □ | LX4.6-046 | 59- Knob Washer (optional) □ | LX4.6-058 | 74 - Reel Foot Clamp □ | LX4.6-074 |
| 3 - Cover Screw (2 req.) □ | LX4.6-003 | 17 - Brake Bearing □ | LX4.6-017 | 32 - Dog Cover Screw (2 req.) □ | LX4.6-032 | 47 - Preset Washer □ | LX4.6-047 | 60 - Spring Washer □ | LX4.6-060 | 75 - Reel Foot Nut □ | LX4.6-075 |
| 4 - Spool Shaft □ □ | LX4.6-004 | 18 - Brake Disk □ □ | LX4.6-018 | 33 - Dog Cover □ □ | LX4.6-033 | 48 - Preset Spring □ | LX4.6-048 | 61 - Lock Washer □ | LX4.6-061 | 76- MC ASSY: | LX4.6-076 |
| 4A-Shaft Shoulder □ | LX4.6-004A | 20 - Antireverse Gear □ | LX4.6-020 | 34 - Stop Pin (2 req.) □ | LX4.6-034 | 49 - Preset Knob □ □ | LX4.6-049 | 62 - Nut □ □ | LX4.6-062 | A- MC knob | |
| 4B-Shaft Pin □ □ | LX4.6-004B | 21 - Retainer Ring □ | LX4.6-021 | 35 - Pin Screw (2 req.) □ | LX4.6-035 | 49A- Preset Knob Detent (2 req.) □ | LX4.6-49a | 63 - Knob Cap □ □ | LX4.6-063 | B- MC Screw | |
| 5 - Belleville Washers (6 req.) □ | LX4.6-005 | 22 - Pinion Gear □ | LX4.6-022 | 36 - Handle Knob □ | LX4.6-036 | 50 - Crank Arm □ □ | LX4.6-050 | 64 - Knob Cap Screw □ | LX4.6-064 | C- MC Spring | |
| 6 - Pusher Bushing □ | LX4.6-006 | 23 - Pinion Bearing □ | LX4.6-023 | 37 - Knob Screw □ | LX4.6-037 | 51 - Crank Arm Washer □ | LX4.6-051 | 65 - Clicker Pin □ □ | LX4.6-065 | D- MC Ball | |
| 7 - Spool Bearing □ | LX4.6-007 | 24 - Drive Shaft □ □ | LX4.6-024 | 38 - End Housing Screw (3 req.) □ | LX4.6-038 | 52 - Acorn Nut □ □ | LX4.6-052 | 66 - Clicker Housing □ | LX4.6-066 | E- MC Washer | |
| 8 - Spool Tube □ □ | LX4.6-008 | 25 - Connection Arm □ | LX4.6-025 | 39 - Drive Shaft Tube □ | LX4.6-039 | 53 - Locking Plate □ | LX4.6-053 | 67 - Clicker Washer □ | LX4.6-067 | F- MC housing | |
| 9 - Clicker Gear Retainer Ring □ | LX4.6-009 | 26 - Friction Ring | LX4.6-026 | 40 - Drive Shaft Washer □ | LX4.6-040 | 54 - Locking Plate Screw (2 req.) □ | LX4.6-054 | 68 - Clicker Spring (2req.) □ | LX4.6-068 | G- MC stator | |
| 10 - Clicker Gear □ | LX4.6-010 | 27 - Friction Washer □ | LX4.6-027 | 41 - Male Cam □ □ | LX4.6-041 | 55A-Handle Shaft Washer □ | LX4.6-055A | 69 - Clicker Arm □ □ | LX4.6-069 | H- MC shaft □ | |
| 11- Spool □ □ | LX4.6-011 | 28 - Drive Gear □ | LX4.6-028 | 42 - Male Cam Pin (3 req.) □ | LX4.6-042 | 55 - Handle Knob Shaft □ | LX4.6-055 | 70 - Pin E Clip □ □ | LX4.6-070 | | |
| 12 - Brake Pad □ □ | LX4.6-012 | 28A- Drive Shaft Washer | LX4.6-028A | 43 - Female Cam □ | LX4.6-043 | 56 - Handle Shaft Bearing (2 req.) □ | LX4.6-056 | 71 - Reel Foot □ | LX4.6-071 | | |
| 14 - Spool Bearing □ | LX4.6-014 | 29 - Drive Shaft Bearing (2 req.) □ | LX4.6-029 | 44 - Lever Arm □ □ | LX4.6-044 | 57 - Handle Knob □ | LX4.6-057 | 72 - Reel Foot □ □ | LX4.6-072 | | |