



1 - Main Housing	MXL 5.8:1-001	14 - Spool Bearing	MXL 5.8:1-014	28A - Drive Shaft Washer	MXL 5.8:1-028A	43 - Female Cam	MXL 5.8:1-043□	56 - Handle Shaft Bearing	MXL 5.8:1-056□	71 - Reel Foot	MXL 5.8:1-071
2 - Gear cover	MXL 5.8:1-002	15 - Spool Spring Washers (2 req.)	MXL 5.8:1-015	29 - Drive Shaft Bearings (2 req.)	MXL 5.8:1-029	44 - Lever Arm	MXL 5.8:1-044	57 - Handle Knob	MXL 5.8:1-057	72 - Reel Foot Screw	MXL 5.8:1-072
3 - Cover Screws (2 req.)	MXL 5.8:1-003	16 - Spool Spring	MXL 5.8:1-016	30 - End Housing	MXL 5.8:1-030	45 - Teflon Washers (2 req.)	MXL 5.8:1-045	58 - Knob Bearing	MXL 5.8:1-058	73 - Clamp	MXL 5.8:1-073
4 - Spool Shaft□	MXL 5.8:1-004	17 - Brake Bearing	MXL 5.8:1-017	31 - Dog	MXL 5.8:1-031	46 - Drive Washer	MXL 5.8:1-046	59 - Knob Washer (optional)	MXL 5.8:1-059	74 - Clamp Screws (2 req.)	MXL 5.8:1-074
4A-Shaft Shoulder	MXL 5.8:1-004A	18 - Brake Disk□	MXL 5.8:1-018	32 - Dog Cover Screws (2 req.)	MXL 5.8:1-032	47 - Preset Washer	MXL 5.8:1-047	60 - Spring Washer	MXL 5.8:1-060	75 - MC ASSY :	MXL 5.8:1-075
4B-Shaft Pin	MXL 5.8:1-004B	19 - N/A	MXL 5.8:1-019	33 - Dog Cover	MXL 5.8:1-033	48 - Preset Spring	MXL 5.8:1-048	61 - Lock Washer	MXL 5.8:1-061	A- MC Knob	
5 - Belleville Washers (4 req.)	MXL 5.8:1-005	20 - Antireverse Gear	MXL 5.8:1-020	34 - Stop Pin (2 req.)	MXL 5.8:1-034	49A - Preset Knob Detent (2 req.)	MXL 5.8:1-049A	62 - Nut	MXL 5.8:1-062	B- MC Screw	
6 - Pusher Bushing	MXL 5.8:1-006	21 - Disk Ring	MXL 5.8:1-021	35 - Pin Screws (2 req.)	MXL 5.8:1-035	49 - Preset Knob□	MXL 5.8:1-049	63 - Knob Cap	MXL 5.8:1-063	C- MC Spring	
7 - Spool Bearing	MXL 5.8:1-007	22 - Pinion Gear	MXL 5.8:1-022	36 - Handle Knob	MXL 5.8:1-036	50 - Crank Arm	MXL 5.8:1-050	64 - Knob Cap Screws (2 req.)	MXL 5.8:1-064	D- MC Ball	
8 - Spool Tube	MXL 5.8:1-008	23 - Pinion Bearing	MXL 5.8:1-023	37 - Knob Screw	MXL 5.8:1-037	51 - Crank Arm Washer	MXL 5.8:1-051	65 - Clicker	MXL 5.8:1-065	E- MC Washer	
9 - Clicker Gear Retainer Ring	MXL 5.8:1-009	24 - Drive Shaft	MXL 5.8:1-024	38 - End Housing Screws (3 req.)	MXL 5.8:1-038	52 - Acorn Nut	MXL 5.8:1-052	66 - Clicker Housing	MXL 5.8:1-066	F- MC housing	
10 - Clicker Gear	MXL 5.8:1-010	25 - Connection Arm	MXL 5.8:1-025	39 - Drive Shaft Tube	MXL 5.8:1-039	53 - Locking Plate	MXL 5.8:1-053	67 - Clicker Washer	MXL 5.8:1-067	G- MC Stator	
11 - Spool	MXL 5.8:1-011	26 - Friction Ring	MXL 5.8:1-026	40 - Drive Shaft Washer	MXL 5.8:1-040	54 - Locking Plate Screws (2 req.)	MXL 5.8:1-054	68 - Clicker Arm Springs (2 req.)	MXL 5.8:1-068	H- MC Shaft	
12 - Brake Pad	MXL 5.8:1-012	27 - Friction Washer	MXL 5.8:1-027	41 - Male Cam	MXL 5.8:1-041	55 - Handle Knob Shaft	MXL 5.8:1-055	69 - Clicker Arm	MXL 5.8:1-069		
13 - N/A	MXL 5.8:1-013	28 - Drive Shaft Gear	MXL 5.8:1-028	42 - Male Cam Pins (3 req.)	MXL 5.8:1-042	55A - Handle Knob Washer	MXL 5.8:1-055A	70 - Clicker E-Clip	MXL 5.8:1-070		