



1 - End Housing Screw (16 req.)	EX302-001	46- End Housing	EX302-046	91- Cover Screws (2 req.)	EX302-091
2 - End Cap Housing	EX302-002	47- Spacers (3 req.)	EX302-047	92- Crank Arm Washer	EX302-092
3 - Dog Pin (2 req.)	EX302-003	48- Glide Plate	EX302-048	93- Handle Stem Washer (2 req.)	EX302-093
4 - End Cap Bearing	EX302-004	49- Plate Screws (3 req.)	EX302-049	94- Handle Stem	EX302-094
5 - Under Dog Washer (2 req.)	EX302-005	50- Lever Arm	EX302-050	95- Shoulder Bolt	EX302-095
6 - Dog (2 req.)	EX302-006	51- Knob Slide	EX302-051	96- Handle	EX302-096
7 - Dog Springs (2 req.)	EX302-007	52- Lever Knob Head	EX302-052	97- Lock Screw Nut	EX302-097
8 - Washer	EX302-008	53- Lever Button E-Clip	EX302-053	98- Lock Screw Washer	EX302-098
9 - Spring Screws (2 req.)	EX302-009	54- Lever Knob Nut	EX302-054	99- Handle Lock Screw	EX302-099
10- Harness/Clicker Plate Screws (8 req.)	EX302-010	55- Lever Button Spring	EX302-055	100- Clicker Guide Screw	EX302-100
11- Harness Lag (2 req.)	EX302-011	56- Lever Knob Button	EX302-056	101- Lock Washer	EX302-101
12- Body	EX302-012	57- Washer	EX302-057	102- Guide Pin	EX302-102
13- Limit Pin E Clip (2 req.)	EX302-013	58- Nylon Spacer	EX302-058	103- Clicker Guide	EX302-103
14- Limit Pin Sleeve (2 req.)	EX302-014	59- Preset Button C-Clip	EX302-059	104- Clicker Position Spring	EX302-104
15- Limit Pin Spring (2 req.)	EX302-015	60- Cover Plate	EX302-060	105- Clicker Position Ball	EX302-105
16- "Full" Limit Pin	EX302-016	61- O-Ring	EX302-061	106- Clicker C-Ring	EX302-106
17- "Free" Limit Pin	EX302-017	62- Cover Plate Screw (3 req.)	EX302-062	107- Clicker Washer	EX302-107
18- Left Break Screw	EX302-018	63- Preset Knob	EX302-063	108- Clicker Pin	EX302-108
19- Brake Disc Pin C-Clips (3 req.)	EX302-019	64- Stop Nut	EX302-064	109- Clicker Spring	EX302-109
20- Left Brake	EX302-020	65- Stop Nut Pin	EX302-065	110- Clicker Plastic Washer	EX302-110
21- Brake Pads (2 req.)	EX302-021	66- Left Washer	EX302-066	111- Clicker Spacer Tube	EX302-111
22- Brake Disc	EX302-022	67- Low Speed Gear	EX302-067	112- Clicker Head Pin	EX302-112
23- Shaft End Pin (2 req.)	EX302-023	68- Center Washer	EX302-068	113- Clicker Knob	EX302-113
24- Brake Retracting Spring	EX302-024	69- High Speed Gear	EX302-069	114- Rod Mount	EX302-114
25- Right Brake	EX302-025	70- Right Washer	EX302-070	115- Lock Washers (4 req.)	EX302-115
26- Brake Disc Pin (6 req.)	EX302-026	71- Shaft Fork	EX302-071	116- Mount Screw (4 req.)	EX302-116
27- Brake Pin Spring (3 req.)	EX302-027	72- Fork Spring	EX302-072	117- Rod Mount Bolt (2 req.)	EX302-117
28- Spool Bearing (2 req.)	EX302-028	73- Pusher	EX302-073	118- Rod Mount Clamp	EX302-118
29- Spool	EX302-029	74- Pusher Spring	EX302-074	119- Clamp Nut (2 req.)	EX302-119
30- Clicker Plate	EX302-030	75- Drive Shaft	EX302-075		
31- Spool Tube	EX302-031	76- Pusher Washer	EX302-076		
32- Spool Shaft	EX302-032	77- Pusher E-Clip	EX302-077		
33- Spacer	EX302-033	78- Drive Shaft Bearing (2 req.)	EX302-078		
34- Low Speed Pinion Gear	EX302-034	79- Drive Shaft Tube	EX302-079		
35- High Speed Pinion Gear	EX302-035	80- Drive Shaft Washer	EX302-080		
36- Locking Dowell Pin	EX302-036	81- Crank Arm	EX302-081		
37- Belleville Washers (2 req.)	EX302-037	82- Washer	EX302-082		
38- Gear Bearing	EX302-038	83- Push Pin E-Clip	EX302-083		
39- Preset Nut	EX302-039	84- Crank Arm Nut	EX302-084		
40- Male Cam	EX302-040	85- Lock Plate	EX302-085		
41- Male Cam Pin (2 req.)	EX302-041	86- Spring Pin	EX302-086		
42- Female Cam	EX302-042	87- Release Arm Spring	EX302-087		
43- Cam Housing Screw (2 req.)	EX302-043	88- Release Arm	EX302-088		
44- Cam Housing Washer (2 req.)	EX302-044	89- Push Knob	EX302-089		
45- Cam Housing	EX302-045	90- Crank Arm Cover	EX302-090		