



1 - End Housing Screw (16 req.)	EXW302-001	46- End Housing	EXW302-046	90- Crank Arm Cover	EXW302-090
2 - End Cap Housing	EXW302-002	47- Spacers (3 req.)	EXW302-047	91- Cover Screws (2 req.)	EXW302-091
3 - Dog Pin (2 req.)	EXW302-003	48- Glide Plate	EXW302-048	92A- Handle Shaft Washer	EXW302-092A
4 - End Cap Bearing	EXW302-004	49- Plate Screws (3 req.)	EXW302-049	92- Handle Knob Shaft	EXW302-092
5 - Under Dog Washer (2 req.)	EXW302-005	50- Lever Arm	EXW302-050	93- Handle Shaft Bearing	EXW302-093
6 - Dog (2 req.)	EXW302-006	51- Knob Slide	EXW302-051	94- Handle Shaft Tube	EXW302-094
7 - Dog Springs(2 req.)	EXW302-007	52- Lever Knob Head	EXW302-052	95- Knob Bearing (2 req.)	EXW302-095
8 - Washer	EXW302-008	53- Lever Button E-Clip	EXW302-053	96- Spring Washer	EXW302-096
9 - Spring Screws (2 req.)	EXW302-009	54- Lever Knob Nut	EXW302-054	97- Lock Washer	EXW302-097
10- Harness/Clicker Plate Screws (8 req.)	EXW302-010	55- Lever Button Spring	EXW302-055	98- Nut	EXW302-098
11- Harness Lag (2 req.)	EXW302-011	56- Lever Knob Button	EXW302-056	99- Handle Knob	EXW302-099
12- Body	EXW302-012	57- N/A	N/A	100- Clicker Guide Screw	EXW302-100
13- Limit Pin E Clip (2 req.)	EXW302-013	58- Nylon Spacer	EXW302-058	101- Lock Washer	EXW302-101
14- Limit Pin Sleeve (2 req.)	EXW302-014	59- Preset Button C-Clip	EXW302-059	102- Guide Pin	EXW302-102
15- Limit Pin Spring (2 req.)	EXW302-015	60- Cover Plate	EXW302-060	103- Clicker Guide	EXW302-103
16- "Full" Limit Pin	EXW302-016	61- O-Ring	EXW302-061	104- Clicker Position Spring	EXW302-104
17- "Free" Limit Pin	EXW302-017	62- Cover Plate Screw (3 req.)	EXW302-062	105- Clicker Position Ball	EXW302-105
18- Left Break Screw & Washer	EXW302-018	63A- Preset Knob Ball-Spring	EXW302-063A	106-Clicker C-Ring	EXW302-106
19- Brake Disc Pin C-Clips (3 req.)	EXW302-019	63- Preset Knob	EXW302-063	107-Clicker Washer	EXW302-107
20- Left Brake	EXW302-020	64- Stop Nut	EXW302-064	108- Clicker Pin	EXW302-108
21- Brake Pads (2 req.)	EXW302-021	65-Stop Nut Pin	EXW302-065	109-Clicker Spring	EXW302-109
22- Brake Disc	EXW302-022	66- Left Washer	EXW302-066	110-Clicker Plastic Washer	EXW302-110
23- Shaft End Pin (2 req.)	EXW302-023	67- Low Speed Gear	EXW302-067	111-Clicker Spacer Tube	EXW302-111
24- Brake Retracting Spring	EXW302-024	68- Center Washer	EXW302-068	112-Clicker Head Pin	EXW302-112
25- Right Brake	EXW302-025	69- High Speed Gear	EXW302-069	113-Clicker Knob	EXW302-113
26- Brake Disc Pin (6 req.)	EXW302-026	70- Right Washer	EXW302-070	114-Rod Mount	EXW302-114
27- Brake Pin Spring (3 req.)	EXW302-027	71- Shaft Fork	EXW302-071	115-Lock Washers (4 req.)	EXW302-115
28- Spool Bearing (2 req.)	EXW302-028	72- Fork Spring	EXW302-072	116-Mount Screw (4 req.)	EXW302-116
29- Spool	EXW302-029	73- Pusher	EXW302-073	117-Rod Mount Bolt (2 req.)	EXW302-117
30- Clicker Plate	EXW302-030	74- Pusher Spring	EXW302-074	118-Rod Mount Clamp	EXW302-118
31- Spool Tube	EXW302-031	75- Drive Shaft	EXW302-075	119-Clamp Nut (2 req.)	EXW302-119
32- Spool Shaft	EXW302-032	76- Pusher Washer	EXW302-076		
33- Spacer	EXW302-033	77- Pusher E-Clip	EXW302-077		
34- Low Speed Pinion Gear	EXW302-034	78- Drive Shaft Bearing (2 req.)	EXW302-078		
35- High Speed Pinion Gear	EXW302-035	79- Drive Shaft Tube	EXW302-079		
36- Locking Dowell Pin	EXW302-036	80- Drive Shaft Washer	EXW302-080		
37- Belleville Washers (2 req.)	EXW302-037	81- Crank Arm	EXW302-081		
38- Gear Bearing	EXW302-038	82- Washer	EXW302-082		
39- Preset Nut	EXW302-039	83- Push Pin E-Clip	EXW302-083		
40- Male Cam	EXW302-040	84- Crank Arm Nut	EXW302-084		
41- Male Cam Pin (2 req.)	EXW302-041	85- Lock Plate	EXW302-085		
42- Female Cam	EXW302-042	86- Spring Pin	EXW302-086		
43- Cam Housing Screw (2 req.)	EXW302-043	87- Release Arm Spring	EXW302-087		
44- Cam Housing Washer (2 req.)	EXW302-044	88- Release Arm	EXW302-088		
45- Cam Housing	EXW302-045	89- Push Knob	EXW302-089		