



1 - End Housing Screw (16 req.)	EXW802-001	46- End Housing	EXW802-046	90- Crank Arm Cover	EXW802-090
2 - End Cap Housing	EXW802-002	47- Spacers (3 req.)	EXW802-047	91- Cover Screws (2 req.)	EXW802-091
3 - Dog Pin (2 req.)	EXW802-003	48- Glide Plate	EXW802-048	92A- Handle Shaft Washer	EXW802-092A
4 - End Cap Bearing	EXW802-004	49- Plate Screws (3 req.)	EXW802-049	92- Handle Knob Shaft	EXW802-092
5 - Under Dog Washer (2 req.)	EXW802-005	50- Lever Arm	EXW802-050	93- Handle Shaft Bearing	EXW802-093
6 - Dog (2 req.)	EXW802-006	51- Knob Slide	EXW802-051	94- Handle Shaft Tube	EXW802-094
7 - Dog Springs(2 req.)	EXW802-007	52- Lever Knob Head	EXW802-052	95- Knob Bearing (2 req.)	EXW8802-095
8 - Washer	EXW802-008	53- Lever Button E-Clip	EXW802-053	96- Spring Washer	EXW802-096
9 - Spring Screws (2 req.)	EXW802-009	54- Lever Knob Nut	EXW802-054	97- Lock Washer	EXW802-097
10- Harness/Clicker Plate Screws (8 req.)	EXW802-010	55- Lever Button Spring	EXW802-055	98- Nut	EXW802-098
11- Harness Lag (2 req.)	EXW802-011	56- Lever Knob Button	EXW802-056	99- Handle Knob	EXW802-099
12- Body	EXW802-012	57- N/A	N/A	100- Clicker Guide Screw	EXW802-100
13- Limit Pin E Clip (2 req.)	EXW802-013	58- Nylon Spacer	EXW802-058	101- Lock Washer	EXW802-101
14- Limit Pin Sleeve (2 req.)	EXW802-014	59- Preset Button C-Clip	EXW802-059	102- Guide Pin	EXW802-102
15- Limit Pin Spring (2 req.)	EXW802-015	60- Cover Plate	EXW802-060	103- Clicker Guide	EXW802-103
16- "Full" Limit Pin	EXW802-016	61- O-Ring	EXW802-061	104- Clicker Position Spring	EXW802-104
17- "Free" Limit Pin	EXW802-017	62- Cover Plate Screw (3 req.)	EXW802-062	105- Clicker Position Ball	EXW802-105
18- Left Break Screw & Washer	EXW802-018	63A- Preset Knob Ball-Spring	EXW802-063A	106-Clicker C-Ring	EXW802-106
19- Brake Disc Pin C-Clips (3 req.)	EXW802-019	63- Preset Knob	EXW802-063	107-Clicker Washer	EXW802-107
20- Left Brake	EXW802-020	64- Stop Nut	EXW802-064	108- Clicker Pin	EXW802-108
21- Brake Pads (2 req.)	EXW802-021	65-Stop Nut Pin	EXW802-065	109-Clicker Spring	EXW802-109
22- Brake Disc	EXW802-022	66- Left Washer	EXW802-066	110-Clicker Plastic Washer	EXW802-110
23- Shaft End Pin (2 req.)	EXW802-023	67- Low Speed Gear	EXW802-067	111-Clicker Spacer Tube	EXW802-111
24- Brake Retracting Spring	EXW802-024	68- Center Washer	EXW802-068	112-Clicker Head Pin	EXW802-112
25- Right Brake	EXW802-025	69- High Speed Gear	EXW802-069	113-Clicker Knob	EXW802-113
26- Brake Disc Pin (6 req.)	EXW802-026	70- Right Washer	EXW802-070	114-Rod Mount	EXW802-114
27- Brake Pin Spring (3 req.)	EXW802-027	71- Shaft Fork	EXW802-071	115-Lock Washers (4 req.)	EXW802-115
28- Spool Bearing (2 req.)	EXW802-028	72- Fork Spring	EXW802-072	116-Mount Screw (4 req.)	EXW802-116
29- Spool	EXW802-029	73- Pusher	EXW802-073	117-Rod Mount Bolt (2 req.)	EXW802-117
30- Clicker Plate	EXW802-030	74- Pusher Spring	EXW802-074	118-Rod Mount Clamp	EXW802-118
31- Spool Tube	EXW802-031	75- Drive Shaft	EXW802-075	119-Clamp Nut (2 req.)	EXW802-119
32- Spool Shaft	EXW802-032	76- Pusher Washer	EXW802-076		
33- Spacer	EXW802-033	77- Pusher E-Clip	EXW802-077		
34- Low Speed Pinion Gear	EXW802-034	78- Drive Shaft Bearing (2 req.)	EXW802-078		
35- High Speed Pinion Gear	EXW802-035	79- Drive Shaft Tube	EXW802-079		
36- Locking Dowell Pin	EXW802-036	80- Drive Shaft Washer	EXW802-080		
37- Belleville Washers (2 req.)	EXW802-037	81- Crank Arm	EXW802-081		
38- Gear Bearing	EXW802-038	82- Washer	EXW802-082		
39- Preset Nut	EXW802-039	83- Push Pin E-Clip	EXW802-083		
40- Male Cam	EXW802-040	84- Crank Arm Nut	EXW802-084		
41- Male Cam Pin (2 req.)	EXW802-041	85- Lock Plate	EXW802-085		
42- Female Cam	EXW802-042	86- Spring Pin	EXW802-086		
43- Cam Housing Screw (2 req.)	EXW802-043	87- Release Arm Spring	EXW802-087		
44- Cam Housing Washer (2 req.)	EXW802-044	88- Release Arm	EXW802-088		
45- Cam Housing	EXW802-045	89- Push Knob	EXW802-089		