



1 - End housing screw (16 req.)	T-RXW502-001	42- Locking pin	T-RXW502-042	85- Push Pin E-Clip	T-RXW502-074
2 - End cap housing (for T-RX 50W)	T-RXW502-002	43- Spool shaft gear bearing	T-RXW502-043	89- Crank Arm Nut	T-RXW502-089
(for T-RX 50)	T-RX502-002	44- Preset nut	T-RXW502-044	90- Lock Plate	T-RXW502-090
3 - Dog pin (2 req.)	T-RXW502-003	45- Male cam	T-RXW502-045	91- Spring Pin	T-RXW502-091
4 - Dog spring (2 req.)	T-RXW502-004	46- Male cam pin (2 req.)	T-RXW502-046	92- Release Arm Spring	T-RXW502-092
5 - Spring screw (2 req.)	T-RXW502-005	47- Female cam	T-RXW502-047	93- Release Arm	T-RXW502-093
6 - Washer (2 req.)	T-RXW502-006	48- Cam housing screw (2 req.)	T-RXW502-048	94- Push Knob	T-RXW502-094
7 - End cap bearing	T-RXW502-007	49- Cam housing washer (2 req.)	T-RXW502-049	95- Crank Arm Cover	T-RXW502-095
8 - Under dog washer (2 req.)	T-RXW502-008	50- Cam housing	T-RXW502-050	96- Cover Screws (2 req.)	T-RXW502-096
9 - Dog (2 req.)	T-RXW502-009	51- End housing	T-RXW502-051	97- Clicker Guide Screw (2 req.)	T-RXW502-097
10- Harness leg (2 req.)	T-RXW502-010	52- Spacer (3 req.)	T-RXW502-052	98- Lock Washer (2 req.)	T-RXW502-098
11- Screws (8 req.)	T-RXW502-011	53- Slide Plate	T-RXW502-053	99- Clicker Guide	T-RXW502-099
12- Body (for T-RX 50W)	T-RXW502-012	54- Plate Screw (3 req.)	T-RXW502-054	100- Clicker Position Spring	T-RXW502-100
(for T-RX 50)	T-RX502-012	55- Drag Arm	T-RXW502-055	101- Clicker Position Ball	T-RXW502-101
13- Limit pin E-clip (2 req.)	T-RXW502-013	56- Knob Slide	T-RXW502-056	102- Clicker C-Ring	T-RXW502-102
14- Limit pin sleeve (2 req.)	T-RXW502-014	57- Drag Knob Head	T-RXW502-057	103- Clicker Plastic Washer	T-RXW502-103
15- Limit pin spring (2 req.)	T-RXW502-015	58- Drag Button E-Clip	T-RXW502-058	104- Clicker pin	T-RXW502-104
16- "Full" limit pin	T-RXW502-016	59- Drag Knob Nut	T-RXW502-059	105- Clicker	T-RXW502-105
17- "Free" limit pin	T-RXW502-017	60- Drag Button Spring	T-RXW502-060	106- Clicker Spring	T-RXW502-106
18- Left break screw	T-RXW502-018	61- Drag Button	T-RXW502-061	107- Clicker Spacer Washer	T-RXW502-107
19- L/B lock washer	T-RXW502-019	62- Teflon Washer	T-RXW502-062	108- Clicker Spacer Tube	T-RXW502-108
20- L/B washer	T-RXW502-020	63- Preset Button C-Clip	T-RXW502-063	109- Clicker Head Pin	T-RXW502-109
21- Left brake	T-RXW502-021	64- Plate Washer (3 req.)	T-RXW502-064	110- Clicker Knob	T-RXW502-110
22- Brake pad (2 req.)	T-RXW502-022	65- Cover Plate	T-RXW502-065	111- Crank Arm Washer	T-RXW502-111
23- Brake disc pin E-dip (3 req.)	T-RXW502-023	66- O-Ring	T-RXW502-066	112- Handle Stem Washer (2 req.)	T-RXW502-112
24- Left disc brake	T-RXW502-024	67- Cover Plate Screw (3 req.)	T-RXW502-067	113- Handle Stem	T-RXW502-113
25- Left brake spring (3 req.)	T-RXW502-025	68- Preset Knob	T-RXW502-068	114- Shoulder Bolt	T-RXW502-114
26- Shaft end pin (2 req.)	T-RXW502-026	69- Stop Nut	T-RXW502-069	115- Handle	T-RXW502-115
27- Brake retracting spring	T-RXW502-027	70- Stop Nut Pin	T-RXW502-070	116- Lock Screw Nut	T-RXW502-116
28- Right brake	T-RXW502-028	71- Left Washer	T-RXW502-071	117- Lock Screw Washer	T-RXW502-117
29- Spool bearing (2 req.)	T-RXW502-029	72- Low Speed Gear	T-RXW502-072	118- Handle Lock Screw	T-RXW502-118
30- Spool (for T-RX 50W)	T-RXW502-030	73- Center Washer	T-RXW502-073	119- Rod Mount	T-RXW502-119
(for T-RX 50)	T-RX502-030	74- High Speed Gear	T-RXW502-074	120- Mount Screw (4 req.)	T-RXW502-120
31- Disc brake pin (6 req.)	T-RXW502-031	75- Right Washer	T-RXW502-075	121- Rod Mount Bolt (2 req.)	T-RXW502-121
32- Spool tube (for T-RX 50W)	T-RXW502-032	76- Shaft Fork	T-RXW502-076	122- Rod Mount Clamp	T-RXW502-122
(for T-RX 50)	T-RX502-032	77- Fork Spring	T-RXW502-077	123- Clamp Nut (2 req.)	T-RXW502-123
33- Right disc	T-RXW502-033	78- Pusher	T-RXW502-078		
34- Clicker plate (3 req.)	T-RXW502-034	79- Pusher Spring	T-RXW502-079		
35- Plate rivet (6 req.)	T-RXW502-035	80- Drive Shaft	T-RXW502-080		
36- Right brake spring	T-RXW502-036	81- Pusher Washer	T-RXW502-081		
37- Spacer washer	T-RXW502-037	82- Pusher E-Clip	T-RXW502-082		
38- Belleville washers (4 req.)	T-RXW502-038	83- Drive Shaft Bearing (2 req.)	T-RXW502-083		
39- Spool shaft (for T-RX 50W)	T-RXW502-039	84- Drive Shaft Tube	T-RXW502-084		
(for T-RX 50W)	T-RX502-039	85- Drive Shaft Washer	T-RXW502-085		
40- Low speed gear	T-RXW502-040	86- Crank Arm	T-RXW502-086		
41- High speed gear	T-RXW502-041	87- Washer	T-RXW502-087		