



1 - Main Housing	SX6/4-001	16 - Spool Spring	SX6/4-016	32 - Washer RT	SX6/4-032	47 - Pin Screw (2 req.)	SX6/4-047	61 - Crank Arm	SX6/4-061	76 - Knob Washer (optional)	SX6/4-076
2 - Gear cover	SX6/4-002	17 - Brake Bearing	SX6/4-017	33 - Fork	SX6/4-033	48 - End Housing Screw (3 req.)	SX6/4-048	62 - Crank Arm Washer	SX6/4-062	77 - Spring Washer	SX6/4-077
3 - Cover Screw (2 req.)	SX6/4-003	18 - Brake Disk	SX6/4-018	34 - Fork Spring	SX6/4-034	49 - Drive Shaft Tube	SX6/4-049	63 - Push Knob E-Clip	SX6/4-063	78 - Lock Washer	SX6/4-078
4 - Spool Shaft	SX6/4-004	19 - Antireverse Gear	SX6/4-019	35 - Pusher	SX6/4-035	50 - Drive Shaft Washer	SX6/4-050	64 - Crank Arm Nut	SX6/4-064	79 - Nut	SX6/4-079
4A-Shaft Shoulder	SX6/4-004A	20 - Disk Ring	SX6/4-020	36 - Pusher Spring	SX6/4-036	51 - Male Cam	SX6/4-051	65 - Posh Knob	SX6/4-065	80 - Knob Cap	SX6/4-080
4B-Shaft Pin	SX6/4-004B	22 - Large Pinion Gear	SX6/4-022	37 - Drive Shaft	SX6/4-037	51A-Male Cam Pin (3 req.)	SX6/4-051A	66 - Lock Plate	SX6/4-066	81 - Knob Cap Screws	SX6/4-081
5 - Belleville Washers (4 req.)	SX6/4-005	23 - Small Pinion Gear	SX6/4-023	38 - Pusher Washer	SX6/4-038	52-Female Cam	SX6/4-052	67 - Release Arm Spring	SX6/4-067	82 - Clicker Pin	SX6/4-082
6 - Pusher Bushing	SX6/4-006	24 - Pinion Bearing	SX6/4-024	39 - Pusher E-Clip	SX6/4-039	53 - Lever Arm	SX6/4-053	68 - Spring Pin	SX6/4-068	83 - Clicker Housing	SX6/4-083
7 - Spool Bearing	SX6/4-007	25 - Drive Shaft Stop Nut	SX6/4-025	40 - Drive Shaft Bearing (2 req.)	SX6/4-040	54 - Handle Knob	SX6/4-054	69 - Release Arm	SX6/4-069	84 - Clicker Washer	SX6/4-084
8 - Spool Tube	SX6/4-008	25A-Stop Nut Pin	SX6/4-025A	41 - End Housing	SX6/4-041	55 - Knob Screw	SX6/4-055	70 - Push Knob Cover	SX6/4-070	85 - Clicker Spring (2 req.)	SX6/4-085
9 - Clicker Gear Retainer Ring	SX6/4-009	26 - Connection Arm	SX6/4-026	41A-Dog Pin	SX6/4-041A	56 - Teflon Washer (2req.)	SX6/4-056	71 - Cover Screws (2 req.)	SX6/4-071	86 - Clicker Arm	SX6/4-086
10 - Clicker Gear	SX6/4-010	27 - Friction Ring	SX6/4-027	42 - Dog Washer	SX6/4-042	57 - Drive Washer	SX6/4-057	72A- Handle Shaft Washer	SX6/4-072A	87 - Clicker-E-Clip	SX6/4-087
11 - Spool	SX6/4-011	28 - Washer LF	SX6/4-028	43 - Dog	SX6/4-043	58 - Preset Washer	SX6/4-058	72-Handle Knob Shaft	SX6/4-072	88 - Reel Foot	SX6/4-088
12 - Brake Pad	SX6/4-012	29 - Drive Gear SML	SX6/4-029	44 - Dog Cover Screw (2 req.)	SX6/4-044	59 - Preset Spring	SX6/4-059	73 - Handle Shaft Bearing	SX6/4-073	89 - Reel Foot Screws	SX6/4-089
14 - Spool Bearing	SX6/4-014	30 - Washer MDL	SX6/4-030	45 - Dog Cover	SX6/4-045	60 - Preset Knob	SX6/4-060	74 - Handle Knob	SX6/4-074	90 - Reel Foot Clamp	SX6/4-090
15 - Spool Spring Washer (2 req.)	SX6/4-015	31 - Drive Gear LRG	SX6/4-031	46 - Stop Pin (2 req.)	SX6/4-046	60A - Preset Knob Detent (2 req.)	SX6/4-060A	75 - Handle Tube	SX6/4-075	91 - Clamp Screws (2 req.)	SX6/4-091
										92- MC ASSY	SX6/4-092