


# EXPLODED VIEW OF CS4-2000

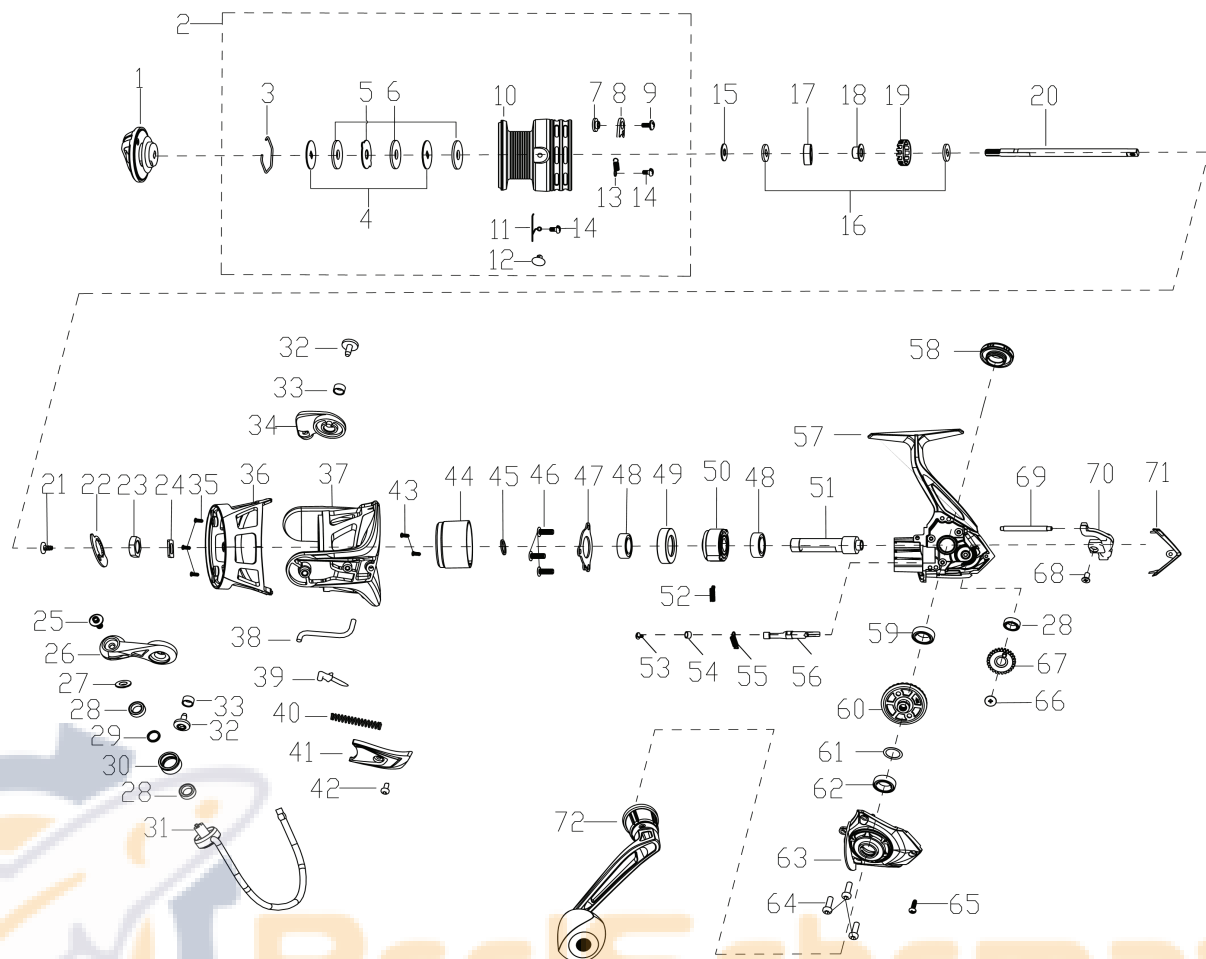

**PARTS LIST OF CS4-2000**

| ITEM# | PARTS NUMBER   | PARTS DESCRIPTION         | ITEM# | PARTS NUMBER | PARTS DESCRIPTION     |
|-------|----------------|---------------------------|-------|--------------|-----------------------|
| 1     | B10177-301     | Drag Knob Assembly        | 37    | 300249-001   | Rotor                 |
| 2     | B06177-301     | Spool Assembly            | 38    | 305221-001   | Trip Bar              |
| 3     | 405002-001     | Washer Retaining Clip     | 39    | 303012-101   | Pivot Arm             |
| 4     | 612002-101     | Keyed Washer(2req.)       | 40    | 310078-001   | Spring                |
| 5     | 611002-001     | Ear Washer                | 41    | 304243-001   | Bail Arm Cover        |
| 6     | 903028-003     | Washer(3req.)             | 42    | 905119-101   | Screw                 |
| 7     | 409014-001     | Spool Clicker Spacer Ring | 43    | 905139-003   | Screw(2req.)          |
| 8     | 406032-001     | Spool Click Plate         | 44    | 131013-201   | Body Head Cover       |
| 9     | 905254-003     | Screw                     | 45    | 903140-002   | Rotor Washer          |
| 10    | 400721-008     | Spool                     | 46    | 905135-003   | Screw(3req.)          |
| 11    | 407074-001     | Spring                    | 47    | 105039-001   | Ball Bearing Retainer |
| 12    | 402020-101     | Line Clip                 | 48    | 906012-007   | Bearing(2req.)        |
| 13    | 407018-001     | Spring                    | 49    | 109033-202   | Bearing Holder        |
| 14    | 905231-103     | Screw                     | 50    | 110004-001   | Clutch Assembly       |
| 15    | 903324-001-002 | Spool Adjust Washer       | 51    | 702212-003   | Pinion                |
| 16    | 903241-001     | Main Shaft Washer(2req.)  | 52    | 107032-001   | Clutch Spring         |
| 17    | 316006-001     | POM BUSHING               | 53    | 905062-001   | Screw                 |
| 18    | 712001-001     | Spool Holder              | 54    | 703005-001   | POM Bushing           |
| 19    | 719041-001     | Click Gear                | 55    | 801029-001   | Clutch Switch Spring  |
| 20    | 718293-102     | Main Shaft                | 56    | 800077-001   | Clutch Switch         |
| 21    | 905029-001     | Screw                     | 57    | B01177-301   | Body Assembly         |
| 22    | 319005-003     | Rotor Set Plate           | 58    | 513070-001   | Dust Cap              |
| 23    | 318002-001     | Rotor Nut                 | 59    | 906044-002   | Bearing               |
| 24    | 903328-001     | Washer                    | 60    | 700124-101   | Driver Gear           |
| 25    | 905120-003     | Line Roller Screw         | 61    | 903058-002   | Washer                |
| 26    | 301078-001     | Bail Arm                  | 62    | 906012-001   | Bearing               |
| 27    | 317066-001     | Line Roller Collar        | 63    | B02177-301   | Body Cover Assembly   |
| 28    | 906006-002     | Bearing(2req.)            | 64    | 905296-001   | Screw(3req.)          |
| 29    | 903125-001     | Line Roller Washer        | 65    | 905314-001   | Screw                 |
| 30    | 315065-001     | Line Roller               | 66    | 905302-001   | Screw                 |
| 31    | B05177-301     | Semi One Piece Bail       | 67    | 705197-002   | Oscillation Gear      |
| 32    | 905294-001     | Bail Arm Screw(2req.)     | 68    | 905127-003   | Screw                 |
| 33    | 317030-001     | Bushing(2req.)            | 69    | 726061-002   | Oscillation Guide     |
| 34    | 307099-001     | Bail Holder               | 70    | 708138-001   | Oscillation Slider    |
| 35    | 905080-001     | Screw(3req.)              | 71    | 103380-001   | Body Rear Cover       |
| 36    | 336022-001     | Rotor Cover               | 72    | B08177-302   | Handle Assembly       |