

This exploded view diagram illustrates the assembly of a bicycle headlight. The components are numbered 1 through 73. The diagram is organized into several sections connected by dashed lines, indicating the assembly sequence. At the top left, the headlight housing (1) is shown. Below it, the mounting bracket (2) is detailed with various screws (8, 9, 10, 12, 13, 14, 15) and washers (3, 4, 5, 6, 7). The main body of the headlight (11) is shown with its internal components (16, 17, 18, 19, 20) and a long mounting arm (21). Below the main body, the mounting bracket (22) is shown with various screws (23, 24, 25, 26, 27, 28, 29, 30, 31, 32) and washers (33, 34, 35). The mounting bracket (36) is shown with various screws (37, 38, 39, 40, 41) and washers (42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73). The mounting bracket (73) is shown with various screws (74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100) and washers (101, 102, 103, 104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 114, 115, 116, 117, 118, 119, 120, 121, 122, 123, 124, 125, 126, 127, 128, 129, 130, 131, 132, 133, 134, 135, 136, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 147, 148, 149, 150, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200). The mounting bracket (200) is shown with various screws (201, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 213, 214, 215, 216, 217, 218, 219, 220, 221, 222, 223, 224, 225, 226, 227, 228, 229, 230, 231, 232, 233, 234, 235, 236, 237, 238, 239, 240, 241, 242, 243, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 255, 256, 257, 258, 259, 260, 261, 262, 263, 264, 265, 266, 267, 268, 269, 270, 271, 272, 273, 274, 275, 276, 277, 278, 279, 280, 281, 282, 283, 284, 285, 286, 287, 288, 289, 290, 291, 292, 293, 294, 295, 296, 297, 298, 299, 300). The mounting bracket (300) is shown with various screws (301, 302, 303, 304, 305, 306, 307, 308, 309, 310, 311, 312, 313, 314, 315, 316, 317, 318, 319, 320, 321, 322, 323, 324, 325, 326, 327, 328, 329, 330, 331, 332, 333, 334, 335, 336, 337, 338, 339, 340, 341, 342, 343, 344, 345, 346, 347, 348, 349, 350, 351, 352, 353, 354, 355, 356, 357, 358, 359, 360, 361, 362, 363, 364, 365, 366, 367, 368, 369, 370, 371, 372, 373, 374, 375, 376, 377, 378, 379, 380, 381, 382, 383, 384, 385, 386, 387, 388, 389, 390, 391, 392, 393, 394, 395, 396, 397, 398, 399, 400). The mounting bracket (400) is shown with various screws (401, 402, 403, 404, 405, 406, 407, 408, 409, 410, 411, 412, 413, 414, 415, 416, 417, 418, 419, 420, 421, 422, 423, 424, 425, 426, 427, 428, 429, 430, 431, 432, 433, 434, 435, 436, 437, 438, 439, 440, 441, 442, 443, 444, 445, 446, 447, 448, 449, 450, 451, 452, 453, 454, 455, 456, 457, 458, 459, 460, 461, 462, 463, 464, 465, 466, 467, 468, 469, 470, 471, 472, 473, 474, 475, 476, 477, 478, 479, 480, 481, 482, 483, 484, 485, 486, 487, 488, 489, 490, 491, 492, 493, 494, 495, 496, 497, 498, 499, 500). The mounting bracket (500) is shown with various screws (501, 502, 503, 504, 505, 506, 507, 508, 509, 510, 511, 512, 513, 514, 515, 516, 517, 518, 519, 520, 521, 522, 523, 524, 525, 526, 527, 528, 529, 530, 531, 532, 533, 534, 535, 536, 537, 538, 539, 540, 541, 542, 543, 544, 545, 546, 547, 548, 549, 550, 551, 552, 553, 554, 555, 556, 557, 558, 559, 560, 561, 562, 563, 564, 565, 566, 567, 568, 569, 570, 571, 572, 573, 574, 575, 576, 577, 578, 579, 580, 581, 582, 583, 584, 585, 586, 587, 588, 589, 590, 591, 592, 593, 594, 595, 596, 597, 598, 599, 600). The mounting bracket (600) is shown with various screws (601, 602, 603, 604, 605, 606, 607, 608, 609, 610, 611, 612, 613, 614, 615, 616, 617, 618, 619, 620, 621, 622, 623, 624, 625, 626, 627, 628, 629, 630, 631, 632, 633, 634, 635, 636, 637, 638, 639, 640, 641, 642, 643, 644, 645, 646, 647, 648, 649, 650, 651, 652, 653, 654, 655, 656, 657, 658, 659, 660, 661, 662, 663, 664, 665, 666, 667, 668, 669, 670, 671, 672, 673, 674, 675, 676, 677, 678, 679, 680, 681, 682, 683, 684, 685, 686, 687, 688, 689, 690, 691, 692, 693, 694, 695, 696, 697, 698, 699, 700). The mounting bracket (700) is shown with various screws (701, 702, 703, 704, 705, 706, 707, 708, 709, 710, 711, 712, 713, 714, 715, 716, 717, 718, 719, 720, 721, 722, 723, 724, 725, 726, 727, 728, 729, 730, 731, 732, 733, 734, 735, 736, 737, 738, 739, 740, 741, 742, 743, 744, 745, 746, 747, 748, 749, 750, 751, 752, 753, 754, 755, 756, 757, 758, 759, 760, 761, 762, 763, 764, 765, 766, 767, 768, 769, 770, 771, 772, 773, 774, 775, 776, 777, 778, 779, 780, 781, 782, 783, 784, 785, 786, 787, 788, 789, 790, 791, 792, 793, 794, 79

ITEM#	PARTS NUMBER	PARTS DESCRIPTION	ITEM#	PARTS NUMBER	PARTS DESCRIPTION
1	B10167-301	Drag Knob Assembly	38	303012-101	Pivot Arm
2	B06167-302	Spool Assembly	39	310024-001	Spring
3	628167-001	Spool Rubber	40	304239-001	Bail Arm Cover
4	405002-001	Washer Retaining Clip	41	905119-101	Screw(2req.)
5	612002-004	Keyed Washer(2req.)	42	306130-001	Bail Holder Cover
6	611002-002	Ear Washer	43	905173-001	Screw
7	903179-101	Carbon Washer(3req.)	44	905139-003	Screw(2req.)
8	409013-001	Spool Clicker Spacer Ring	45	131013-101	Body Head Cover
9	406032-001	Spool Click Plate	46	903140-002	Rotor Washer
10	905254-003	Screw	47	905135-003	Screw(3req.)
11	400721-005	Spool	48	105039-001	Ball Bearing Retainer
12	407086-001	Spring	49	906012-007	Bearing(3req.)
13	402029-002	Line Clip	50	109033-202	Bearing Holder
14	407018-001	Spring	51	110004-001	Clutch Assembly
15	905231-103	Screw	52	702212-002	Pinion
16	903324-001-002	Spool Adjust Washer	53	107030-001	Clutch Spring
17	903241-001	Main Shaft Washer(2req.)	54	905087-003	Screw
18	906036-002	Bearing	55	703005-001	POM Bushing
19	712001-001	Spool Holder	56	801029-001	Clutch Switch Spring
20	719041-001	Click Gear	57	800077-001	Clutch Switch
21	718293-102	Main Shaft	58	B01167-301	Body Assembly
22	905029-001	Screw	59	513070-001	Dust Cap
23	319005-201	Rotor Set Plate	60	906044-002	Bearing
24	318002-002	Rotor Nut	61	700124-101	Driver Gear
25	903328-001	Washer	62	903058-002	Washer
26	905120-003	Line Roller Screw	63	B02167-301	Body Cover Assembly
27	301078-001	Bail Arm	64	905117-003	Screw(3req.)
28	317066-001	Line Roller Collar	65	905314-001	Screw
29	906006-002	Bearing(2req.)	66	905210-003	Screw
30	903125-001	Line Roller Washer	67	705197-002	Oscillation Gear
31	315065-001	Line Roller	68	906046-002	Bearing
32	B05167-301	Semi One Piece Bail	69	905127-003	Screw
33	905294-001	Bail Arm Screw(2req.)	70	726061-001	Oscillation Guide
34	317030-001	Bushing(2req.)	71	708138-001	Oscillation Slider
35	307096-001	Bail Holder	72	103377-001	Body Rear Cover
36	300244-001	Rotor	73	B08167-303	Handle Assembly
37	305217-001	Trip Bar			

ITEM#	PARTS NUMBER	PARTS DESCRIPTION	ITEM#	PARTS NUMBER	PARTS DESCRIPTION
1	B10167-301	Drag Knob Assembly	38	303012-101	Pivot Arm
2	B06167-302	Spool Assembly	39	310024-001	Spring
3	628167-001	Spool Rubber	40	304239-001	Bail Arm Cover
4	405002-001	Washer Retaining Clip	41	905119-101	Screw(2req.)
5	612002-004	Keyed Washer(2req.)	42	306130-001	Bail Holder Cover
6	611002-002	Ear Washer	43	905173-001	Screw
7	903179-101	Carbon Washer(3req.)	44	905139-003	Screw(2req.)
8	409013-001	Spool Clicker Spacer Ring	45	131013-101	Body Head Cover
9	406032-001	Spool Click Plate	46	903140-002	Rotor Washer
10	905254-003	Screw	47	905135-003	Screw(3req.)
11	400721-005	Spool	48	105039-001	Ball Bearing Retainer
12	407086-001	Spring	49	906012-007	Bearing(3req.)
13	402029-002	Line Clip	50	109033-202	Bearing Holder
14	407018-001	Spring	51	110004-001	Clutch Assembly
15	905231-103	Screw	52	702212-002	Pinion
16	903324-001-002	Spool Adjust Washer	53	107030-001	Clutch Spring
17	903241-001	Main Shaft Washer(2req.)	54	905087-003	Screw
18	906036-002	Bearing	55	703005-001	POM Bushing
19	712001-001	Spool Holder	56	801029-001	Clutch Switch Spring
20	719041-001	Click Gear	57	800077-001	Clutch Switch
21	718293-102	Main Shaft	58	B01167-301	Body Assembly
22	905029-001	Screw	59	513070-001	Dust Cap
23	319005-201	Rotor Set Plate	60	906044-002	Bearing
24	318002-002	Rotor Nut	61	700124-101	Driver Gear
25	903328-001	Washer	62	903058-002	Washer
26	905120-003	Line Roller Screw	63	B02167-301	Body Cover Assembly
27	301078-001	Bail Arm	64	905117-003	Screw(3req.)
28	317066-001	Line Roller Collar	65	905314-001	Screw
29	906006-002	Bearing(2req.)	66	905210-003	Screw
30	903125-001	Line Roller Washer	67	705197-002	Oscillation Gear
31	315065-001	Line Roller	68	906046-002	Bearing
32	B05167-301	Semi One Piece Bail	69	905127-003	Screw
33	905294-001	Bail Arm Screw(2req.)	70	726061-001	Oscillation Guide
34	317030-001	Bushing(2req.)	71	708138-001	Oscillation Slider
35	307096-001	Bail Holder	72	103377-001	Body Rear Cover
36	300244-001	Rotor	73	B08167-303	Handle Assembly
37	305217-001	Trip Bar			