


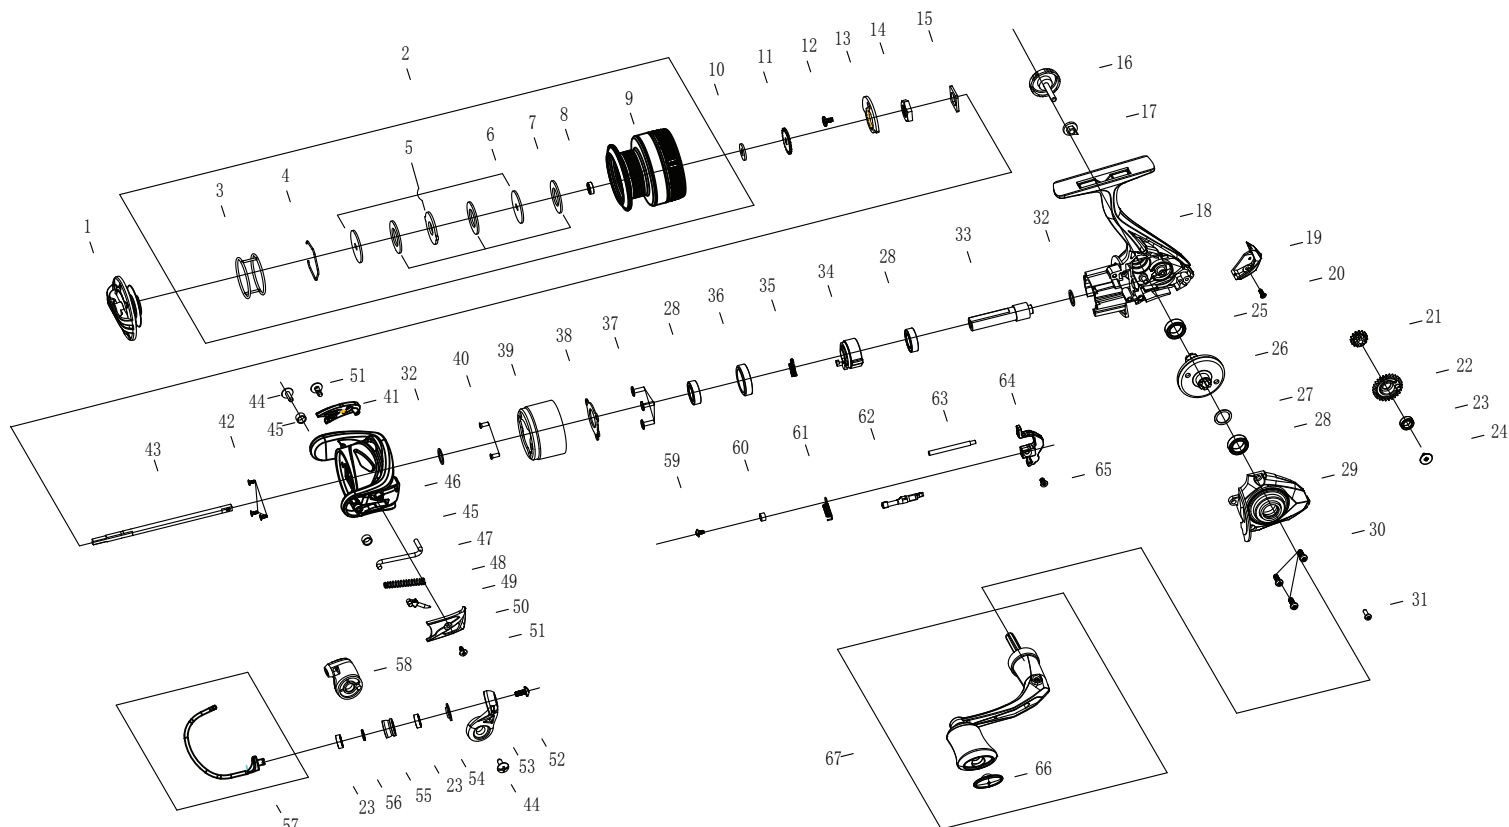

Elate 2000 3000 4000

ITEM#	PARTS DESCRIPTION	ITEM#	PARTS DESCRIPTION
1	Drag Knob Assembly	35	Spring
2	Spool Assembly	36	Bearing Holder
3	Spool Rubber	37	Screw(3req.)
4	Washer Retaining Ring	38	Ball Bearing Retainer
5	Ear Washer	39	Body Head Cover
6	Keyed Washer(2req.)	40	Screw(2req.)
7	Washer(3req.)	41	Bail Holder Cover
8	Bearing	42	Screw(3req.)
9	Spool	43	Main Shaft
10	Spool Adjust Washer	44	Bail Arm Screw(2req.)
11	Click Gear	45	Bushing(2req.)
12	Screw	46	Rotor
13	Rotor Nut Set Plate	47	Rotor Trip Lever
14	Rotor Nut	48	Spring
15	Washer	49	Pivot Arm
16	Handle Cap	50	Bail Arm Cover
17	Washer	51	Screw
18	Body Assembly	52	Screw
19	Body Rear Cover	53	Bail Arm
20	Screw	54	Line Roller Collar
21	Idle Gear	55	Line Roller
22	Oscillation Gear	56	Line Roller Washer
23	Bearing(3req.)	57	Bail Assembly
24	Screw	58	Bail Holder
25	Bearing	59	Screw
26	Driver Gear	60	Pom Bushing
27	Washer	61	Clutch Switch Spring
28	Bearing(3req.)	62	Clutch Switch
29	Body Cover Assembly	63	Slider Guide Shaft
30	Screw(3req.)	64	Slider
31	Screw	65	Screw
32	Rotor Washer(2req.)	66	Handle Knob Cap
33	Pinion	67	Handle Assembly
34	Clutch Assembly		