


EXPLODED VIEW OF LUX-2000

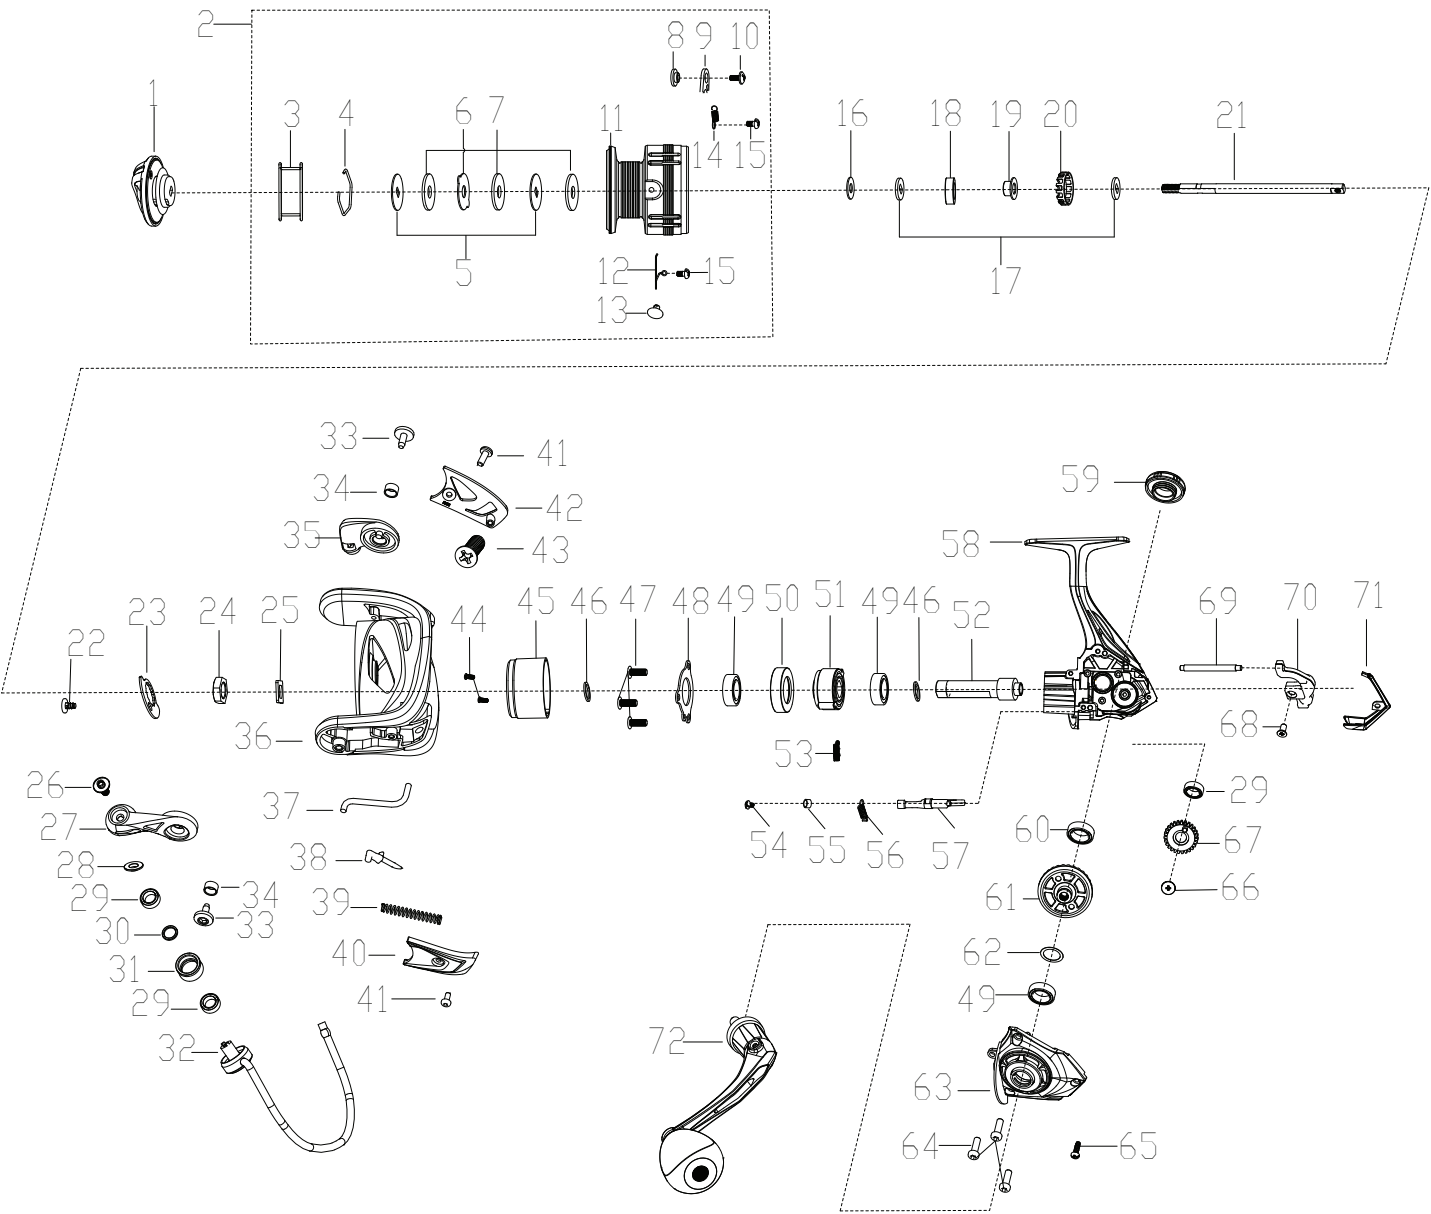

PARTS LIST OF LUX-2000

| ITEM# | PARTS DESCRIPTION         | ITEM# | PARTS DESCRIPTION     |
|-------|---------------------------|-------|-----------------------|
| 1     | Drag Knob Assembly        | 37    | Rotor Trip Lever      |
| 2     | Spool Assembly            | 38    | Pivot Arm             |
| 3     | Spool Rubber              | 39    | Spring                |
| 4     | Washer Retaining Ring     | 40    | Bail Arm Cover        |
| 5     | Keyed Washer(2req.)       | 41    | Screw(2req.)          |
| 6     | Ear Washer                | 42    | Bail Holder Cover     |
| 7     | Washer(3req.)             | 43    | Screw                 |
| 8     | Spool Clicker Spacer Ring | 44    | Screw(2req.)          |
| 9     | Spool Click Plate         | 45    | Body Head Cover       |
| 10    | Screw                     | 46    | Rotor Washer          |
| 11    | Spool                     | 47    | Screw(3req.)          |
| 12    | Spring                    | 48    | Ball Bearing Retainer |
| 13    | Line Clip                 | 49    | Bearing(3req.)        |
| 14    | Spring                    | 50    | Bearing Holder        |
| 15    | Screw(2req.)              | 51    | Clutch Assembly       |
| 16    | Spool Adjust Washer       | 52    | Pinion                |
| 17    | Main Shaft Washer(2req.)  | 53    | Clutch Spring         |
| 18    | Pom Bushing               | 54    | Screw                 |
| 19    | Spool Holder              | 55    | Pom Bushing           |
| 20    | Click Gear                | 56    | Clutch Switch Spring  |
| 21    | Main Shaft                | 57    | Clutch Switch         |
| 22    | Screw                     | 58    | Body Assembly         |
| 23    | Rotor Nut Set Plate       | 59    | Handle Cap            |
| 24    | Rotor Nut                 | 60    | Bearing               |
| 25    | Washer                    | 61    | Driver Gear           |
| 26    | Line Roller Screw         | 62    | Washer                |
| 27    | Bail Arm                  | 63    | Body Cover Assembly   |
| 28    | Line Roller Collar        | 64    | Screw(3req.)          |
| 29    | Bearing(3req.)            | 65    | Screw                 |
| 30    | Line Roller Washer        | 66    | Screw                 |
| 31    | Line Roller               | 67    | Oscillation Gear      |
| 32    | Bail Assembly             | 68    | Screw                 |
| 33    | Bail Arm Screw(2req.)     | 69    | Slider Guide Shaft    |
| 34    | Bushing(2req.)            | 70    | Slider                |
| 35    | Bail Holder               | 71    | Body Rear Cover       |
| 36    | Rotor                     | 72    | Handle Assembly       |