


EXPLODED VIEW OF LUX-4000

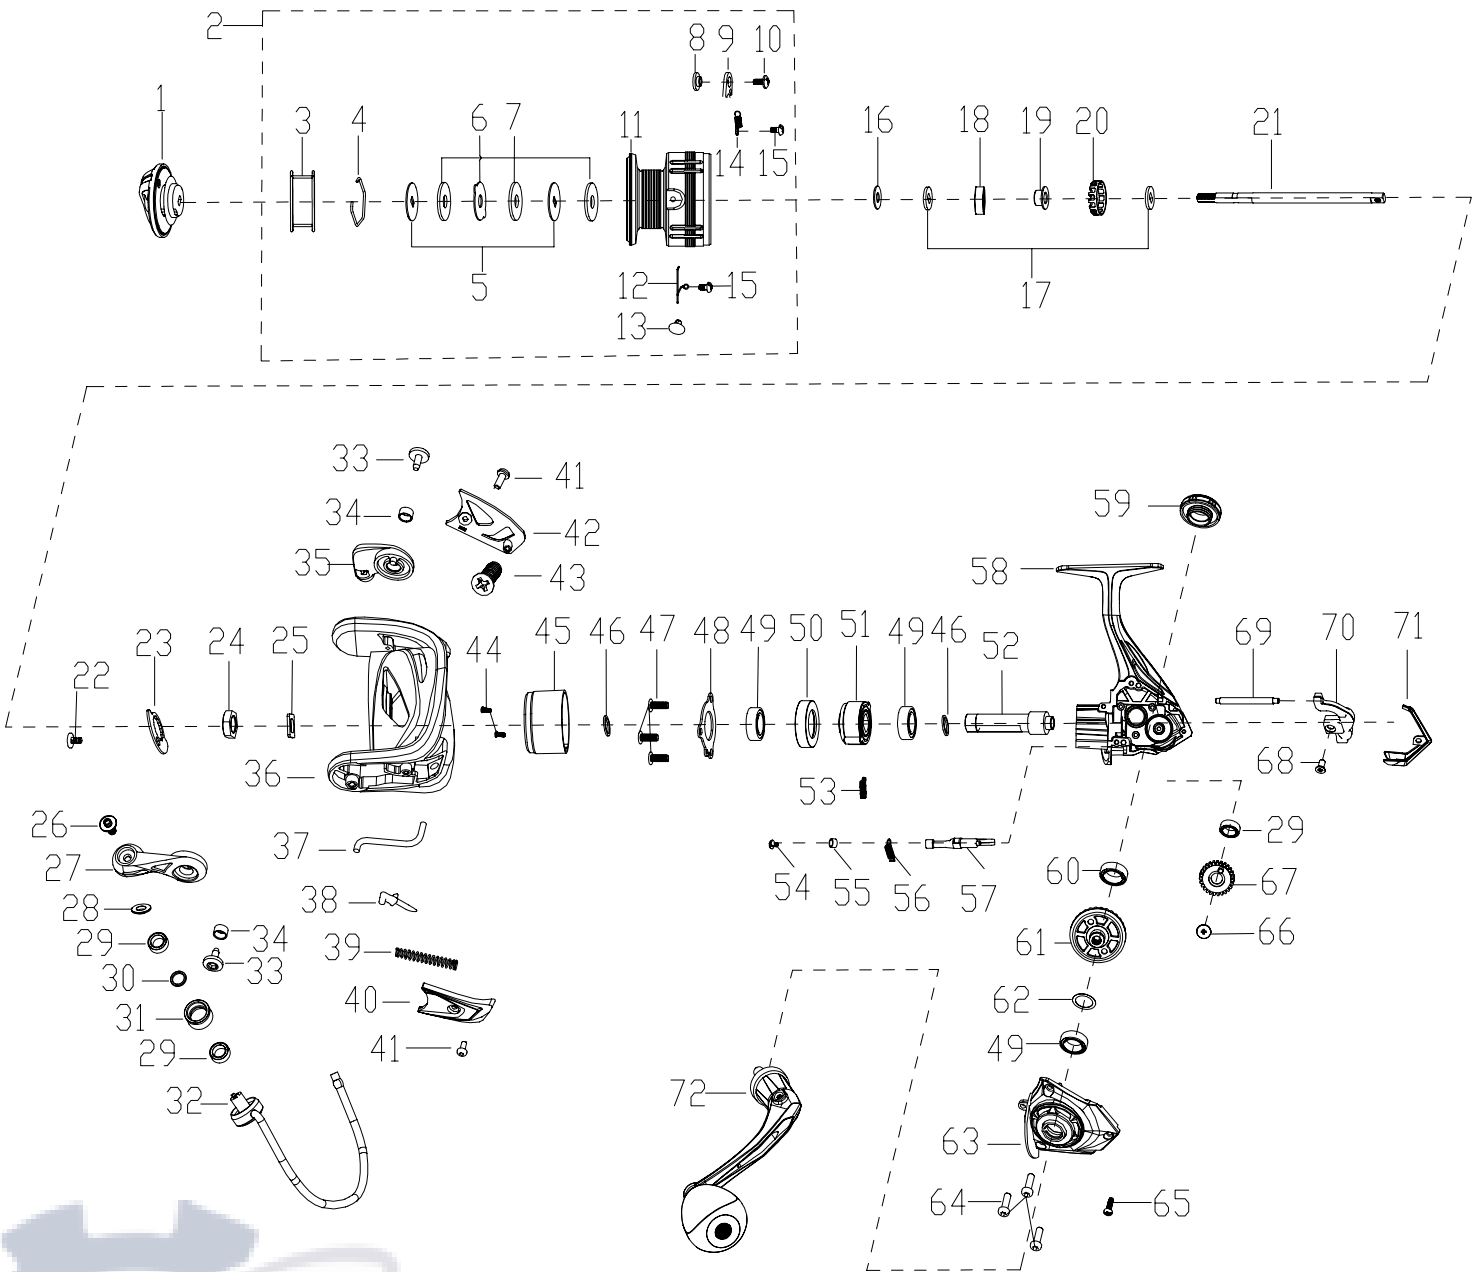

PARTS LIST OF LUX-4000			
ITEM#	PARTS DESCRIPTION	ITEM#	PARTS DESCRIPTION
1	Drag Knob Assembly	37	Rotor Trip Lever
2	Spool Assembly	38	Pivot Arm
3	Spool Rubber	39	Spring
4	Washer Retaining Ring	40	Bail Arm Cover
5	Keyed Washer(2req.)	41	Screw(2req.)
6	Ear Washer	42	Bail Holder Cover
7	Washer(3req.)	43	Screw
8	Spool Clicker Spacer Ring	44	Screw(2req.)
9	Spool Click Plate	45	Body Head Cover
10	Screw	46	Rotor Washer(2req.)
11	Spool	47	Screw(3req.)
12	Spring	48	Ball Bearing Retainer
13	Line Clip	49	Bearing(3req.)
14	Spring	50	Bearing Holder
15	Screw(2req.)	51	Clutch Assembly
16	Spool Adjust Washer	52	Pinion
17	Main Shaft Washer(2req.)	53	Clutch Spring
18	Pom Bushing	54	Screw
19	Spool Holder	55	Pom Bushing
20	Click Gear	56	Clutch Switch Spring
21	Main Shaft	57	Clutch Switch
22	Screw	58	Body Assembly
23	Rotor Nut Set Plate	59	Handle Cap
24	Rotor Nut	60	Bearing
25	Washer	61	Driver Gear
26	Line Roller Screw	62	Washer
27	Bail Arm	63	Body Cover Assembly
28	Line Roller Collar	64	Screw(3req.)
29	Bearing(3req.)	65	Screw
30	Line Roller Washer	66	Screw
31	Line Roller	67	Oscillation Gear
32	Bail Assembly	68	Screw
		69	Slider Guide Shaft
33	Bail Arm Screw(2req.)	70	Slider
34	Bushing(2req.)	71	Body Rear Cover
35	Bail Holder	72	Handle Assembly
36	Rotor		