


**MODEL 222**

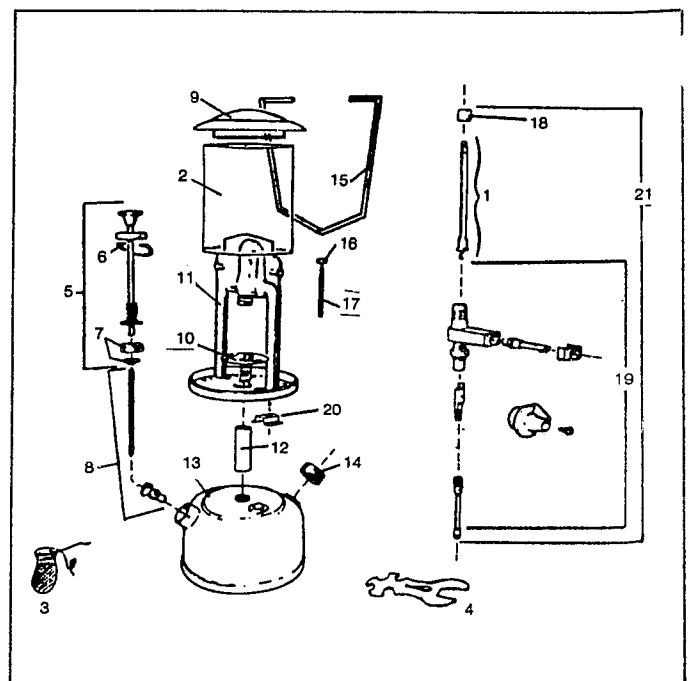

**MODEL 222A**

No.	Description	222 (Green)
1	Generator	G2
2	Globe	2
3	Mantle	20L101
4	Wrench (Accessory)	605A9505
5	Plunger Ass'y Less Air Stem	505-5205
6	Pump Cap Clip	530A5071
7 } 8 }	Pump Leather & Washer	216-5091
9	Air Stem & Check Valve	222-5361
10	Ventilator	222-4851
11	Screw for Burner Tube	-
12	Burner Tube	-
13	Burner Cap & Screen	-
14	Heat Shield	5414-4605
15	Burner Frame	222-3265
16	Globe Base Rest	222A4295
17	Fount with Check Valve	222A1591
18	Burner Assembly and Clip	5414-3265
19	Filler Plug	425A1401
20	Bail	5414-4235
21	Nut	604A4565
22	Stud	321-6031
23	Generator Jamb Nut	335-2105
24	Valve Assembly Less Generator	222A6565
25	Air Clip	222-4505
26	Valve and Generaor Assembly	222A6575

No.	Description	222A Part No.
1	Generator	G2A
2	Globe	2
3	Mantle	20L101
4	Wrench (Accessory)	605A9505
5	Plunger Assembly Less Air Stem	505-5205
6	Pump Cap Clip	530A5071
7	Pump Leather & Washer	216-5091
8	Air Stem & Check Valve	222-5361
9	Ventilator	222-4851
10	Heat Shield	5414-4605
11	Burner Frame	222-3265
12	Globe Base Rest	222A4295
13	Fount with Check Valve	222A1591
14	Filler Plug	425A1401
15	Bail	5414-4235
16	Nut	604A4565
17	Stud	321-6031
18	Generator Jamb Nut	335-2105
19	Valve Assembly Less Generator	222A6565
20	Air Clip	222-4505
21	Valve & Generator Assembly	222A6575