



MODEL 5355K700 FLUORESCENT

No.	Part No.	Description
1	5355-5011	Upper Top Cover
2	5355-1131	Fluorescent Tubes
3	5355-1141	Globe
4	5355-1121	Knob
5	5355-5201	12 Volt Cord
6	5355-1011	Battery Cover