


MODEL 5428

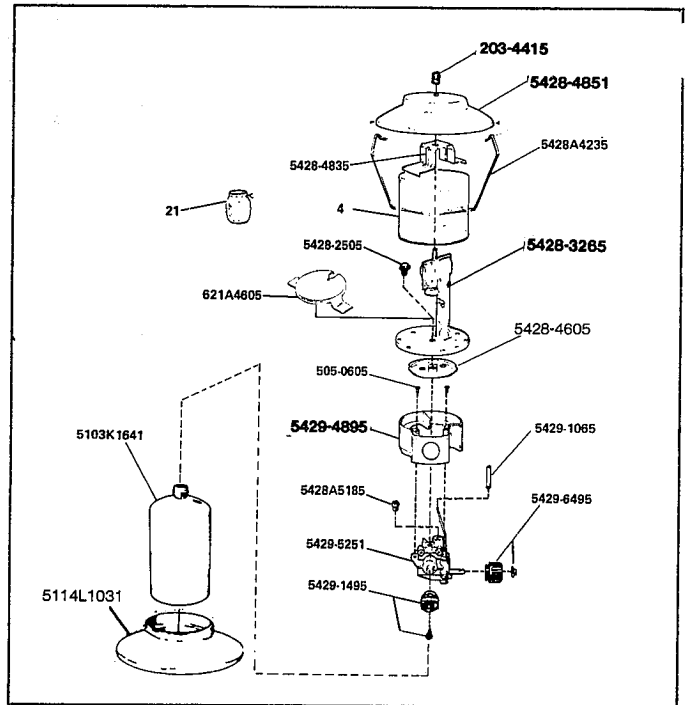

MODEL 5429

Part No.	Description
4	Globe
21	Mantle
5103K1641	Cylinder
5428-4835	Ventilator Bracket
5428-4851	Ventilator
5428-5251	Regulator Valve
5445-1491	Knob & Screw
5428A4235	Bail
203-4415	Ball Nut
5428-2505	Screw
5428-3265	Burner
5428-2185	Orifice (Gas Tip)
5428-4605	Orifice Plate
621A4605	Heat Shield
5114L1031	Bottle Holder

Part No.	Description
4	Globe
21	Mantle
203-4415	Ball Nut
5103K1641	Propane Cylinder
5428-4851	Ventilator
5428A4235	Bail
5428-4835	Ventilator Bracket
5429-1065	Insulator
5428-3265	Burner Frame
5428-4605	Orifice Plate
5428A5185	Orifice (Gas Tip)
5429-1495	Control Knob & Screw
5429-4895	Collar
5429-5251	Valve & Ignitor
5429-6495	Ignitor Knob & Palnut
505-0605	(2) Screw (Collar to Regulator)
5428-2505	Screw (Orifice Plate to Burner)
621A4605	Heat Shield
5114L1031	Base