


MODELS 621*, 621A

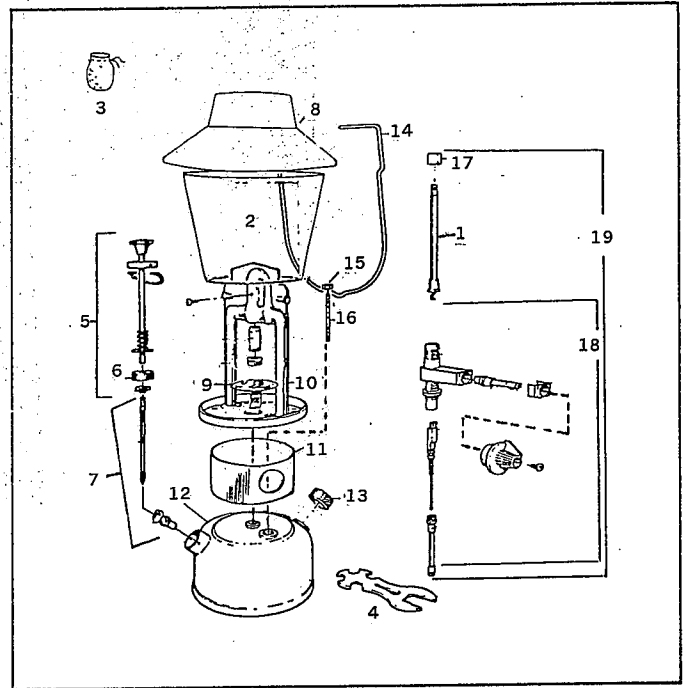

"EASI-LITE" MODEL 621B

Code No.	Description	Model 621A
1	Globe	880
2	Generator (Complete)	G6
3	Pump Leather & Washer	216-5091
4	Pump Air Stem & Check Valve	621-5361
5	Plunger Assembly (Less Air Stem)	242D5205
6	Fount Complete (Blue)	621A1655
7	Burner Frame	621-3265
8	Globe Base Rest (Collar)	621A4895
9	Stud	321-6031
10	Valve Assembly (Less Generator)	621A6565
11	Generator Jamb Nut	335-2105
12	Bail	621-4235
13	Ventilator (Blue)	621-4855
14	Filler Plug (Complete)	425A1401
15	Nut	604A4565
16	Wrench (Accessory)	605A9505
17	Mantle	1111

Code No.	Description	Model 621B (Brown)
1	Generator	G6*
2	Globe	880
3	Mantle	1111
4	Wrench (Accessory)	605A9505
5	Plunger Ass'y (Less Air Stem)	242D5205
6	Pump Leather & Washer	216-5091
7	Air Stem & Check Valve	621-5361
8	Ventilator	621A4855
9	Heat Shield	621-4605
10	Burner Frame	621A3265
11	Globe Base Rest	621B4895
12	Fount with Check Valve	621B1595
13	Filler Plug	425A1401
14	Bail	621-4235
15	Nut	604A4565
16	Stud	321-6031
17	Generator Jamb Nut	335-2105
18	Valve Ass'y (Less Generator)	621B6565
19	Valve & Generator Assembly	621B6575

*To convert 621 to 621A — See Service Bulletin 5/75.

*To convert 621A to 621B — See Service Bulletin.

*Not Available Outside Canada.