



3 BURNER MODELS 5A, 5B, 446, 446A

Code No.	Description	5A, 5B	446, A, B	413E, F	426B, C
1	Filler Cap (I)	220B1401	200B1401	220B1401	220B1401
	Filler Cap (II)	425A1401	425A1401	425A1401	425A1401
2	Filler Cap Gasket (I)	118B1361	118B1361	118B1361	118B1361
	Filler Cap Gasket (II)	425A1361	425A1361	425A1361	425A1361
	Core & Gasket Assembly (For 220B140)	118B135	118B135	118B135	118B135
3	Pump Leather	216-5091	216-5091	216-5091	216-5091
4	Pump Plunger	242D5204	242D5204	242D5204	242D5204
5	Air Stem	242B5321	242B5321	242B5321	242B5321
6	Check Valve	242B5381	242B5381	242B5381	242B5381
7	Burner Rings (Small)	382-9371	382-9371	382-9371	382-9371
8	Burner Rings (Large)	382-9381	382-9381	382-9381	382-9381
9	Grate	435-4345 (2)	442A434	442A434	—
10	Lock Nut	—	—	—	—
11	Valve Body	412B2071	412B2071	413A207	413A207
12	Generator Tube	413-240	413-240	413-240	413-240
13	Generator Coil	414-2195	414-2195	413A2191	413A2191
14	Generator Gas Tip	435-2181	435-2181	401-2181	401-2181
15	Valve Wheel & Screw	412-2501	412-2501	—	—
16	Generator Needle	414-2514	414-2514	413A2511	413A2511
17	Valve Stem	412-2531	412-2531	413A653	426-653
18	Manifold Tube	435A319	446-319	413E3191	426A323
19	Burner Casting Complete	Discontinued, Sub-Burner Assembly Complete, Code 35			
20	Lighting Lever Assembly	412-3531	412-3531	412-3531	412-3531
21	Eccentric Block & Needle	412-6401	413-6401	413-6401	413-6401
22	Fuel & Air Tube	412-6461	444-6461	444-6461	444-6461
23	Valve & Generator	435-6604	444-6601	444-6601	444-6601
24	Master Burner	413C3025	413C3025	413C3025	413C3025
25	Auxiliary Burner	413C3065	413C3065	413C3065	413C3065
26	Tank Leather	425C1594	444-1594	—	—
27	Tank with Filler Cap	425C1654	444-1654	413E1651	426C165
28	Burner Cap Screw (Small)	417-9371	417-9371	417-9371	413C345
29	Burner Cap Screw (Large)	417-9381	417-9381	417-9381	413C346
30	Screw for Valve Wheel	17-581	17-581	17-581	17-581
31	Pump Cap Clip	530A5071	530A5071	530A5071	530A5071
32	Auxiliary Burner Body & Valve	Discontinued, Sub-Burner Assembly Complete, Code 35			
33	Restrictor Ring	426-3285	425-3285	426-3285	426-3285
34	Master Burner Bracket	—	—	—	—
35	Burner Assembly Complete	435B3754	446A3754	44-3754	446A3754
36	Generator Complete	435A2621	414K2621	413A5621	413A5621

*For Model 446A, 446B.