

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
AGGREST LT 6000D-H	S41906N	1	6Q364201	DRAG KNOB
AGGREST LT 6000D-H	S41906N	2	61704101	DRAG RING
AGGREST LT 6000D-H	S41906N	3	6J577501	DRAG DISC WASHER
AGGREST LT 6000D-H	S41906N	4	6J577201	DRAG WASHER
AGGREST LT 6000D-H	S41906N	5	6Q377601	DRAG LIP WASHER
AGGREST LT 6000D-H	S41906N	2~6	6Q484801	SPOOL ASSY (2-6)
AGGREST LT 6000D-H	S41906N	7	6F050104	SPOOL WASHER (A)
AGGREST LT 6000D-H	S41906N	8	6Q363801	SPOOL WASHER (B)
AGGREST LT 6000D-H	S41906N	9	6Q457701	CLICK LEAF SPRING
AGGREST LT 6000D-H	S41906N	10	6Q466801	CLICK HOLDER
AGGREST LT 6000D-H	S41906N	11	6Q377501	ROTOR WASHER
AGGREST LT 6000D-H	S41906N	12	6Q135201	ROTOR NUT
AGGREST LT 6000D-H	S41906N	13	6H022701	ROTOR NUT SCREW
AGGREST LT 6000D-H	S41906N	14	6Q134515	ROTOR
AGGREST LT 6000D-H	S41906N	15	6H413601	KICK LEVER SPRING
AGGREST LT 6000D-H	S41906N	16	6Q134601	KICK LEVER
AGGREST LT 6000D-H	S41906N	17	6H417701	KICK LEVER SCREW
AGGREST LT 6000D-H	S41906N	18	6Q134801	ARMLEVER SHAFT
AGGREST LT 6000D-H	S41906N	19	6H576101	ARMLEVER SHAFT PLATE
AGGREST LT 6000D-H	S41906N	20	6H640701	ARMREVER SPRING
AGGREST LT 6000D-H	S41906N	21	6Q121501	ARMLEVER SPRING HOLDER
AGGREST LT 6000D-H	S41906N	22	6Q134901	ARMLEVER SPRING COVER
AGGREST LT 6000D-H	S41906N	23	6G205001	ARMLEVER SPRING COVER SCREW
AGGREST LT 6000D-H	S41906N	24	6Q121606	ARM LEVER
AGGREST LT 6000D-H	S41906N	25	6Q121701	ARMLEVER SCREW COLLER
AGGREST LT 6000D-H	S41906N	26	6G205001	ARMLEVER SCREW
AGGREST LT 6000D-H	S41906N	27	6G195602	ROLLER SCREW
AGGREST LT 6000D-H	S41906N	28	6G195501	ROLLER COLLAR (A)
AGGREST LT 6000D-H	S41906N	29	6G220701	ROLLER COLLAR (B)
AGGREST LT 6000D-H	S41906N	30	6J089903	LINE ROLLER
AGGREST LT 6000D-H	S41906N	31	6Q203401	ROLLER COLLAR (C)
AGGREST LT 6000D-H	S41906N	32	6Q168001	BAIL
AGGREST LT 6000D-H	S41906N	33	6H640301	COLLAR
AGGREST LT 6000D-H	S41906N	34	6G837101	ONEWAY CLUTCH PLATE SCREW
AGGREST LT 6000D-H	S41906N	35	6Q134301	ONEWAY CLUTCH PLATE
AGGREST LT 6000D-H	S41906N	36	6J015701	ONEWAY CLUTCH
AGGREST LT 6000D-H	S41906N	37	6J021301	CLUTCH RING
AGGREST LT 6000D-H	S41906N	38	6Q126201	PINION BEARING PLATE SCREW
AGGREST LT 6000D-H	S41906N	39	6J020801	PINION BEARING PLATE
AGGREST LT 6000D-H	S41906N	40	66354801	PINION BALL BEARING
AGGREST LT 6000D-H	S41906N	41	6Q208701	PINION GEAR
AGGREST LT 6000D-H	S41906N	42	-----	-----
AGGREST LT 6000D-H	S41906N	43	6Q484701	BODY
AGGREST LT 6000D-H	S41906N	44	6Q362601	MAIN SHAFT
AGGREST LT 6000D-H	S41906N	45	6Q126303	OSCILLATING POST(A)
AGGREST LT 6000D-H	S41906N	46	6Q119103	OSCILLATING POST(B)
AGGREST LT 6000D-H	S41906N	47	6Q133401	STOPPER CAM
AGGREST LT 6000D-H	S41906N	48	6H697801	STOPPER LEVER SPRING
AGGREST LT 6000D-H	S41906N	49	6Q118001	STOPPER LEVER
AGGREST LT 6000D-H	S41906N	50	6Q134401	REAR COVER
AGGREST LT 6000D-H	S41906N	51	6G270801	REAR CAP SCREW
AGGREST LT 6000D-H	S41906N	52	6G644201	OSCILLATING GEAR WASHER
AGGREST LT 6000D-H	S41906N	53	6Q133501	OSCILLATING GEAR
AGGREST LT 6000D-H	S41906N	54	6B853101	OSCILLATING GEAR O-RING
AGGREST LT 6000D-H	S41906N	55	6G522103	OSCILLATING GEAR BEARING WASHER
AGGREST LT 6000D-H	S41906N	56	6G467105	OSCILLATING GEAR BALL BEARING
AGGREST LT 6000D-H	S41906N	57	6H463401	OSCILLATING GEAR SCREW
AGGREST LT 6000D-H	S41906N	58	6G645301	DRIVE GEAR O-RING
AGGREST LT 6000D-H	S41906N	59	6Q167401	DRIVE GEAR
AGGREST LT 6000D-H	S41906N	60	63737808	DRIVE WASHER
AGGREST LT 6000D-H	S41906N	61	6B861705	DRIVE BALL BEARING
AGGREST LT 6000D-H	S41906N	62	6Q485201	BODY COVER
AGGREST LT 6000D-H	S41906N	63	6G115001	BODY COVER SCREW
AGGREST LT 6000D-H	S41906N	64	6Q485001	HANDLE
AGGREST LT 6000D-H	S41906N	65	6B861705	DRIVE BALL BEARING
AGGREST LT 6000D-H	S41906N	66	6G525101	DRIVE BALL BEARING RING
AGGREST LT 6000D-H	S41906N	67	6F721202	HANDLE COLLAR
AGGREST LT 6000D-H	S41906N	68	61608401	HANDLE SP WASHER
AGGREST LT 6000D-H	S41906N	69	6Q136101	HANDLE SCREW