




AIRD LT 2500

Feel Alive.

Please quote by part number, not key number when ordering.
spares@daiwaaustralia.com.au PH: (02) 8644 8644

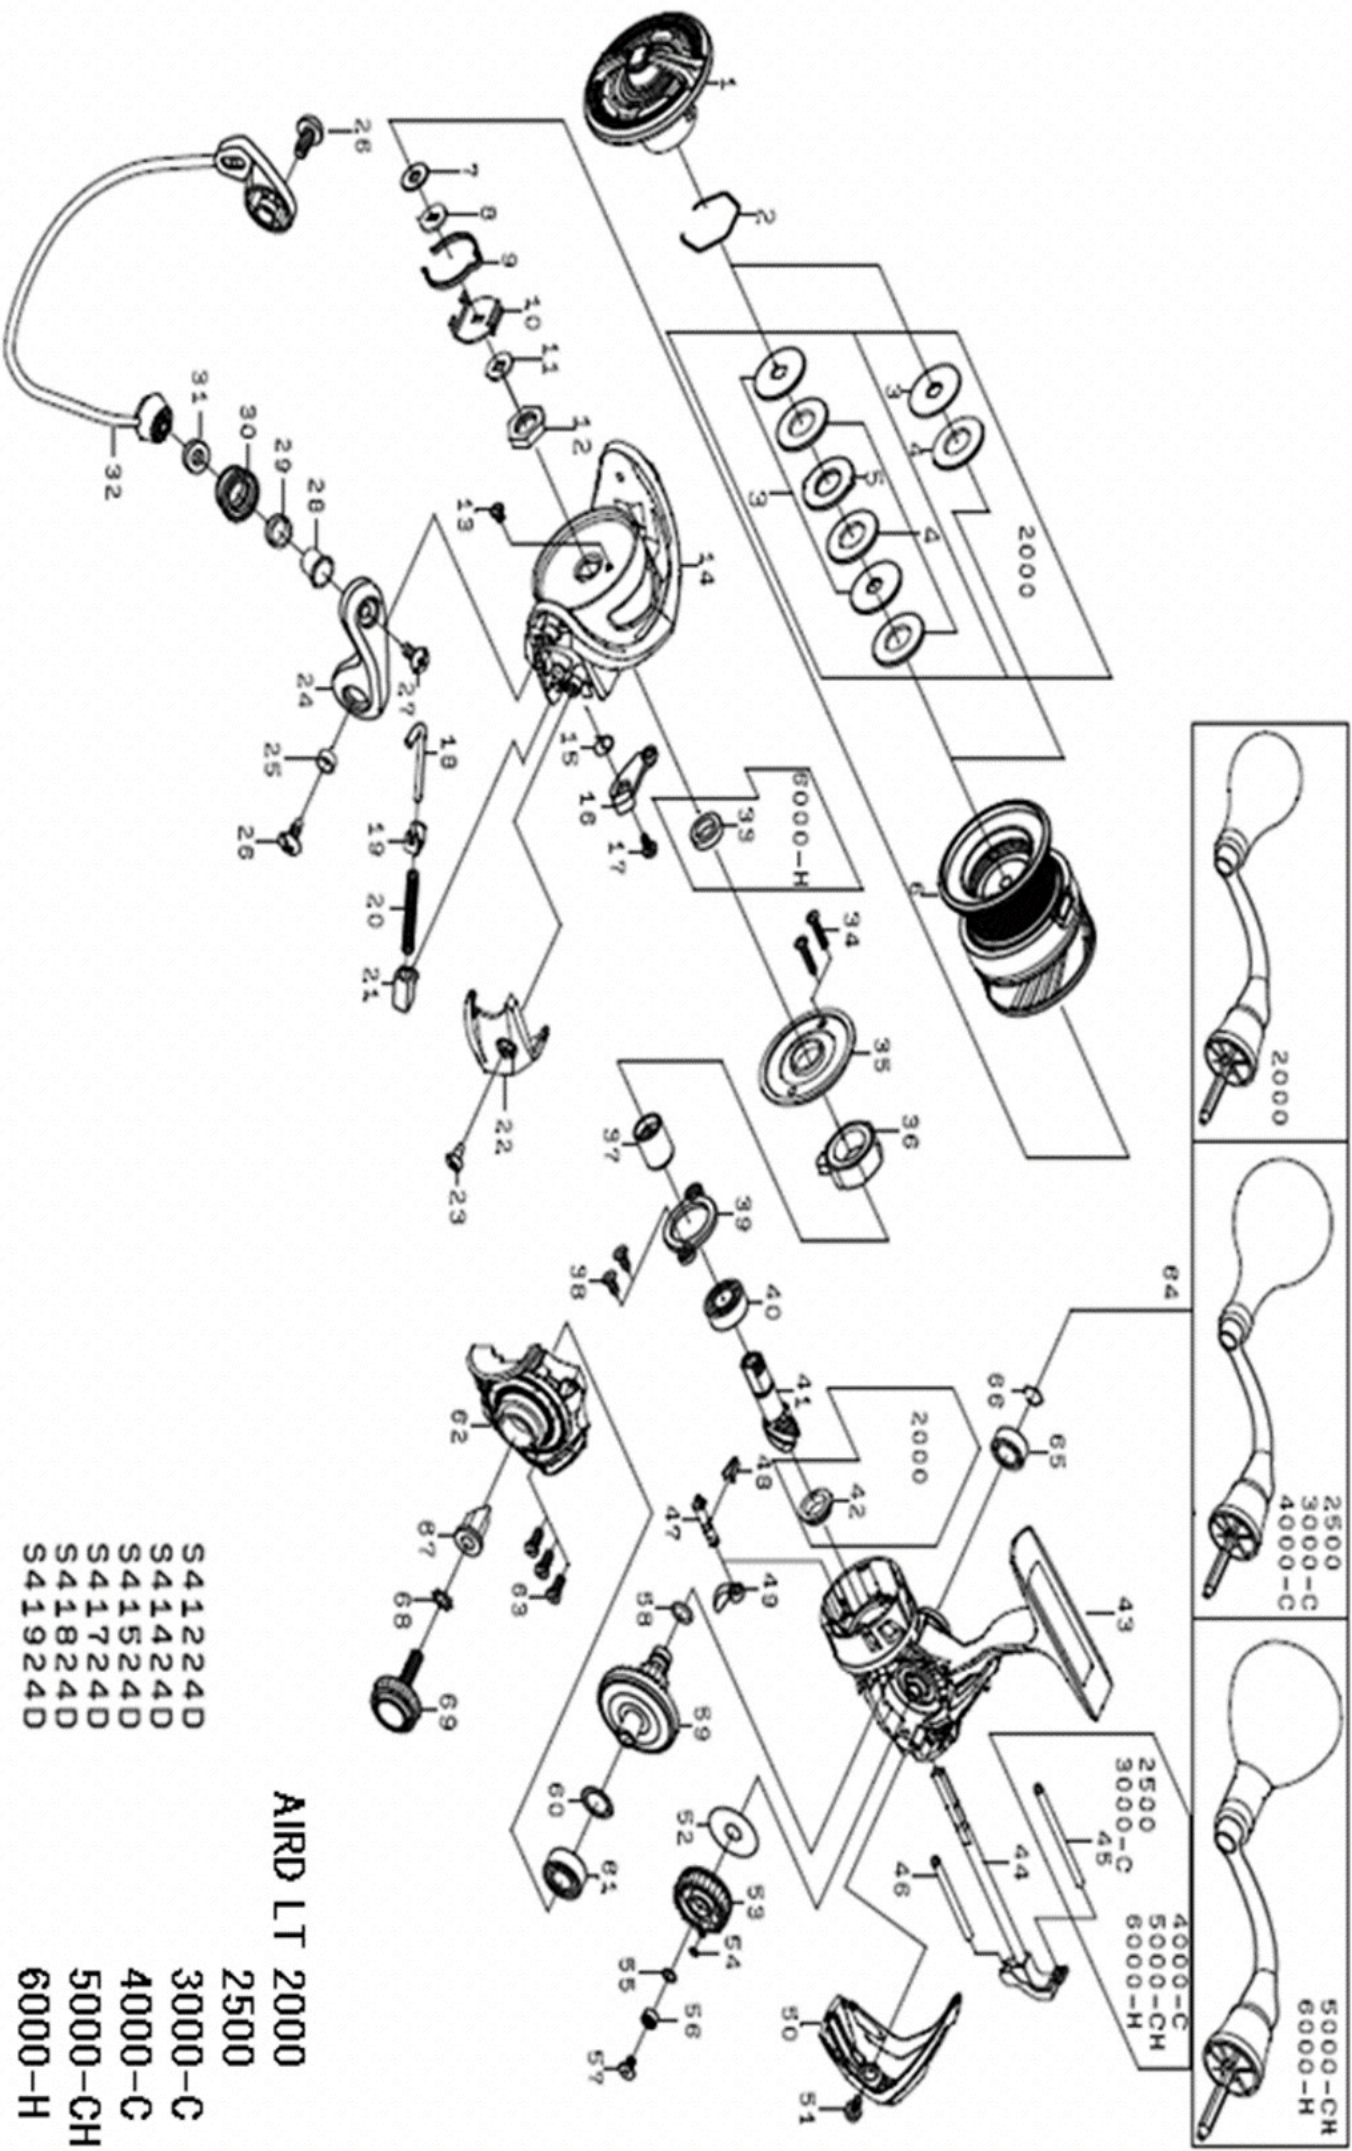

- S412224D
- S414224D
- S415224D
- S417224D
- S418224D
- S419224D

- AIRD LT 2000
- 2500
 - 3000-C
 - 4000-C
 - 5000-CH
 - 6000-H

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
AIRD LT 2500	S41424D	1	6Q346201	DRAG KNOB
AIRD LT 2500	S41424D	2	6Q346101	DRAG RING
AIRD LT 2500	S41424D	3	6J547001	DRAG DISC WASHER
AIRD LT 2500	S41424D	4	6J546801	ATD WASHER ASSY (1pack-3 pcs)
AIRD LT 2500	S41424D	5	6Q346001	DRAG LIP WASHER
AIRD LT 2500	S41424D	2~6	6Q555401	SPOOL ASSY(2-6)
AIRD LT 2500	S41424D	7	6E398000	SPOOL WASHER (A)
AIRD LT 2500	S41424D	8	6Q348502	SPOOL WASHER (B)
AIRD LT 2500	S41424D	9	6Q457701	CLICK LEAF SPRING
AIRD LT 2500	S41424D	10	6Q457601	CLICK HOLDER
AIRD LT 2500	S41424D	11	6Q344001	CLICK HOLDER WASHER
AIRD LT 2500	S41424D	12	6Q122401	ROTOR NUT
AIRD LT 2500	S41424D	13	6H022701	ROTOR NUT SCREW
AIRD LT 2500	S41424D	14	6Q343002	ROTOR
AIRD LT 2500	S41424D	15	6H413601	KICK LEVER SPRING
AIRD LT 2500	S41424D	16	6Q343101	KICK LEVER
AIRD LT 2500	S41424D	17	6H417701	KICK LEVER SCREW
AIRD LT 2500	S41424D	18	6Q343301	ARMLEVER SHAFT
AIRD LT 2500	S41424D	19	6H576101	ARMLEVER SHAFT PLATE
AIRD LT 2500	S41424D	20	6J642801	ARMLEVER SPRING
AIRD LT 2500	S41424D	21	6Q121501	ARMLEVER SPRING HOLDER
AIRD LT 2500	S41424D	22	6Q343504	ARMLEVER SPRING COVER
AIRD LT 2500	S41424D	23	6G205003	ARM LEVER SCREW
AIRD LT 2500	S41424D	24	6Q121607	ARMLEVER
AIRD LT 2500	S41424D	25	6Q121701	ARMLEVER SCREW COLLER
AIRD LT 2500	S41424D	26	6G205003	ARM LEVER SCREW
AIRD LT 2500	S41424D	27	6G195606	ROLLER SCREW
AIRD LT 2500	S41424D	28	6G195501	ROLLER COLLAR (A)
AIRD LT 2500	S41424D	29	6G220701	ROLLER COLLAR (B)
AIRD LT 2500	S41424D	30	6J089902	LINE ROLLER
AIRD LT 2500	S41424D	31	6Q203401	ROLLER COLLAR (C)
AIRD LT 2500	S41424D	32	6Q555301	BAIL ASSY
AIRD LT 2500	S41424D	33	-----	-----
AIRD LT 2500	S41424D	34	6G837101	SEALED PLATE SCREW
AIRD LT 2500	S41424D	35	6Q139401	SEALED PLATE
AIRD LT 2500	S41424D	36	6Q308301	ONEWAY CLUTCH
AIRD LT 2500	S41424D	37	6J001401	CLUTCH RING
AIRD LT 2500	S41424D	38	6Q126201	PINION BEARING PLATE SCREW
AIRD LT 2500	S41424D	39	6H442201	PINION BEARING PLATE
AIRD LT 2500	S41424D	40	6G467302	DRIVE BALL BEARING(A)
AIRD LT 2500	S41424D	41	6Q457201	PINION GEAR
AIRD LT 2500	S41424D	42	-----	-----
AIRD LT 2500	S41424D	43	6Q555101	BODY
AIRD LT 2500	S41424D	44	6Q341501	MAIN SHAFT
AIRD LT 2500	S41424D	45	6Q126301	OSCILLATING POST(A)
AIRD LT 2500	S41424D	46	6Q119101	OSCILLATING POST(B)
AIRD LT 2500	S41424D	47	6Q118101	STOPPER CAM
AIRD LT 2500	S41424D	48	6H697801	STOPPER LEVER SPRING
AIRD LT 2500	S41424D	49	6Q118001	STOPPER LEVER
AIRD LT 2500	S41424D	50	6Q447602	REAR COVER
AIRD LT 2500	S41424D	51	6G270804	REAR COVER SCREW
AIRD LT 2500	S41424D	52	6H595701	OSCILLATING GEAR WASHER
AIRD LT 2500	S41424D	53	6Q139001	OSCILLATING GEAR
AIRD LT 2500	S41424D	54	6H770601	OSCILLATING GEAR ORING
AIRD LT 2500	S41424D	55	6H129200	OSCILLATING GEAR BEARING WASHER
AIRD LT 2500	S41424D	56	6G469005	OSCILLATING GEAR BALL BEARING
AIRD LT 2500	S41424D	57	6Q126101	OSCILLATING GEAR SCREW
AIRD LT 2500	S41424D	58	6G670501	DRIVE GEAR O-RING
AIRD LT 2500	S41424D	59	6Q341901	DRIVE GEAR
AIRD LT 2500	S41424D	60	63758500	DRIVE WASHER
AIRD LT 2500	S41424D	61	6G467302	DRIVE BALL BEARING(A)
AIRD LT 2500	S41424D	62	6Q555201	BODY COVER
AIRD LT 2500	S41424D	63	6G115001	BODY COVER SCREW
AIRD LT 2500	S41424D	64	6Q555601	HANDLE ASSY
AIRD LT 2500	S41424D	65	6G522706	DRIVE BALL BEARING(B)
AIRD LT 2500	S41424D	66	6G472401	DRIVE BEARING RETAINER
AIRD LT 2500	S41424D	67	6F721001	HANDLE SCREW COLLAR
AIRD LT 2500	S41424D	68	61608401	HANDLE SCRER WAWSHER
AIRD LT 2500	S41424D	69	6Q132401	HANDLE SCREW
AIRD LT 2500	S41424D	200	6H088709	HANDLE KNOB ASSY
AIRD LT 2500	S41424D	201	6G720001	HANDLE KNOB BEARING COLLAR
AIRD LT 2500	S41424D	202	6B411700	HANDLE KNOB WASHER
AIRD LT 2500	S41424D	203	6B679308	HANDLE KNOB SCREW
AIRD LT 2500	S41424D	204	6Q281301	SCREW ASSY