




# AIRD LT 5000-CH

Feel Alive.

Please quote by part number, not key number when ordering.  
[spares@daiwaaustralia.com.au](mailto:spares@daiwaaustralia.com.au) PH: (02) 8644 8644

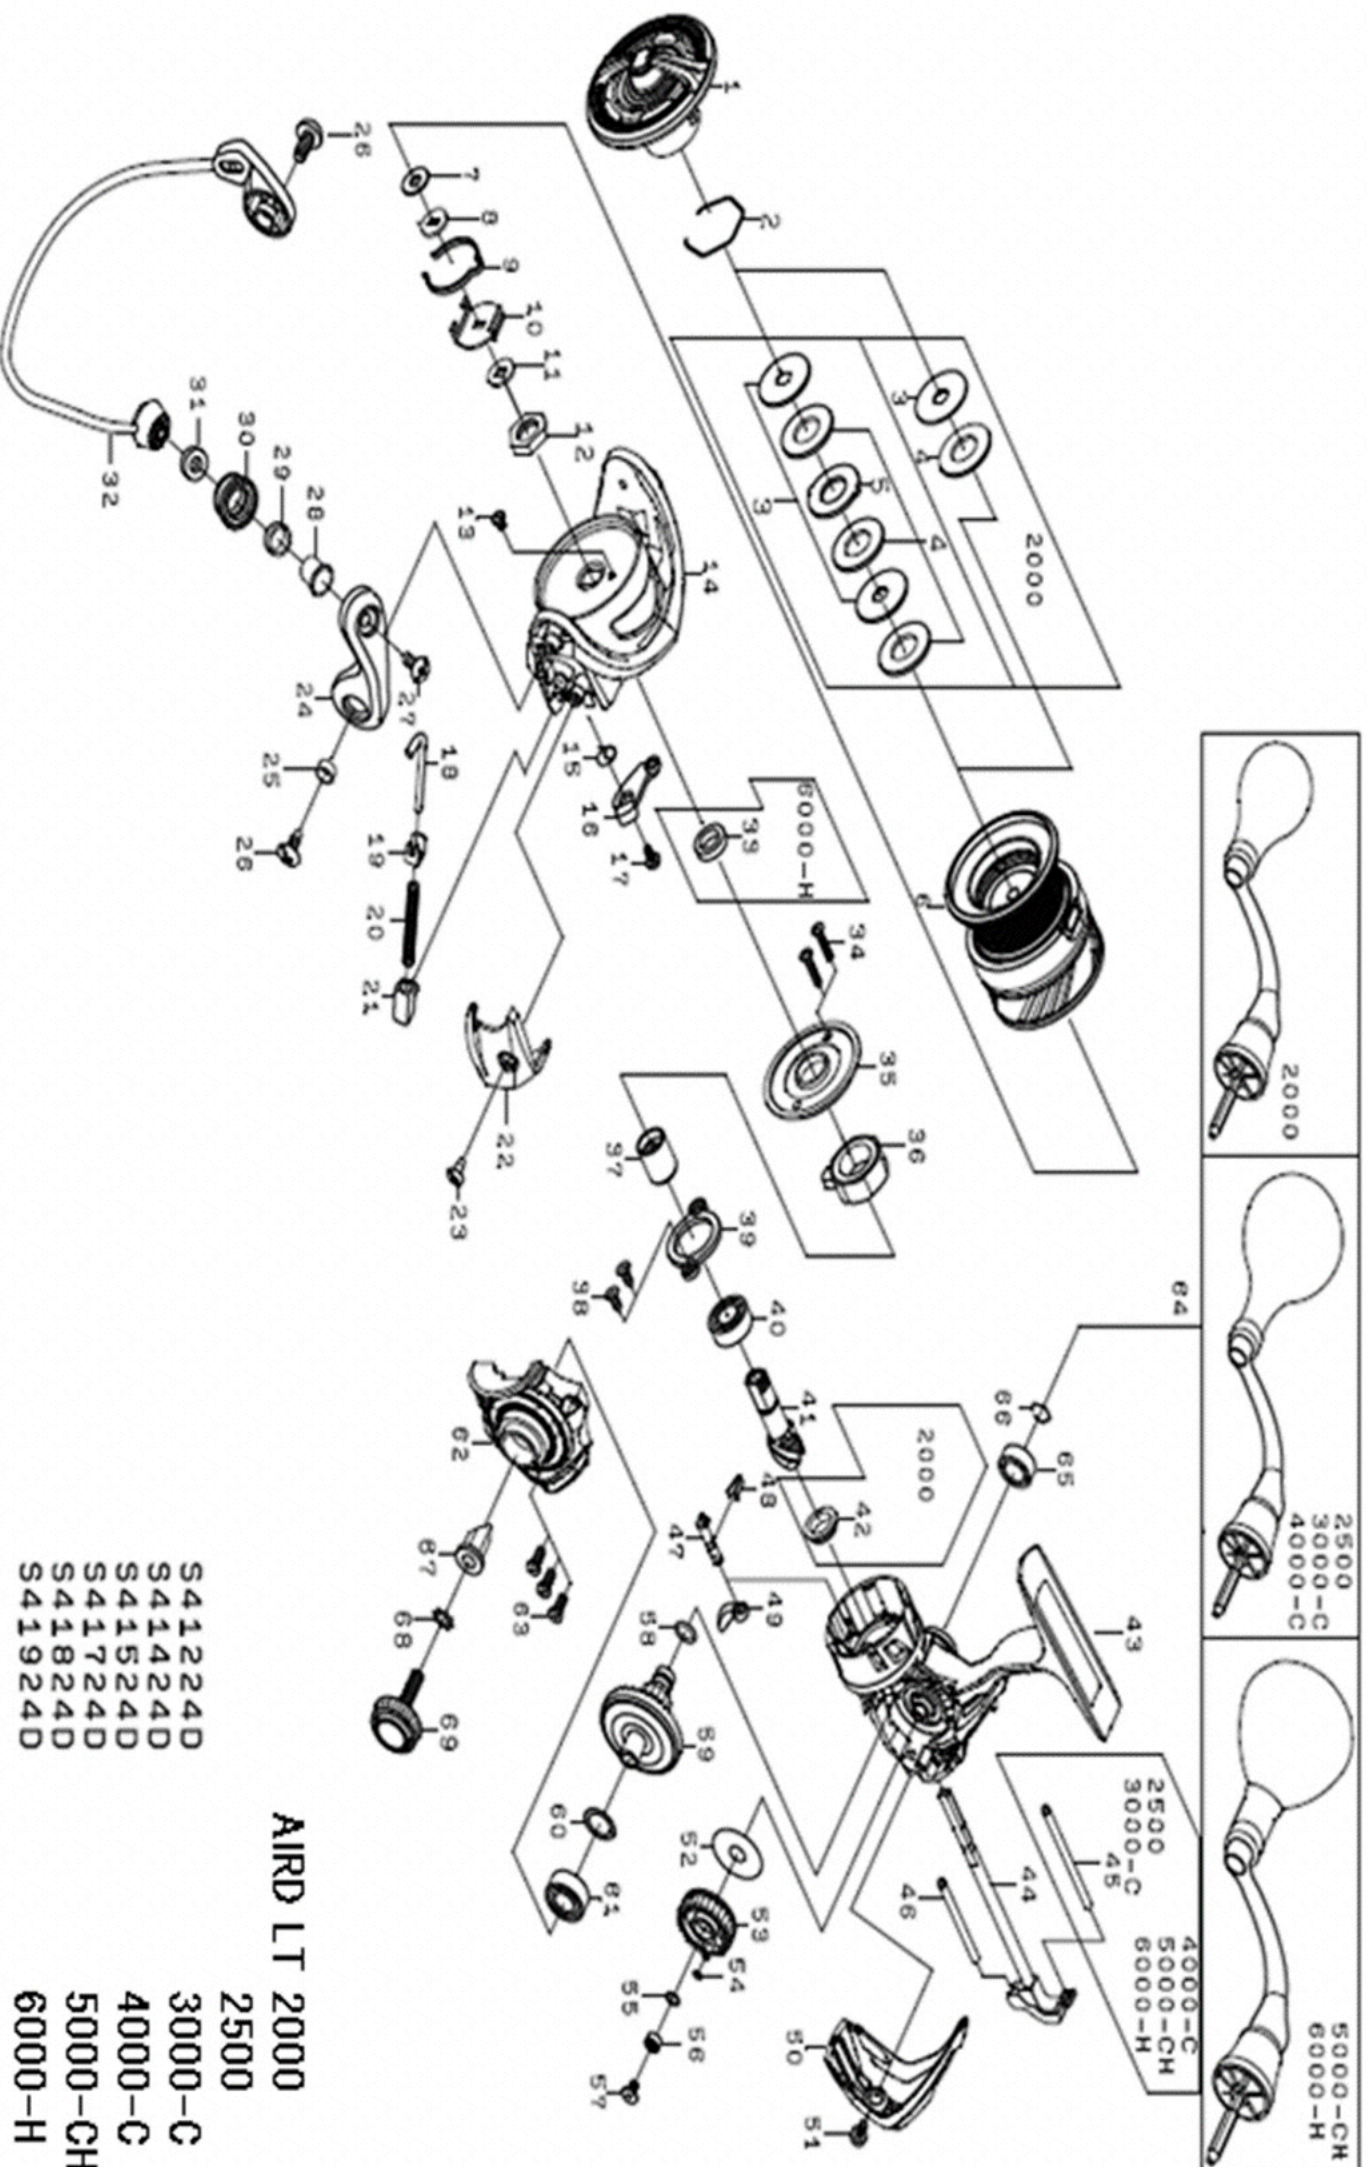

S411224D  
 S411424D  
 S411524D  
 S411724D  
 S411824D  
 S411924D

AIRD LT 2000  
 2500  
 3000-C  
 4000-C  
 5000-CH  
 6000-H

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
AIRD LT 5000-CH	S41824D	1	6Q352901	DRAG KNOB
AIRD LT 5000-CH	S41824D	2	6Q346101	DRAG RING
AIRD LT 5000-CH	S41824D	3	6J547001	DRAG DISC WASHER
AIRD LT 5000-CH	S41824D	4	6J546801	ATD WASHER ASSY (1pack-3 pcs)
AIRD LT 5000-CH	S41824D	5	6Q346001	DRAG LIP WASHER
AIRD LT 5000-CH	S41824D	2~6	6Q557201	SPOOL ASSY(2-6)
AIRD LT 5000-CH	S41824D	7	6E398000	SPOOL WASHER ( A )
AIRD LT 5000-CH	S41824D	8	6Q348502	SPOOL WASHER ( B )
AIRD LT 5000-CH	S41824D	9	6Q457701	CLICK LEAF SPRING
AIRD LT 5000-CH	S41824D	10	6Q457601	CLICK HOLDER
AIRD LT 5000-CH	S41824D	11	6Q344001	CLICK HOLDER WASHER
AIRD LT 5000-CH	S41824D	12	6Q122401	ROTOR NUT
AIRD LT 5000-CH	S41824D	13	6H022701	ROTOR NUT SCREW
AIRD LT 5000-CH	S41824D	14	6Q129212	ROTOR
AIRD LT 5000-CH	S41824D	15	6H413601	KICK LEVER SPRING
AIRD LT 5000-CH	S41824D	16	6Q129301	KICK LEVER
AIRD LT 5000-CH	S41824D	17	6H417701	KICK LEVER SCREW
AIRD LT 5000-CH	S41824D	18	6Q129501	ARMLEVER SHAFT
AIRD LT 5000-CH	S41824D	19	6H576101	ARMLEVER SHAFT PLATE
AIRD LT 5000-CH	S41824D	20	6H414201	ARMLEVER SPRING
AIRD LT 5000-CH	S41824D	21	6Q121501	ARMLEVER SPRING HOLDER
AIRD LT 5000-CH	S41824D	22	6Q129604	ARMLEVER SPRING COVER
AIRD LT 5000-CH	S41824D	23	6G205003	ARM LEVER SCREW
AIRD LT 5000-CH	S41824D	24	6Q121607	ARMLEVER
AIRD LT 5000-CH	S41824D	25	6Q121701	ARMLEVER SCREW COLLER
AIRD LT 5000-CH	S41824D	26	6G205003	ARM LEVER SCREW
AIRD LT 5000-CH	S41824D	27	6G195606	ROLLER SCREW
AIRD LT 5000-CH	S41824D	28	6G195501	ROLLER COLLAR ( A )
AIRD LT 5000-CH	S41824D	29	6G220701	ROLLER COLLAR ( B )
AIRD LT 5000-CH	S41824D	30	6J089902	LINE ROLLER
AIRD LT 5000-CH	S41824D	31	6Q203401	ROLLER COLLAR ( C )
AIRD LT 5000-CH	S41824D	32	6Q373001	BAIL ASSY
AIRD LT 5000-CH	S41824D	33	-----	-----
AIRD LT 5000-CH	S41824D	34	6G837101	SEALED PLATE SCREW
AIRD LT 5000-CH	S41824D	35	6Q129001	SEALED PLATE
AIRD LT 5000-CH	S41824D	36	6Q308301	ONEWAY CLUTCH
AIRD LT 5000-CH	S41824D	37	6J001401	CLUTCH RING
AIRD LT 5000-CH	S41824D	38	6Q126201	PINION BEARING PLATE SCREW
AIRD LT 5000-CH	S41824D	39	6H411501	PINION BEARING PLATE
AIRD LT 5000-CH	S41824D	40	6G535104	DRIVE BALL BEARING(A)
AIRD LT 5000-CH	S41824D	41	6Q201301	PINION GEAR
AIRD LT 5000-CH	S41824D	42	-----	-----
AIRD LT 5000-CH	S41824D	43	6Q556601	BODY
AIRD LT 5000-CH	S41824D	44	6Q351001	MAIN SHAFT
AIRD LT 5000-CH	S41824D	45	6Q126302	OSCILLATING POST(A)
AIRD LT 5000-CH	S41824D	46	6Q119102	OSCILLATING POST(B)
AIRD LT 5000-CH	S41824D	47	6Q118101	STOPPER CAM
AIRD LT 5000-CH	S41824D	48	6H697801	STOPPER LEVER SPRING
AIRD LT 5000-CH	S41824D	49	6Q118001	STOPPER LEVER
AIRD LT 5000-CH	S41824D	50	6Q463602	REAR COVER
AIRD LT 5000-CH	S41824D	51	6G270804	REAR COVER SCREW
AIRD LT 5000-CH	S41824D	52	6H595701	OSCILLATING GEAR WASHER
AIRD LT 5000-CH	S41824D	53	6Q350901	OSCILLATING GEAR
AIRD LT 5000-CH	S41824D	54	6G466001	OSCILLATING GEAR ORING
AIRD LT 5000-CH	S41824D	55	6H129200	OSCILLATING GEAR BEARING WASHER
AIRD LT 5000-CH	S41824D	56	6G469005	OSCILLATING GEAR BALL BEARING
AIRD LT 5000-CH	S41824D	57	6Q126101	OSCILLATING GEAR SCREW
AIRD LT 5000-CH	S41824D	58	6G670501	DRIVE GEAR O-RING
AIRD LT 5000-CH	S41824D	59	6Q167201	DRIVE GEAR
AIRD LT 5000-CH	S41824D	60	63758500	DRIVE WASHER
AIRD LT 5000-CH	S41824D	61	6G467302	DRIVE BALL BEARING(A)
AIRD LT 5000-CH	S41824D	62	6Q556701	BODY COVER
AIRD LT 5000-CH	S41824D	63	6G115001	BODY COVER SCREW
AIRD LT 5000-CH	S41824D	64	6Q557401	HANDLE ASSY
AIRD LT 5000-CH	S41824D	65	6G522706	DRIVE BALL BEARING(B)
AIRD LT 5000-CH	S41824D	66	6G472401	DRIVE BEARING RETAINER
AIRD LT 5000-CH	S41824D	67	6F721001	HANDLE SCREW COLLAR
AIRD LT 5000-CH	S41824D	68	61608401	HANDLE SCRER WAWSHER
AIRD LT 5000-CH	S41824D	69	6Q132401	HANDLE SCREW
AIRD LT 5000-CH	S41824D	200	6Q283501	HANDLE KNOB ASSY
AIRD LT 5000-CH	S41824D	201	6G720001	HANDLE KNOB BEARING COLLAR
AIRD LT 5000-CH	S41824D	202	6B411700	HANDLE KNOB WASHER
AIRD LT 5000-CH	S41824D	203	6B679308	HANDLE KNOB SCREW
AIRD LT 5000-CH	S41824D	204	6J313201	SCREW ASSY