




# AIRD LT 6000-H

Feel Alive.

Please quote by part number, not key number when ordering.  
[spares@daiwaaustralia.com.au](mailto:spares@daiwaaustralia.com.au) PH: (02) 8644 8644

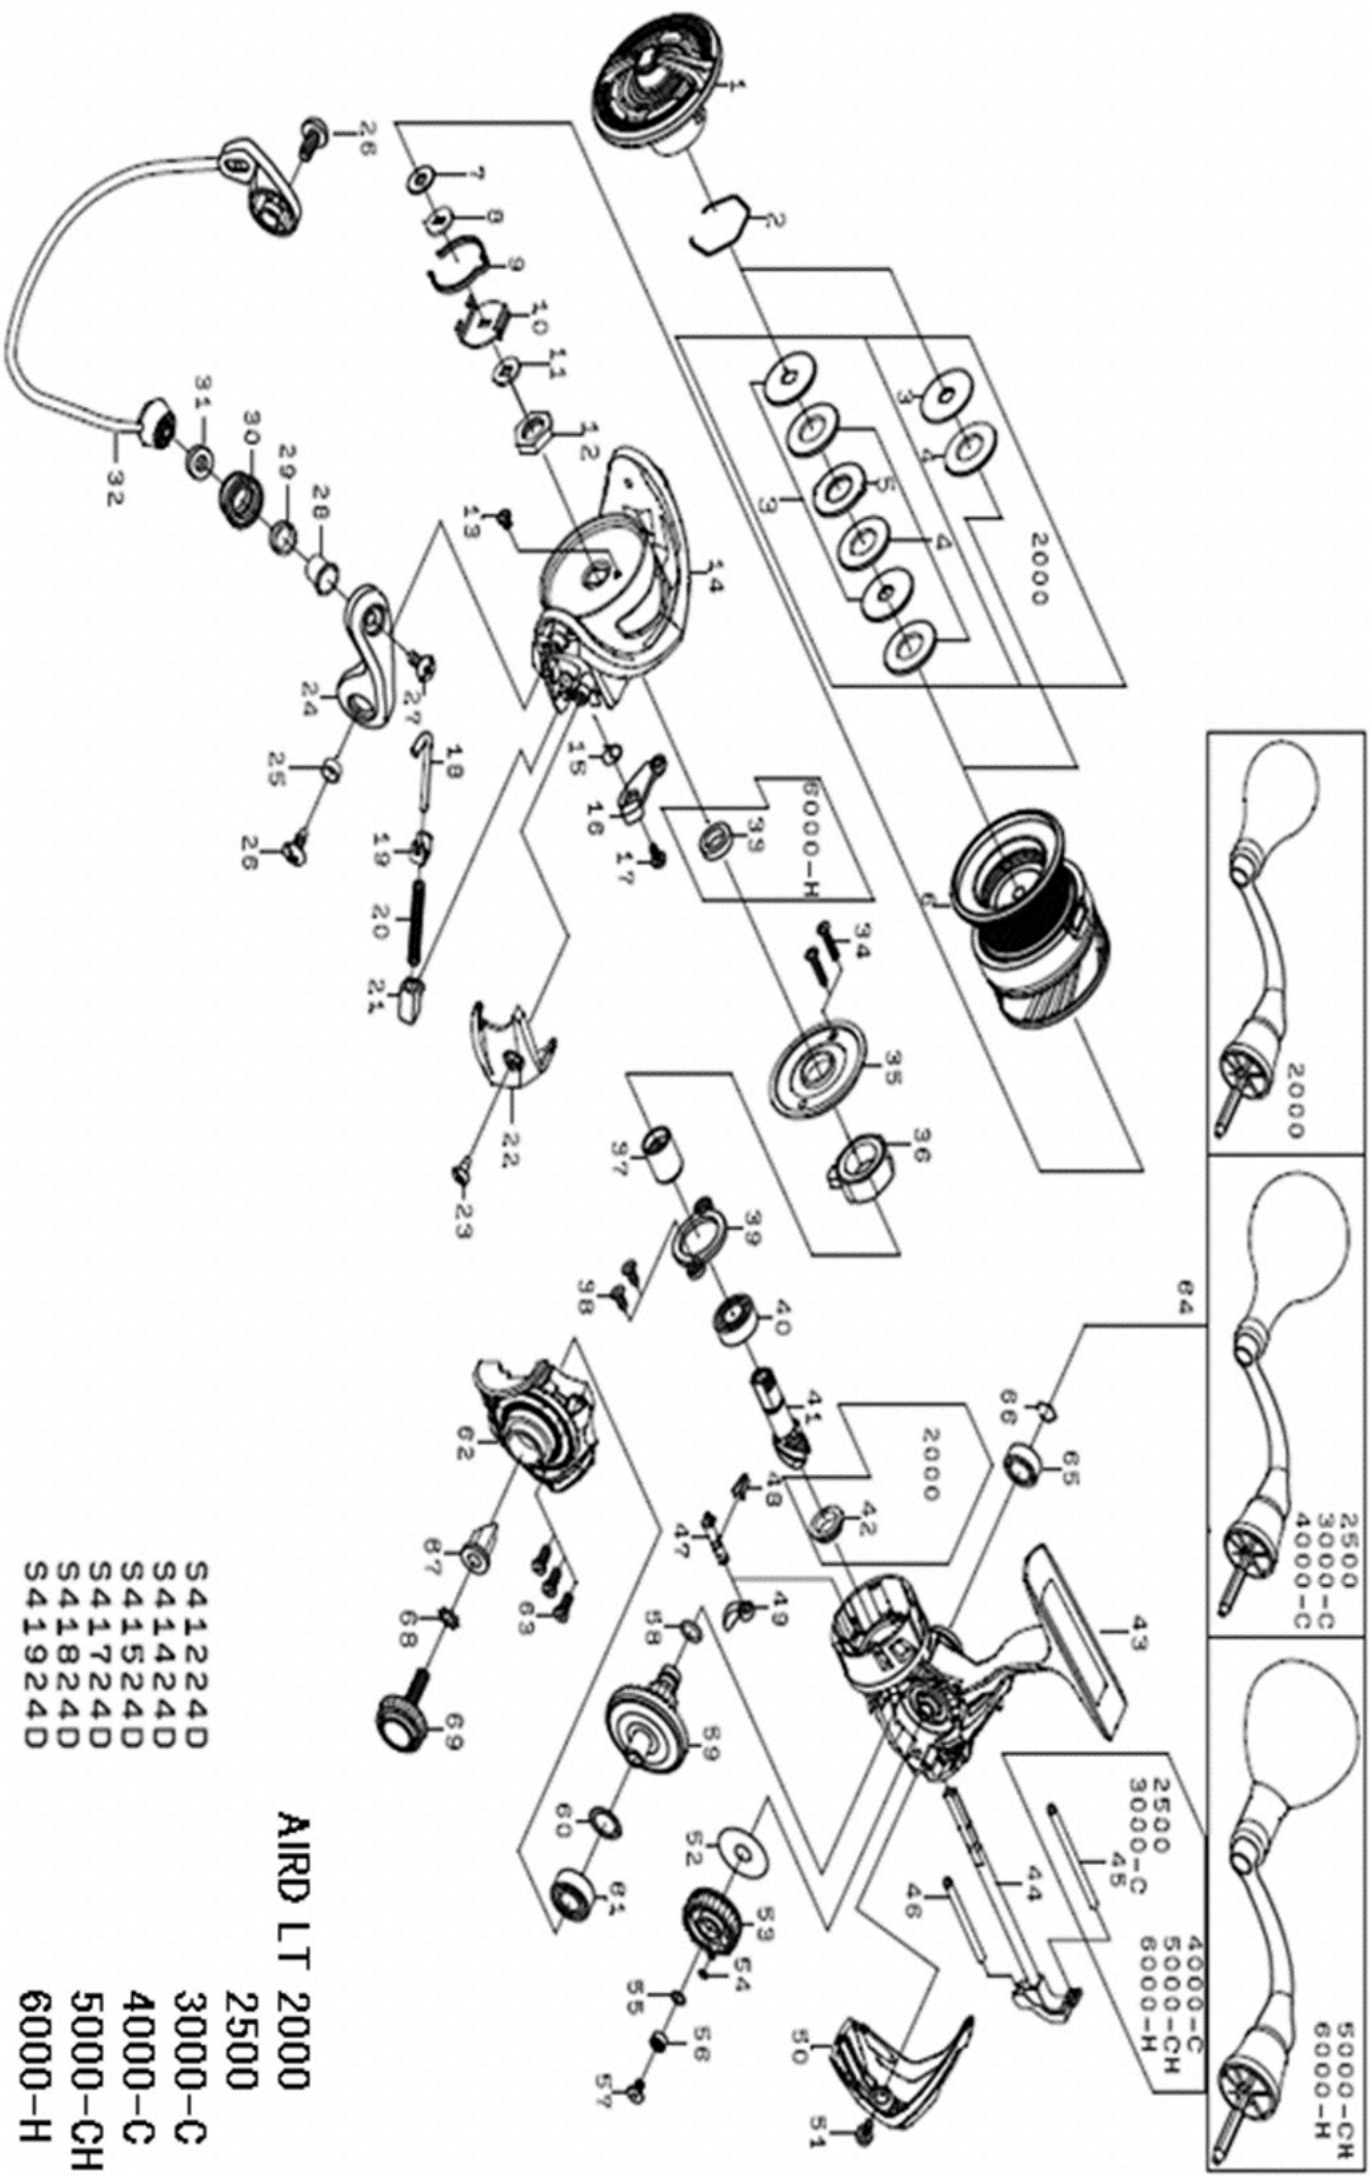

- S411224D
- S411424D
- S411524D
- S411724D
- S411824D
- S411924D

- AIRD LT 2000
- 2500
  - 3000-C
  - 4000-C
  - 5000-CH
  - 6000-H

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
AIRD LT 6000-H	S41924D	1	6Q364201	DRAG KNOB
AIRD LT 6000-H	S41924D	2	61704101	DRAG RING
AIRD LT 6000-H	S41924D	3	6J577501	DRAG DISC WASHER
AIRD LT 6000-H	S41924D	4	6J577201	ATD WASHER ASSY (1pack-3 pcs)
AIRD LT 6000-H	S41924D	5	6Q377601	DRAG LIP WASHER
AIRD LT 6000-H	S41924D	2~6	6Q557801	SPOOL ASSY(2-6)
AIRD LT 6000-H	S41924D	7	6F050100	SPOOL WASHER ( A )
AIRD LT 6000-H	S41924D	8	6Q363801	SPOOL WASHER ( B )
AIRD LT 6000-H	S41924D	9	6Q457701	CLICK LEAF SPRING
AIRD LT 6000-H	S41924D	10	6Q466801	CLICK HOLDER
AIRD LT 6000-H	S41924D	11	6Q377501	CLICK HOLDER WASHER
AIRD LT 6000-H	S41924D	12	6Q135201	ROTOR NUT
AIRD LT 6000-H	S41924D	13	6H022701	ROTOR NUT SCREW
AIRD LT 6000-H	S41924D	14	6Q134512	ROTOR
AIRD LT 6000-H	S41924D	15	6H413601	KICK LEVER SPRING
AIRD LT 6000-H	S41924D	16	6Q134601	KICK LEVER
AIRD LT 6000-H	S41924D	17	6H417701	KICK LEVER SCREW
AIRD LT 6000-H	S41924D	18	6Q134801	ARMLEVER SHAFT
AIRD LT 6000-H	S41924D	19	6H576101	ARMLEVER SHAFT PLATE
AIRD LT 6000-H	S41924D	20	6H640701	ARMLEVER SPRING
AIRD LT 6000-H	S41924D	21	6Q121501	ARMLEVER SPRING HOLDER
AIRD LT 6000-H	S41924D	22	6Q134904	ARMLEVER SPRING COVER
AIRD LT 6000-H	S41924D	23	6G205003	ARM LEVER SCREW
AIRD LT 6000-H	S41924D	24	6Q121607	ARMLEVER
AIRD LT 6000-H	S41924D	25	6Q121701	ARMLEVER SCREW COLLER
AIRD LT 6000-H	S41924D	26	6G205003	ARM LEVER SCREW
AIRD LT 6000-H	S41924D	27	6G195606	ROLLER SCREW
AIRD LT 6000-H	S41924D	28	6G195501	ROLLER COLLAR ( A )
AIRD LT 6000-H	S41924D	29	6G220701	ROLLER COLLAR ( B )
AIRD LT 6000-H	S41924D	30	6J089902	LINE ROLLER
AIRD LT 6000-H	S41924D	31	6Q203401	ROLLER COLLAR ( C )
AIRD LT 6000-H	S41924D	32	6Q373901	BAIL ASSY
AIRD LT 6000-H	S41924D	33	6H640301	CLUTCH RING COLLAR
AIRD LT 6000-H	S41924D	34	6G837101	SEALED PLATE SCREW
AIRD LT 6000-H	S41924D	35	6Q134301	SEALED PLATE
AIRD LT 6000-H	S41924D	36	6J015701	ONEWAY CLUTCH
AIRD LT 6000-H	S41924D	37	6J021301	CLUTCH RING
AIRD LT 6000-H	S41924D	38	6Q126201	PINION BEARING PLATE SCREW
AIRD LT 6000-H	S41924D	39	6J020801	PINION BEARING PLATE
AIRD LT 6000-H	S41924D	40	66354801	DRIVE BALL BEARING(A)
AIRD LT 6000-H	S41924D	41	6Q208701	PINION GEAR
AIRD LT 6000-H	S41924D	42	-----	-----
AIRD LT 6000-H	S41924D	43	6Q557501	BODY
AIRD LT 6000-H	S41924D	44	6Q362601	MAIN SHAFT
AIRD LT 6000-H	S41924D	45	6Q126303	OSCILLATING POST(A)
AIRD LT 6000-H	S41924D	46	6Q119103	OSCILLATING POST(B)
AIRD LT 6000-H	S41924D	47	6Q133401	STOPPER CAM
AIRD LT 6000-H	S41924D	48	6H697801	STOPPER LEVER SPRING
AIRD LT 6000-H	S41924D	49	6Q118001	STOPPER LEVER
AIRD LT 6000-H	S41924D	50	6Q465102	REAR COVER
AIRD LT 6000-H	S41924D	51	6G270804	REAR COVER SCREW
AIRD LT 6000-H	S41924D	52	6G644201	OSCILLATING GEAR WASHER
AIRD LT 6000-H	S41924D	53	6Q133501	OSCILLATING GEAR
AIRD LT 6000-H	S41924D	54	6B853101	OSCILLATING GEAR ORING
AIRD LT 6000-H	S41924D	55	6G522100	OSCILLATING GEAR BEARING WASHER
AIRD LT 6000-H	S41924D	56	6G467105	OSCILLATING GEAR BALL BEARING
AIRD LT 6000-H	S41924D	57	6H463401	OSCILLATING GEAR SCREW
AIRD LT 6000-H	S41924D	58	6G645301	DRIVE GEAR O-RING
AIRD LT 6000-H	S41924D	59	6Q167401	DRIVE GEAR
AIRD LT 6000-H	S41924D	60	63737800	DRIVE WASHER
AIRD LT 6000-H	S41924D	61	6B861705	DRIVE BALL BEARING(A)
AIRD LT 6000-H	S41924D	62	6Q557601	BODY COVER
AIRD LT 6000-H	S41924D	63	6G115001	BODY COVER SCREW
AIRD LT 6000-H	S41924D	64	6Q559401	HANDLE ASSY
AIRD LT 6000-H	S41924D	65	6B861705	DRIVE BALL BEARING(B)
AIRD LT 6000-H	S41924D	66	6G525101	DRIVE BEARING RETAINER
AIRD LT 6000-H	S41924D	67	6F721202	HANDLE SCREW COLLAR
AIRD LT 6000-H	S41924D	68	63737800	HANDLE SCRER WAWSHER
AIRD LT 6000-H	S41924D	69	6Q136101	HANDLE SCREW
AIRD LT 6000-H	S41924D	200	6Q283501	HANDLE KNOB ASSY
AIRD LT 6000-H	S41924D	201	6G720001	HANDLE KNOB BEARING COLLAR
AIRD LT 6000-H	S41924D	202	6B411700	HANDLE KNOB WASHER
AIRD LT 6000-H	S41924D	203	6B679308	HANDLE KNOB SCREW
AIRD LT 6000-H	S41924D	204	6J313201	SCREW ASSY