




# AIRD 1000SH

Feel Alive.

Please quote by part number, not key number when ordering.  
spares@daiwaaustralia.com.au PH: (02) 8644 8644

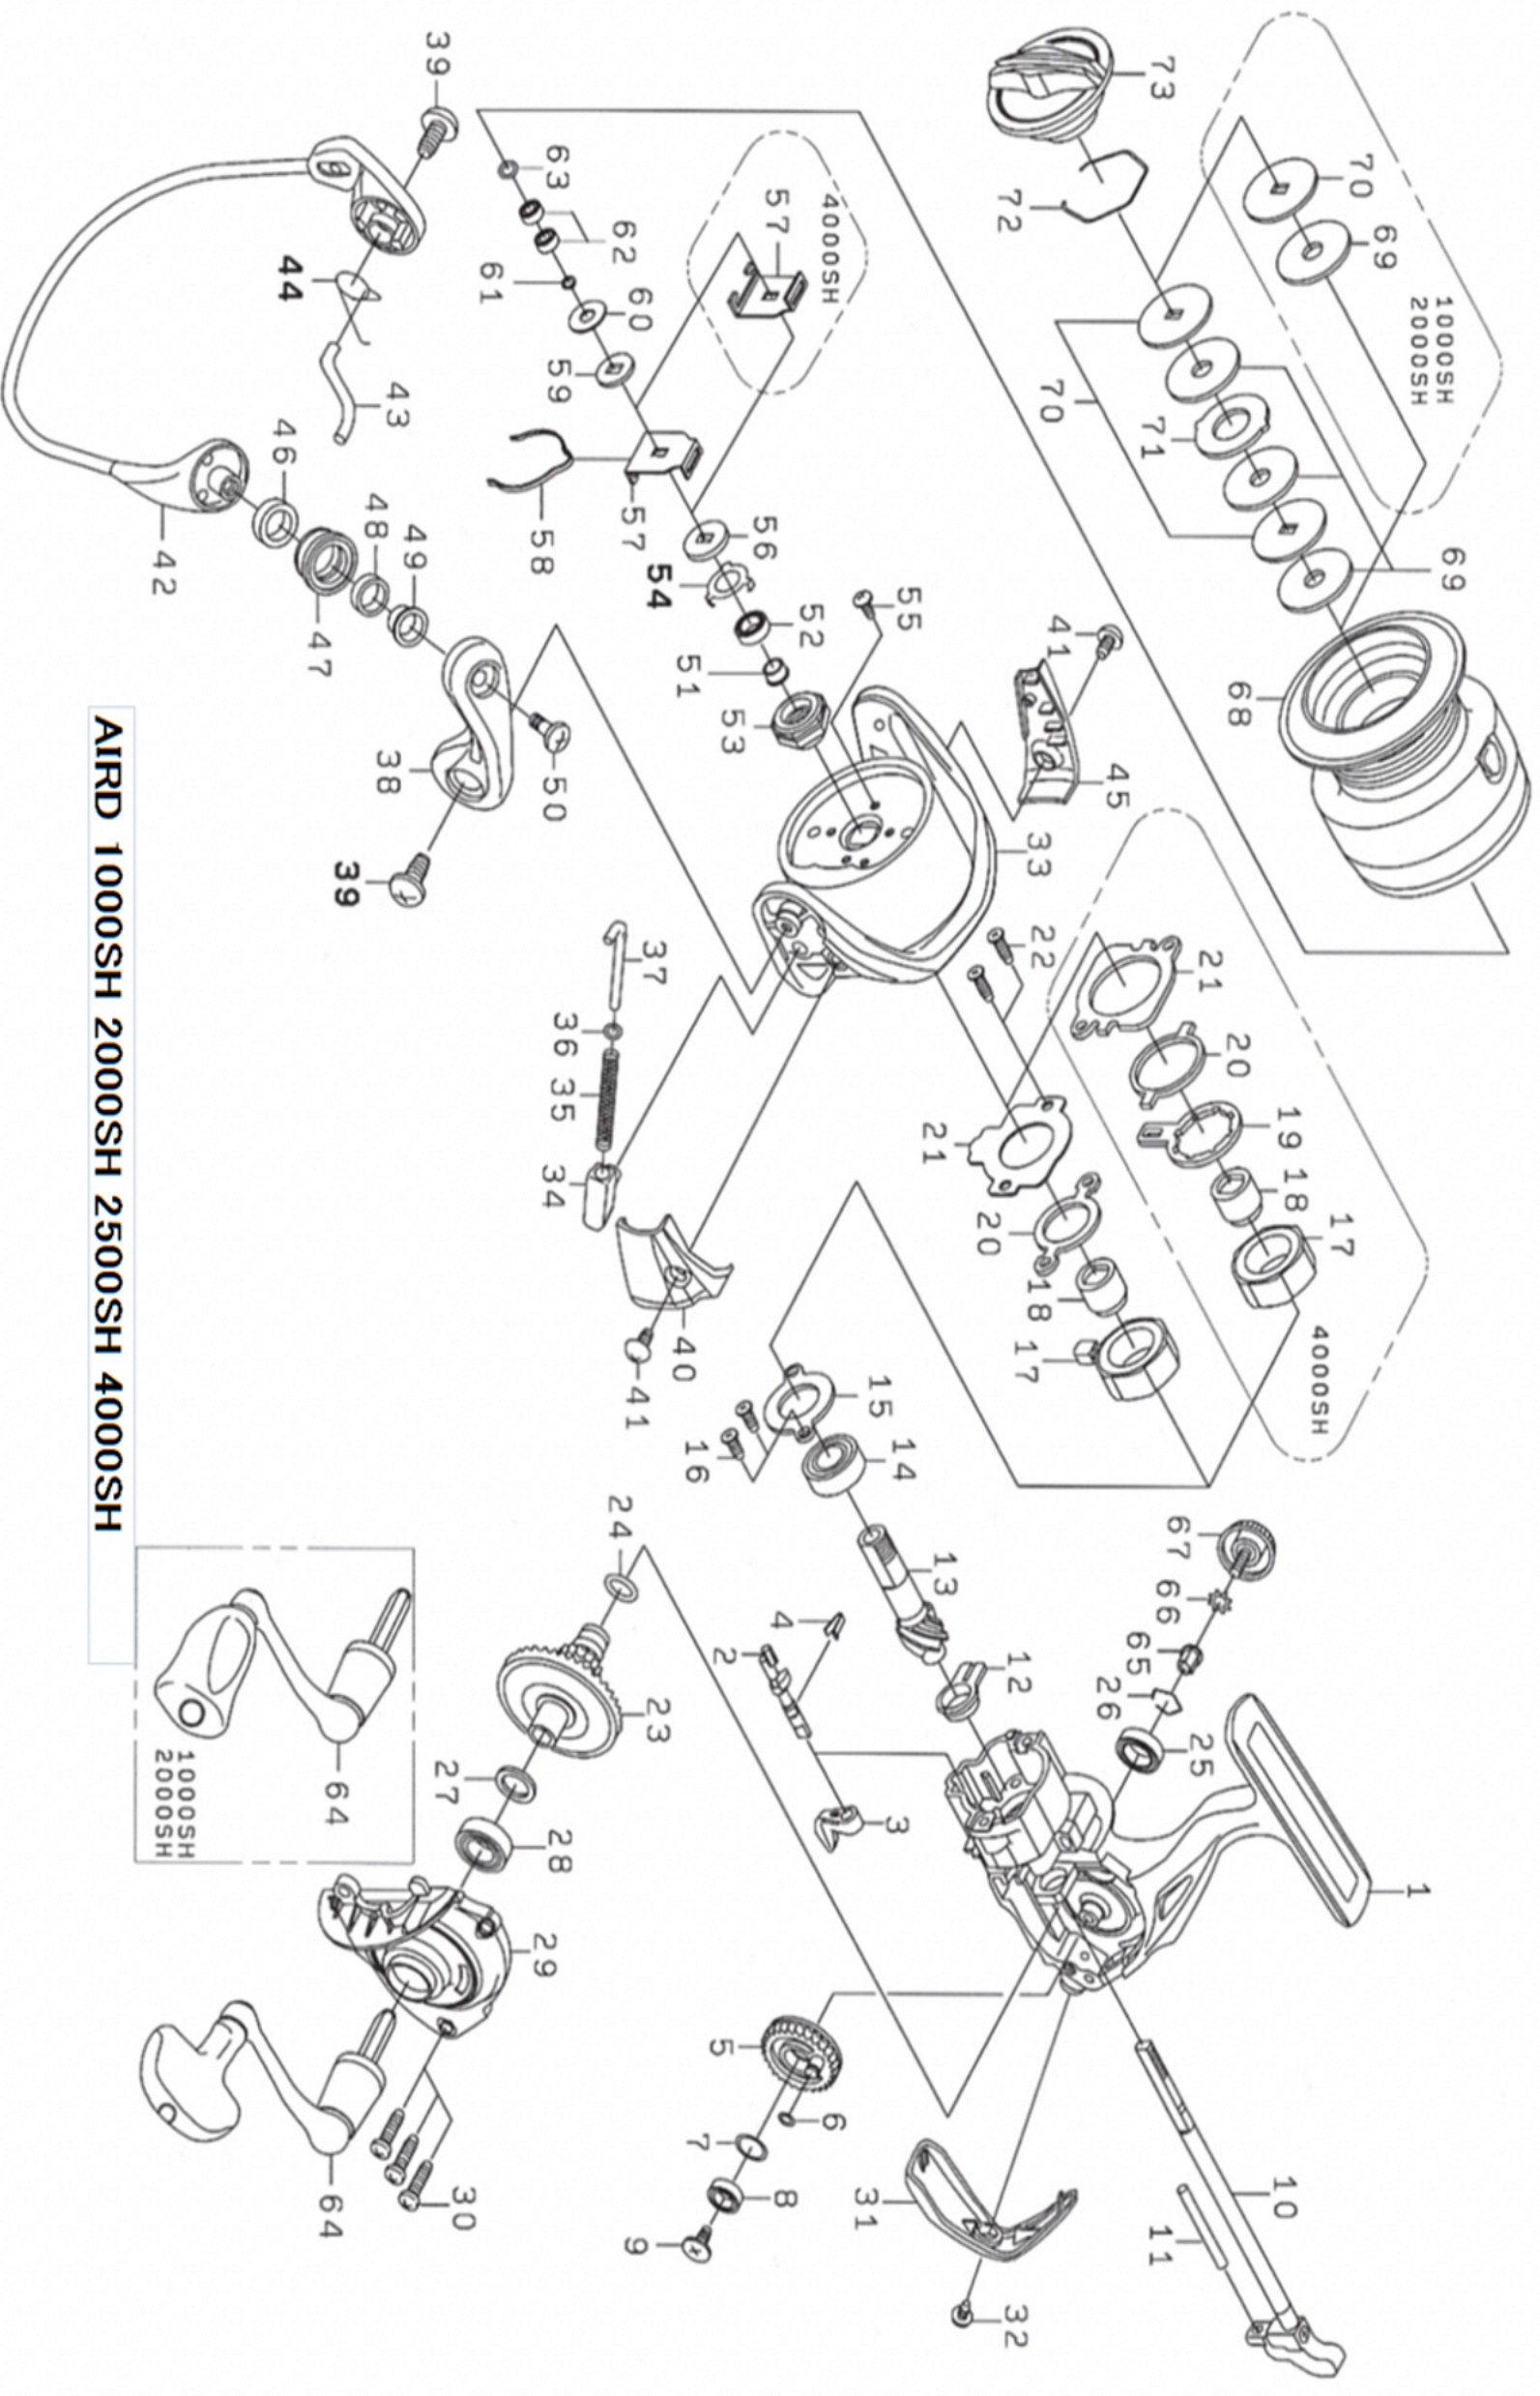

AIRD 1000SH 2000SH 2500SH 4000SH

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
AIRD 1000SH	S071PA1	1	6H762701	BODY
AIRD 1000SH	S071PA1	2	6H463101	ANTI-REVERSE CAM
AIRD 1000SH	S071PA1	3	6H463203	ANTI-REVERSE LEVER
AIRD 1000SH	S071PA1	4	6H463301	ANTI-REVERSE CAM SPRING
AIRD 1000SH	S071PA1	5	6H495801	OSCILLATING GEAR
AIRD 1000SH	S071PA1	6	6G683301	"O" RING (A)
AIRD 1000SH	S071PA1	7	6G466100	WASHER (A)
AIRD 1000SH	S071PA1	8	6F055602	BALL BEARING (A)
AIRD 1000SH	S071PA1	9	6H463401	SCREW (A)
AIRD 1000SH	S071PA1	10	6H733301	MAIN SHAFT
AIRD 1000SH	S071PA1	11	6H494201	STABILIZER BAR
AIRD 1000SH	S071PA1	12	6H463801	COLLAR (A)
AIRD 1000SH	S071PA1	13	6H733401	PINION GEAR
AIRD 1000SH	S071PA1	14	6H726802	BALL BEARING (B)
AIRD 1000SH	S071PA1	15	6H463901	BEARING RETAINER (A)
AIRD 1000SH	S071PA1	16	6H624901	SCREW (B)
AIRD 1000SH	S071PA1	17	6G539201	ROLLER CLUTCH
AIRD 1000SH	S071PA1	18	6H624702	SPACING SLEEVE
AIRD 1000SH	S071PA1	19	-	CLUTCH CAM
AIRD 1000SH	S071PA1	20	6H161801	CLUTCH CAM RETAINER
AIRD 1000SH	S071PA1	21	6H464001	ROLLER CLUTCH RETAINER
AIRD 1000SH	S071PA1	22	6G837101	SCREW (C)
AIRD 1000SH	S071PA1	23	6H733501	DRIVE GEAR
AIRD 1000SH	S071PA1	24	6G670501	"O" RING (B)
AIRD 1000SH	S071PA1	25	6G522703	BALL BEARING (C)
AIRD 1000SH	S071PA1	26	6G472401	BEARING RETAINER (B)
AIRD 1000SH	S071PA1	27	63758500	WASHER (B)
AIRD 1000SH	S071PA1	28	6G467302	BALL BEARING (D)
AIRD 1000SH	S071PA1	29	6H762801	SIDE COVER
AIRD 1000SH	S071PA1	30	6G115001	SCREW (D)
AIRD 1000SH	S071PA1	31	6H494702	REAR COVER
AIRD 1000SH	S071PA1	32	6G270801	SCREW (E)
AIRD 1000SH	S071PA1	33	6Q131702	ROTOR
AIRD 1000SH	S071PA1	34	6H496701	BAIL SPRING HOLDER
AIRD 1000SH	S071PA1	35	6G471701	BAIL SPRING
AIRD 1000SH	S071PA1	36	6E313901	WASHER (C)
AIRD 1000SH	S071PA1	37	6G471805	BAIL SPRING SHAFT
AIRD 1000SH	S071PA1	38	6H464503	BAIL ARM
AIRD 1000SH	S071PA1	39	6G205001	SCREW (F)
AIRD 1000SH	S071PA1	40	6H497902	COVER (A)
AIRD 1000SH	S071PA1	41	6G270801	SCREW (G)
AIRD 1000SH	S071PA1	42	6H762901	BAIL ASSEMBLY
AIRD 1000SH	S071PA1	43	6G630801	BAIL TRIP LEVER
AIRD 1000SH	S071PA1	44	6G613101	BAIL TRIP LEVER SPRING
AIRD 1000SH	S071PA1	45	6H498002	COVER (B)
AIRD 1000SH	S071PA1	46	6G047601	COLLAR (B)
AIRD 1000SH	S071PA1	47	6F921601	LINE ROLLER
AIRD 1000SH	S071PA1	48	6G220701	COLLAR (C)
AIRD 1000SH	S071PA1	49	6G195501	COLLAR (D)
AIRD 1000SH	S071PA1	50	6G195602	SCREW (H)
AIRD 1000SH	S071PA1	51	6G613501	COLLAR (E)
AIRD 1000SH	S071PA1	52	6G466202	BALL BEARING (E)
AIRD 1000SH	S071PA1	53	6G471301	ROTOR NUT
AIRD 1000SH	S071PA1	54	6G471501	BEARING RETAINER (C)
AIRD 1000SH	S071PA1	55	6G627701	SCREW (I)
AIRD 1000SH	S071PA1	56	6E246101	WASHER (D)
AIRD 1000SH	S071PA1	57	6G700001	CLICK LEAF SPRING HOLDER
AIRD 1000SH	S071PA1	58	6H570801	SPOOL CLICK LEAF SPRING
AIRD 1000SH	S071PA1	59	6E467101	WASHER (E)
AIRD 1000SH	S071PA1	60	6E398000	WASHER (F)
AIRD 1000SH	S071PA1	61	6B411706	WASHER (G)
AIRD 1000SH	S071PA1	62	6E332501	BALL BEARING (F)
AIRD 1000SH	S071PA1	63	6G213001	"O" RING (C)
AIRD 1000SH	S071PA1	64	6H763001	HANDLE ASSEMBLY
AIRD 1000SH	S071PA1	65	6F721001	COLLAR (F)
AIRD 1000SH	S071PA1	66	61608101	WASHER (H)
AIRD 1000SH	S071PA1	67	6H590801	HANDLE SCREW
AIRD 1000SH	S071PA1	68-72	6H763101	SPOOL ASSEMBLY
AIRD 1000SH	S071PA1	69	6E136001	DRAG WASHER
AIRD 1000SH	S071PA1	70	6E467201	KEY WASHER
AIRD 1000SH	S071PA1	71	-	EARED WASHER
AIRD 1000SH	S071PA1	72	6F373301	DRAG WASHER RETAINER
AIRD 1000SH	S071PA1	73	6H763301	DRAG KNOB
AIRD 1000SH	S071PA1	68-72	6H763101	SPOOL ASSEMBLY (EXTRA SPOOL)