




# AIRD 2500SH

Feel Alive.

Please quote by part number, not key number when ordering.  
spares@daiwaaustralia.com.au PH: (02) 8644 8644

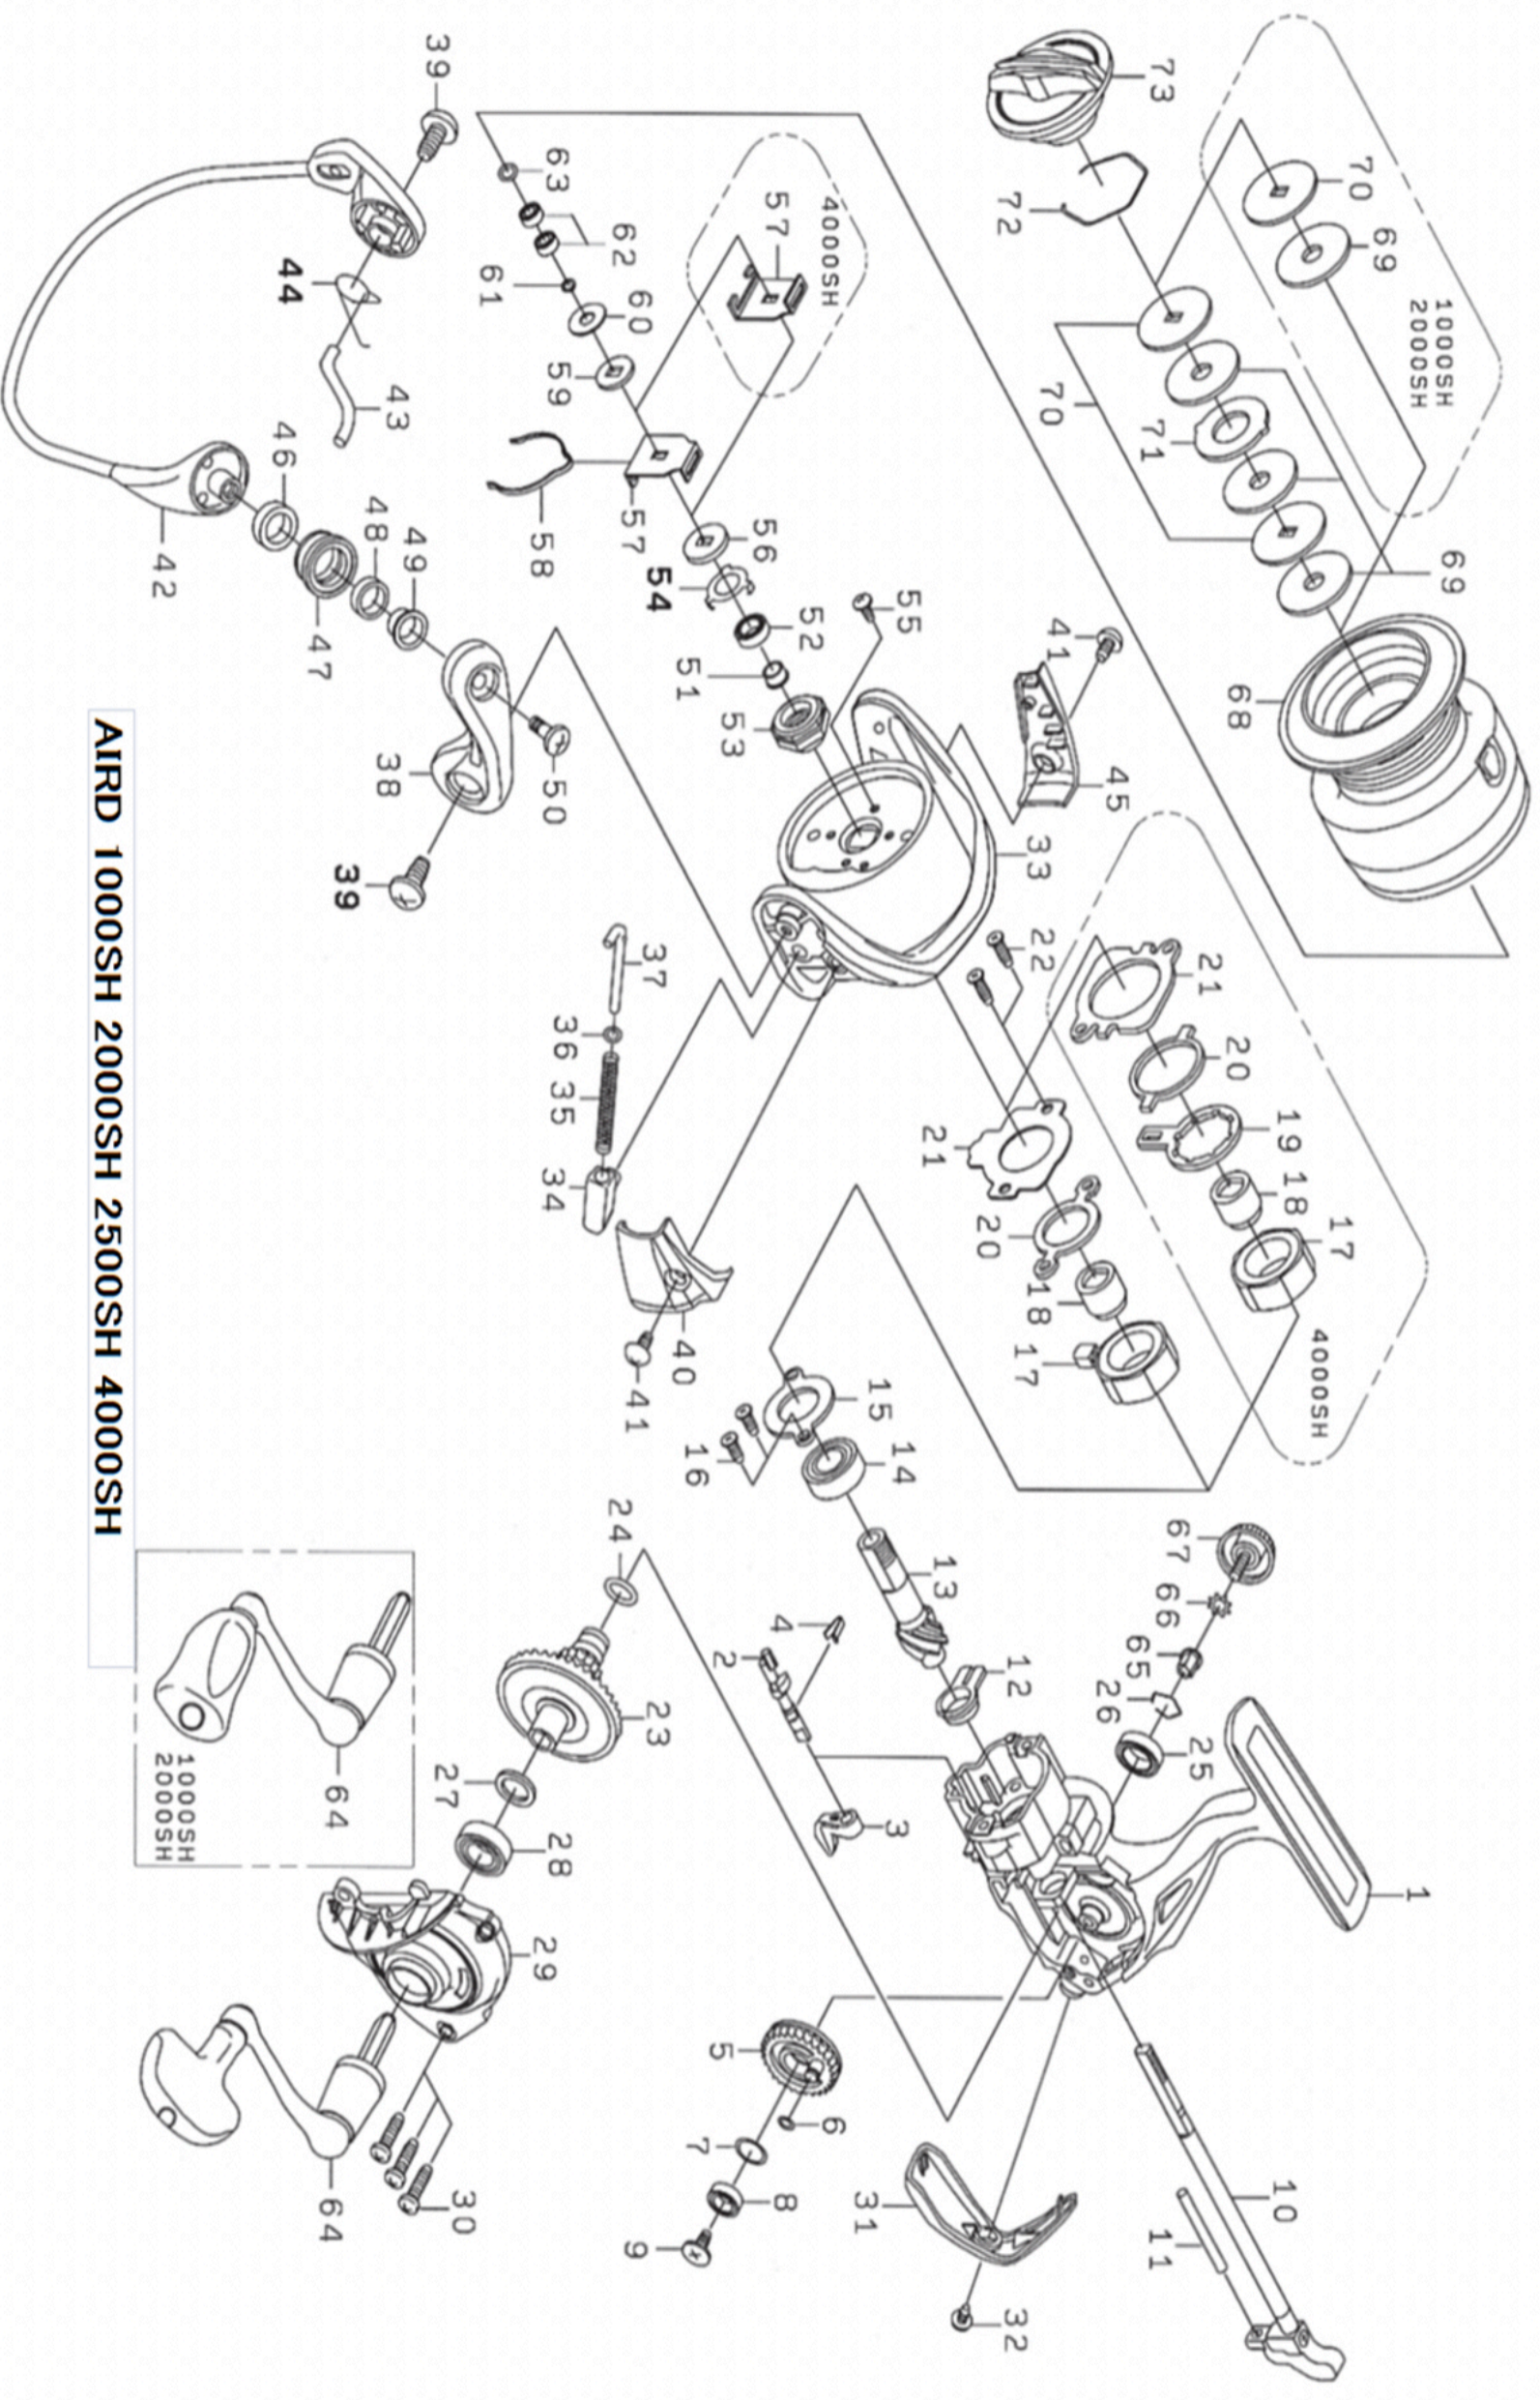

AIRD 1000SH 2000SH 2500SH 4000SH

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
AIRD 2500SH	S074PA1	1	6H767101	BODY
AIRD 2500SH	S074PA1	2	6H463101	ANTI-REVERSE CAM
AIRD 2500SH	S074PA1	3	6H463203	ANTI-REVERSE LEVER
AIRD 2500SH	S074PA1	4	6H463301	ANTI-REVERSE CAM SPRING
AIRD 2500SH	S074PA1	5	6H489801	OSCILLATING GEAR
AIRD 2500SH	S074PA1	6	6G466001	"O" RING (A)
AIRD 2500SH	S074PA1	7	6G466100	WASHER (A)
AIRD 2500SH	S074PA1	8	6F055602	BALL BEARING (A)
AIRD 2500SH	S074PA1	9	6H463401	SCREW (A)
AIRD 2500SH	S074PA1	10	6H732501	MAIN SHAFT
AIRD 2500SH	S074PA1	11	6H463701	STABILIZER BAR
AIRD 2500SH	S074PA1	12	6H463801	COLLAR (A)
AIRD 2500SH	S074PA1	13	6H782901	PINION GEAR
AIRD 2500SH	S074PA1	14	6H726802	BALL BEARING (B)
AIRD 2500SH	S074PA1	15	6H463901	BEARING RETAINER (A)
AIRD 2500SH	S074PA1	16	6H624901	SCREW (B)
AIRD 2500SH	S074PA1	17	6G539201	ROLLER CLUTCH
AIRD 2500SH	S074PA1	18	6H624702	SPACING SLEEVE
AIRD 2500SH	S074PA1	19	-	CLUTCH CAM
AIRD 2500SH	S074PA1	20	6H161801	CLUTCH CAM RETAINER
AIRD 2500SH	S074PA1	21	6H464001	ROLLER CLUTCH RETAINER
AIRD 2500SH	S074PA1	22	6G837101	SCREW (C)
AIRD 2500SH	S074PA1	23	6H726901	DRIVE GEAR
AIRD 2500SH	S074PA1	24	6G670501	"O" RING (B)
AIRD 2500SH	S074PA1	25	6G522703	BALL BEARING (C)
AIRD 2500SH	S074PA1	26	6G472401	BEARING RETAINER (B)
AIRD 2500SH	S074PA1	27	63758500	WASHER (B)
AIRD 2500SH	S074PA1	28	6G467302	BALL BEARING (D)
AIRD 2500SH	S074PA1	29	6H767201	SIDE COVER
AIRD 2500SH	S074PA1	30	6G115001	SCREW (D)
AIRD 2500SH	S074PA1	31	6H464302	REAR COVER
AIRD 2500SH	S074PA1	32	6G270801	SCREW (E)
AIRD 2500SH	S074PA1	33	6H464410	ROTOR
AIRD 2500SH	S074PA1	34	6H496701	BAIL SPRING HOLDER
AIRD 2500SH	S074PA1	35	6G471701	BAIL SPRING
AIRD 2500SH	S074PA1	36	6E313901	WASHER (C)
AIRD 2500SH	S074PA1	37	6G471805	BAIL SPRING SHAFT
AIRD 2500SH	S074PA1	38	6H464503	BAIL ARM
AIRD 2500SH	S074PA1	39	6G205001	SCREW (F)
AIRD 2500SH	S074PA1	40	6H496802	COVER (A)
AIRD 2500SH	S074PA1	41	6G270801	SCREW (G)
AIRD 2500SH	S074PA1	42	6H767301	BAIL ASSEMBLY
AIRD 2500SH	S074PA1	43	6G613001	BAIL TRIP LEVER
AIRD 2500SH	S074PA1	44	6G613101	BAIL TRIP LEVER SPRING
AIRD 2500SH	S074PA1	45	6H496902	COVER (B)
AIRD 2500SH	S074PA1	46	6G047601	COLLAR (B)
AIRD 2500SH	S074PA1	47	6F921601	LINE ROLLER
AIRD 2500SH	S074PA1	48	6G220701	COLLAR (C)
AIRD 2500SH	S074PA1	49	6G195501	COLLAR (D)
AIRD 2500SH	S074PA1	50	6G195602	SCREW (H)
AIRD 2500SH	S074PA1	51	6G613501	COLLAR (E)
AIRD 2500SH	S074PA1	52	6G466202	BALL BEARING (E)
AIRD 2500SH	S074PA1	53	6G471301	ROTOR NUT
AIRD 2500SH	S074PA1	54	6G471501	BEARING RETAINER (C)
AIRD 2500SH	S074PA1	55	6G627701	SCREW (I)
AIRD 2500SH	S074PA1	56	6E246101	WASHER (D)
AIRD 2500SH	S074PA1	57	6G700001	CLICK LEAF SPRING HOLDER
AIRD 2500SH	S074PA1	58	6H570801	SPOOL CLICK LEAF SPRING
AIRD 2500SH	S074PA1	59	6E467101	WASHER (E)
AIRD 2500SH	S074PA1	60	6E398000	WASHER (F)
AIRD 2500SH	S074PA1	61	6B411706	WASHER (G)
AIRD 2500SH	S074PA1	62	6E332501	BALL BEARING (F)
AIRD 2500SH	S074PA1	63	6G213001	"O" RING (C)
AIRD 2500SH	S074PA1	64	6H767401	HANDLE ASSEMBLY
AIRD 2500SH	S074PA1	65	6F721001	COLLAR (F)
AIRD 2500SH	S074PA1	66	61608101	WASHER (H)
AIRD 2500SH	S074PA1	67	6H590801	HANDLE SCREW
AIRD 2500SH	S074PA1	68-72	6H767501	SPOOL ASSEMBLY
AIRD 2500SH	S074PA1	69	6E136001	DRAG WASHER
AIRD 2500SH	S074PA1	70	6E467201	KEY WASHER
AIRD 2500SH	S074PA1	71	63733606	EARED WASHER
AIRD 2500SH	S074PA1	72	6F373301	DRAG WASHER RETAINER
AIRD 2500SH	S074PA1	73	6H767701	DRAG KNOB
AIRD 2500SH	S074PA1	68-72	6H777501	SPOOL ASSEMBLY (EXTRA SPOOL)