




AIRD 4000SH

Feel Alive.

Please quote by part number, not key number when ordering.
spares@daiwaaustralia.com.au PH: (02) 8644 8644

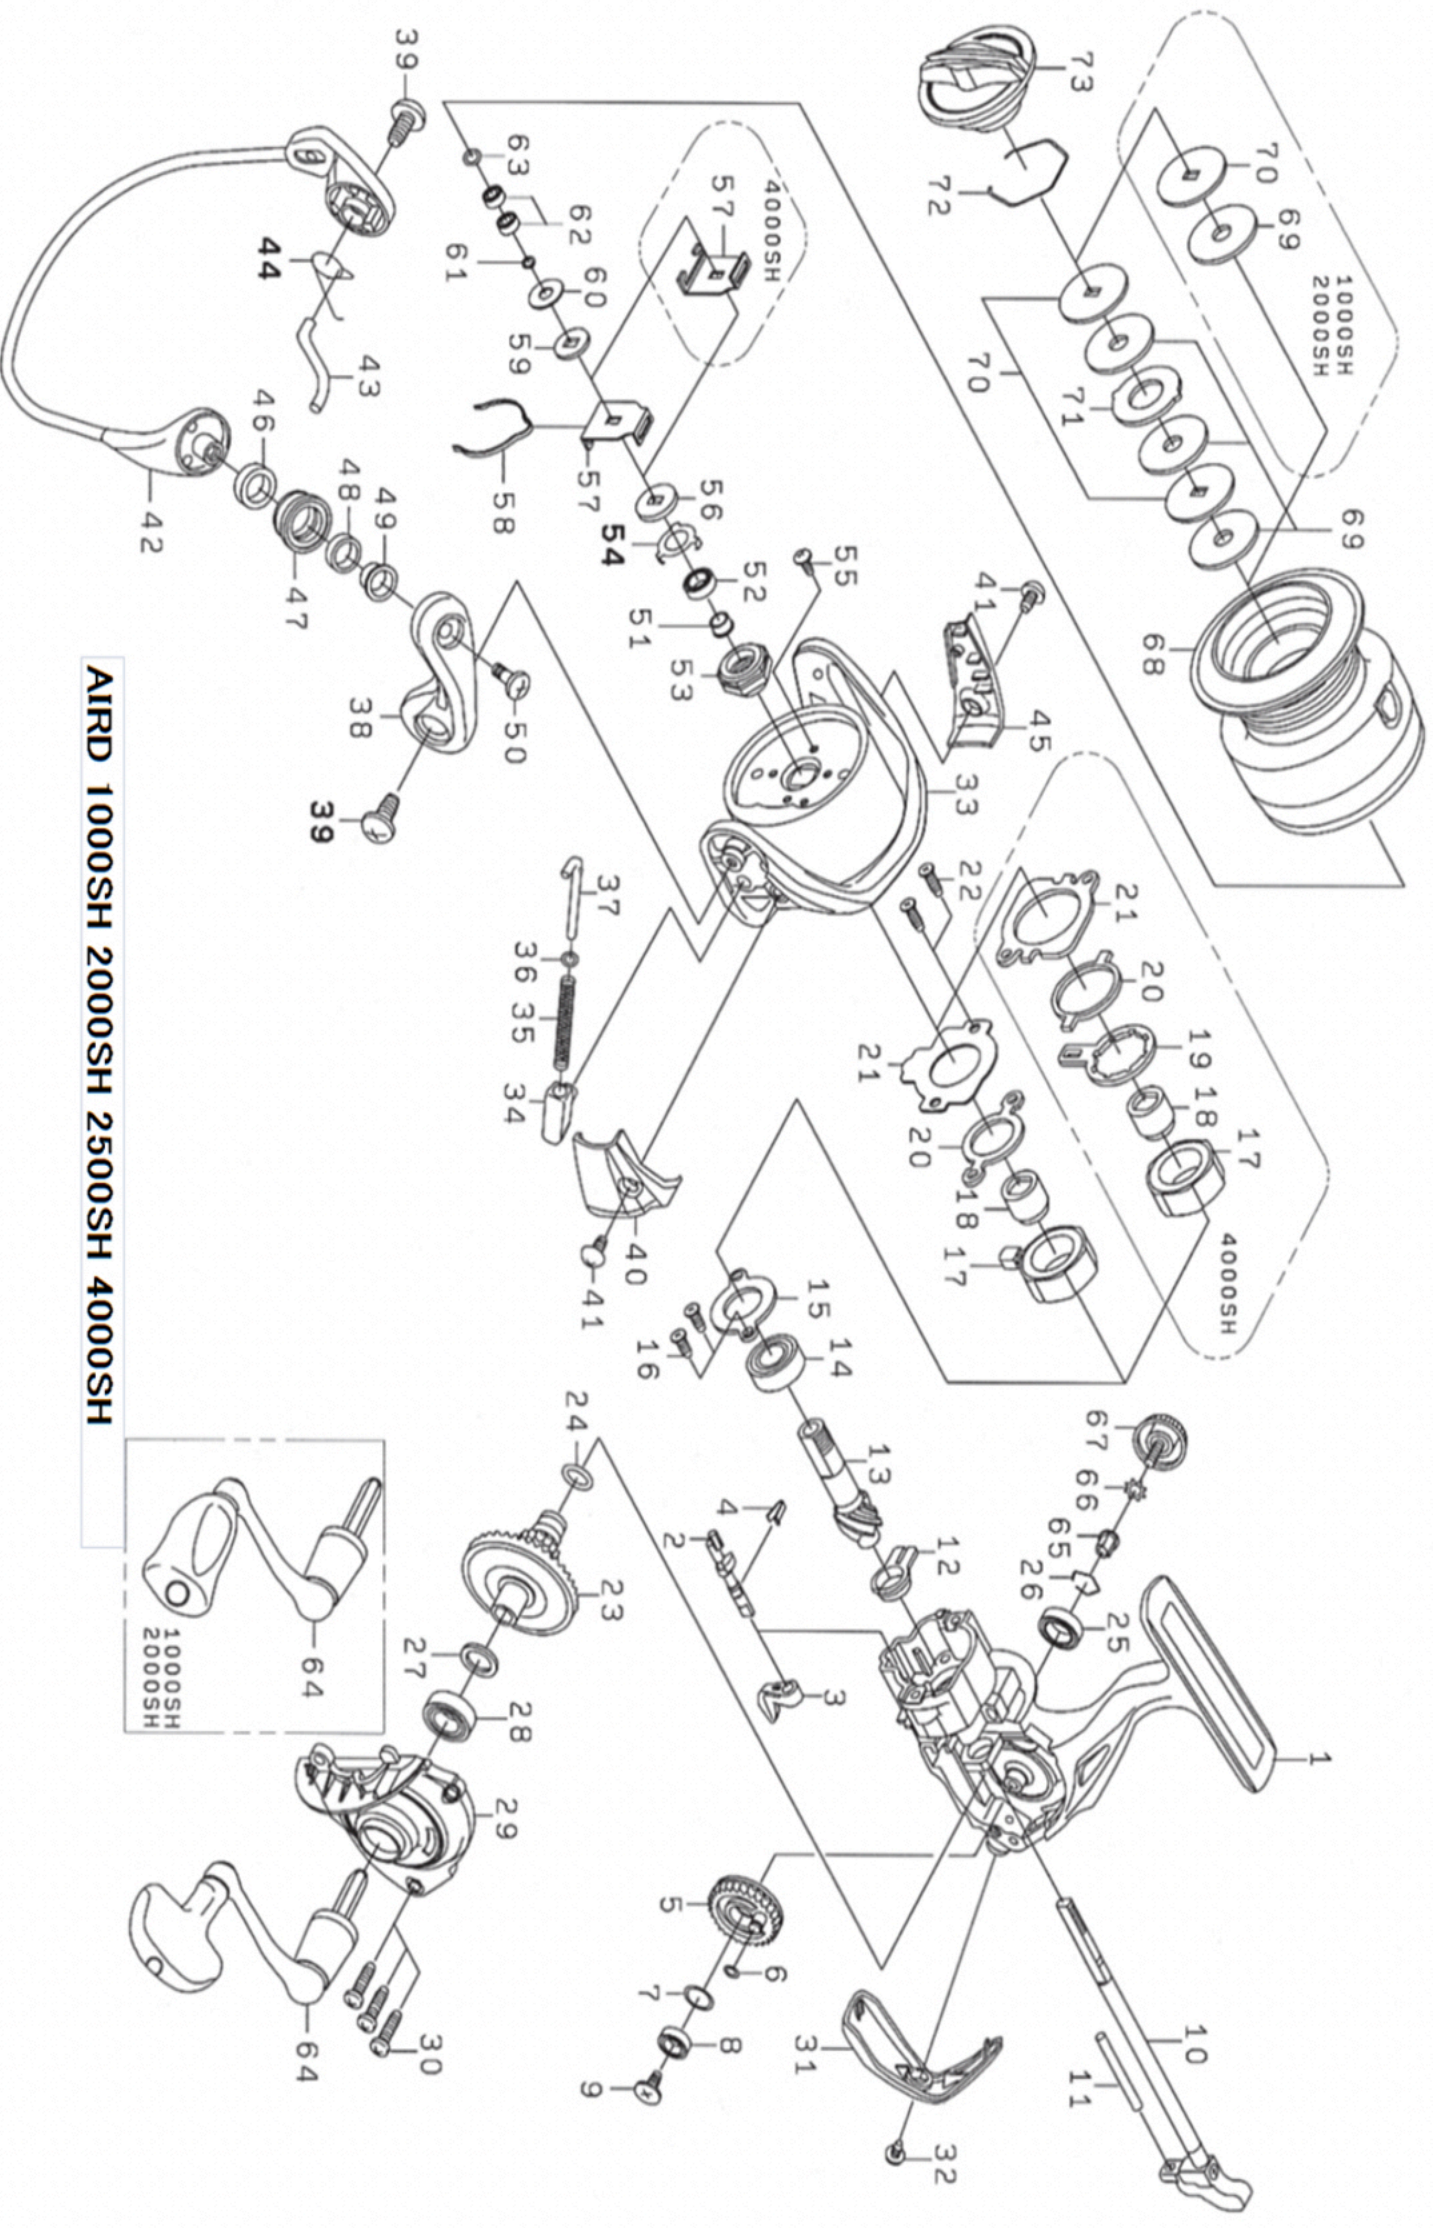

AIRD 1000SH 2000SH 2500SH 4000SH

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
AIRD 4000SH	S078PA1	1	6H767801	BODY
AIRD 4000SH	S078PA1	2	6H508301	ANTI-REVERSE CAM
AIRD 4000SH	S078PA1	3	6H463203	ANTI-REVERSE LEVER
AIRD 4000SH	S078PA1	4	6H463301	ANTI-REVERSE CAM SPRING
AIRD 4000SH	S078PA1	5	6H545301	OSCILLATING GEAR
AIRD 4000SH	S078PA1	6	6B853101	"O" RING (A)
AIRD 4000SH	S078PA1	7	6G522100	WASHER (A)
AIRD 4000SH	S078PA1	8	6G467102	BALL BEARING (A)
AIRD 4000SH	S078PA1	9	6H463401	SCREW (A)
AIRD 4000SH	S078PA1	10	6H734801	MAIN SHAFT
AIRD 4000SH	S078PA1	11	6H508801	STABILIZER BAR
AIRD 4000SH	S078PA1	12	6H508901	COLLAR (A)
AIRD 4000SH	S078PA1	13	6H783101	PINION GEAR
AIRD 4000SH	S078PA1	14	6H735002	BALL BEARING (B)
AIRD 4000SH	S078PA1	15	6H509101	BEARING RETAINER (A)
AIRD 4000SH	S078PA1	16	6H624901	SCREW (B)
AIRD 4000SH	S078PA1	17	6G314501	ROLLER CLUTCH
AIRD 4000SH	S078PA1	18	6G743003	SPACING SLEEVE
AIRD 4000SH	S078PA1	19	6F641401	CLUTCH CAM
AIRD 4000SH	S078PA1	20	6F641501	CLUTCH CAM RETAINER
AIRD 4000SH	S078PA1	21	6H515001	ROLLER CLUTCH RETAINER
AIRD 4000SH	S078PA1	22	6G837101	SCREW (C)
AIRD 4000SH	S078PA1	23	6H735101	DRIVE GEAR
AIRD 4000SH	S078PA1	24	6G645301	"O" RING (B)
AIRD 4000SH	S078PA1	25	6B861704	BALL BEARING (C)
AIRD 4000SH	S078PA1	26	6G525101	BEARING RETAINER (B)
AIRD 4000SH	S078PA1	27	63737800	WASHER (B)
AIRD 4000SH	S078PA1	28	6G523401	BALL BEARING (D)
AIRD 4000SH	S078PA1	29	6H767901	SIDE COVER
AIRD 4000SH	S078PA1	30	6G115001	SCREW (D)
AIRD 4000SH	S078PA1	31	6H509502	REAR COVER
AIRD 4000SH	S078PA1	32	6G270801	SCREW (E)
AIRD 4000SH	S078PA1	33	6H509606	ROTOR
AIRD 4000SH	S078PA1	34	6H509701	BAIL SPRING HOLDER
AIRD 4000SH	S078PA1	35	6G646201	BAIL SPRING
AIRD 4000SH	S078PA1	36	6E313901	WASHER (C)
AIRD 4000SH	S078PA1	37	6G298201	BAIL SPRING SHAFT
AIRD 4000SH	S078PA1	38	6H464503	BAIL ARM
AIRD 4000SH	S078PA1	39	6G205001	SCREW (F)
AIRD 4000SH	S078PA1	40	6H509802	COVER (A)
AIRD 4000SH	S078PA1	41	6G270801	SCREW (G)
AIRD 4000SH	S078PA1	42	6H770201	BAIL ASSEMBLY
AIRD 4000SH	S078PA1	43	6G646501	BAIL TRIP LEVER
AIRD 4000SH	S078PA1	44	6G613101	BAIL TRIP LEVER SPRING
AIRD 4000SH	S078PA1	45	6H510102	COVER (B)
AIRD 4000SH	S078PA1	46	6G047601	COLLAR (B)
AIRD 4000SH	S078PA1	47	6F921601	LINE ROLLER
AIRD 4000SH	S078PA1	48	6G220701	COLLAR (C)
AIRD 4000SH	S078PA1	49	6G195501	COLLAR (D)
AIRD 4000SH	S078PA1	50	6G195602	SCREW (H)
AIRD 4000SH	S078PA1	51	6G646701	COLLAR (E)
AIRD 4000SH	S078PA1	52	6G467102	BALL BEARING (E)
AIRD 4000SH	S078PA1	53	6G524701	ROTOR NUT
AIRD 4000SH	S078PA1	54	6G524801	BEARING RETAINER (C)
AIRD 4000SH	S078PA1	55	6G627701	SCREW (I)
AIRD 4000SH	S078PA1	56	6E246101	WASHER (D)
AIRD 4000SH	S078PA1	57	6G743901	CLICK LEAF SPRING HOLDER
AIRD 4000SH	S078PA1	58	6F709002	SPOOL CLICK LEAF SPRING
AIRD 4000SH	S078PA1	59	6E467101	WASHER (E)
AIRD 4000SH	S078PA1	60	6E398000	WASHER (F)
AIRD 4000SH	S078PA1	61	6B411706	WASHER (G)
AIRD 4000SH	S078PA1	62	6E332501	BALL BEARING (F)
AIRD 4000SH	S078PA1	63	6G213001	"O" RING (C)
AIRD 4000SH	S078PA1	64	6H770301	HANDLE ASSEMBLY
AIRD 4000SH	S078PA1	65	6F721202	COLLAR (F)
AIRD 4000SH	S078PA1	66	61608101	WASHER (H)
AIRD 4000SH	S078PA1	67	6H592801	HANDLE SCREW
AIRD 4000SH	S078PA1	68-72	6H770401	SPOOL ASSEMBLY
AIRD 4000SH	S078PA1	69	6E136001	DRAG WASHER
AIRD 4000SH	S078PA1	70	6E467201	KEY WASHER
AIRD 4000SH	S078PA1	71	63733606	EARED WASHER
AIRD 4000SH	S078PA1	72	6F373301	DRAG WASHER RETAINER
AIRD 4000SH	S078PA1	73	6H767701	DRAG KNOB
AIRD 4000SH	S078PA1	68-72	6H777701	SPOOL ASSEMBLY (EXTRA SPOOL)